

# **Project Based Engineering Instrumentation With CircuitPython**

A Brief Textbook Presented to the  
Student Body of the University of South Alabama

Last Update: March 20, 2024  
**Copyright © Carlos José Montalvo**

# Current Edition

This manuscript was last updated on March 20, 2024. The latest edition can be found on [Github](#)

## Manuscript Changes

1. Original tutorials in Google Docs created
2. Tutorials moved to LaTeX on this Github
3. December 21st, 2021 - Updated links for manuscript and hardware
4. Tutorials purchased by [Tangibles that Teach](#)
5. May 30th, 2022 - Tangibles that teach went out of business and chapter began the move to Github
6. June 28th, 2022 - Work began on a Chromebook. Unfortunately the Figures folder is not back up on Git. As such a main\_latest.pdf has been created that's the latest full version. The main.pdf is the version created by the Chromebook so it has new chapters but none of the older chapters. Figure files are now backup on Git but only figures from the 'Voltage Potentiometer' are currently there.
7. July 2nd, 2022 - All figures backed up and latest manuscript completed
8. October 18th, 2022 - A pedometer lab has been added.
9. November 8th, 2022 - Edited the Servo and feedback control servo lab to be one big lab with 3 parts
10. January 8th, 2023 - Removed all mentions of Tangibles that Teach in the main body of the text.
11. February 6th, 2023 - Changed an assignment description for LEDs and push buttons
12. February 22nd, 2023 - Moved the Bluetooth module to be before the modules lab so this will end up being a few updates to make those projects more uniform. I also created a backup called Bluetooth original in case you wanted to go back to the other version.
13. June 16th, 2023 - Cleaned up the "changes needed" list and updated Method 3 with some new software updates.
14. August 9th, 2023 - Edited the preamble for assignments and made a note in the servo lab
15. September 5th, 2023 - Updated hyperlinks to show up on Microsoft Edge using underlines and different color text.
16. September 7th, 2023 - Fixed the TL;DR section
17. September 15th, 2023 - Updated a link in the DAQ lab
18. September 20th, 2023 - Made the modules installation section a standalone tex file
19. October 4th, 2023 - Added a new potentiometer photo
20. November 16th, 2023 - Edited the lists of parts
21. November 22nd, 2023 - Edited acceleration lab
22. December 5th, 2023 - Edited the troubleshooting section
23. January 12th, 2024 - Edited chapters 1 and 2
24. January 22nd, 2024 - Edited the bootloader update notes in the troubleshooting chapter
25. January 25th, 2024 - More edits to the bootloader notes
26. March 20th, 2024 - Added a preamble about where this textbook is located

## Changes Needed

1. Create circuit diagrams for each lesson.
2. More theory is needed in this book or direction to further reading for the students
3. Create a lesson on how each sensor works. The thermistor and pitot probe come to mind
4. The photo of the button lab could be better (i.e add labels to each item)
5. The circuit photo for the LSM6DS33 is not correct
6. Equations on thermistor need to be expanded
7. Equations relating voltage from photocell to Lux needs to be included
8. Example plots for light, sound, acceleration, etc needs to be expanded
9. Pendulum lab must be done in one of two ways. Either the pendulum is attached to a potentiometer or the CPX is mounted to the end of a string and data logged on board the CPX itself. The potentiometer is nice because you can record data with your laptop but the string idea is cool because you use the accelerometer. In either case you can make some really long pendulums
10. 3D printing a disc with holes on the outside to eventually mount to a shaft would be a really cool angular velocity sensor lab. Tangibles that teach could easily include a 3D printed disc that can mount to a pencil for ease of rotation. Could also include the CAD drawings so students can print more or even edit the design for better or worse performance.

11. Buying some load cells with the HMC converter and including them in the kit would add a whole lot different labs
12. Buying some magnetometers to measure magnetic field and do some sensor fusion would be neat. Could do roll, pitch and yaw calibration if we included a magnetometer.
13. Right now a lab just on roll and pitch estimation would be possible. Pendulum lab pretty much introduces them to this but could easily do an rc aircraft lab where they build an aircraft out of foam with an elevator and aileron so that the servos responds to roll and pitch change. There is a lab right now with just pitch but perhaps we could add roll to it.
14. Another cool project idea would be for the students to take temperature and light data on a cloudy day. Then have them infer if the amount of sunlight affected the temperature of the thermistor. They could plot the data with light on the x-axis and temperature on the y-axis and draw conclusions based on the plot they generate.
15. Could also have them take temperature and light data over the course of a whole day to plot sunrise and sunset and watch the ambient temperature rise and fall
16. For the aliasing lab, have the students sample as fast as possible and obtain the natural frequency of the system. Then have them sample at 1.0, 2.0 and 3.0 times the natural frequency they obtained. I originally picked 1,10 and 100 as arbitrary sampling frequencies and it would have been better to do 2,4 and 6.
17. One cool lab would be to take light data during sunset and watch light and temperature plummet.
18. **Add this lab on frequency for notes**

## Acknowledgements

The author, Dr. Carlos Montalvo would like to acknowledge a few key members who made this textbook possible. First and foremost I would like to thank Adafruit for their entire ecosystem of electronics, tutorials, blogs and forums. Much of what I have learned here to teach Instrumentation was from Adafruit and the Adafruit Learn system and specifically people like Lady Ada and John Park who have helped shape CircuitPython and the Circuit-Playground Express to what it is today. I would also like to thank Dr. Saami Yazdani for creating the blueprint for Instrumentation at my university by creating a laboratory environment for an otherwise totally theoretical course. His course was the foundation for this textbook and for that I thank him for showing the way. I'd like to also thank and acknowledge Tangibles that Teach for giving me the opportunity to morph this loose set of projects into a textbook that can be used for multiple universities and classrooms and of course help students learn and acquire knowledge through creating.

## About this textbook

This textbook has been designed with the student and faculty member in mind. First, this textbook goes hand in hand with Engineering Instrumentation taught at the undergraduate level at many universities. The course begins with simple plotting and moves into data analysis, calibration and more complex instrumentation techniques such as active filtering and aliasing. This course is designed to get students away from their pen and paper and build something that blinks and moves as well as learn to process real data that they themselves acquire. There is no theory in these projects. It is all applied using the project based learning method. Students will be tasked with downloading code, building circuitry, taking data all from the ground up. By the end of this course students will be well versed in the desktop version of Python while also the variant CircuitPython designed specifically for microelectronics from Adafruit. After this course students will be able to understand Instrumentation at the fundamental level as well as generate code that can be used in future projects and research to take and analyze data. Python is such a broad and useful language that it will be very beneficial for any undergraduate student to learn this language. To the professors using this textbook, 1 credit hour labs are often hard to work into a curriculum and “live” demonstrations in the classroom cost time and money that take away from other faculty duties. I’ve created this kit and textbook to be completely stand-alone. Students simply need to purchase the required materials and follow along with the lessons. These lessons can be picked apart and taught sequentially or individually on a schedule suited to the learning speed of the course. I hope whomever reads and learns from this textbook will walk away with an excitement to tinker, code and build future projects using microelectronics and programming.

# Contents

<b>1 Purchase Equipment</b>	<b>8</b>
1.1 Items needed for this Lab . . . . .	8
1.2 CircuitPython Kit . . . . .	8
1.3 Assignment . . . . .	9
<b>2 Download Python for Desktop</b>	<b>9</b>
2.1 Thonny . . . . .	9
2.2 Spyder . . . . .	9
2.3 Other Options . . . . .	10
2.4 Setting up your IDE . . . . .	10
2.5 Scripting . . . . .	11
2.6 Built-In Help Function and dir() . . . . .	12
2.7 Assignment . . . . .	14
<b>3 Getting Started with the CPX/CPB</b>	<b>15</b>
3.1 Parts List . . . . .	15
3.2 Setting up your Circuit Playground . . . . .	15
3.3 TL;DR . . . . .	24
3.4 Assignment . . . . .	24
<b>4 Troubleshooting Guide</b>	<b>25</b>
<b>5 External LEDs and Push Buttons</b>	<b>25</b>
5.1 Parts List . . . . .	25
5.2 Learning Objectives . . . . .	26
5.3 LED with no Code . . . . .	26
5.4 LED with a push button . . . . .	28
5.5 LED with code . . . . .	29
5.6 LED with CPX button . . . . .	30
5.7 Assignment . . . . .	33
<b>6 Using the CPX/CPB as a Data Acquisition System (DAQ)</b>	<b>34</b>
6.1 Parts List . . . . .	34
6.2 Learning Objectives . . . . .	34
6.3 Extra Help . . . . .	34
6.4 Getting Started . . . . .	34
6.5 Method 1 - Copying Serial Monitor Data . . . . .	37
6.6 Method 2 - Automatically Populate a Spreadsheet . . . . .	37
6.7 Method 3 - Logging Data Directly to on board memory . . . . .	40
6.8 Installing Modules . . . . .	41
6.9 Method 4 - Logging Data on a Cell Phone using Bluetooth (CPB Only) . . . . .	45
6.10 Plotting Logged Data . . . . .	45
6.11 Assignment . . . . .	46
<b>7 Bluetooth on the CircuitPlayground Bluefruit (CPB Only) - Method4?</b>	<b>47</b>
7.1 Parts List . . . . .	47
7.2 Learning Objectives . . . . .	47
7.3 Extra Help . . . . .	47
7.4 Installing Modules . . . . .	47
7.5 Getting Started . . . . .	47
7.6 Assignment . . . . .	54

<b>8 Measuring Voltage Across a Potentiometer</b>	<b>55</b>
8.1 Parts List . . . . .	55
8.2 Learning Objectives . . . . .	55
8.3 Getting Started . . . . .	55
8.4 Assignment . . . . .	58
<b>9 Wind Speed from Pitot Probe</b>	<b>59</b>
9.1 Parts List . . . . .	59
9.2 Learning Objectives . . . . .	59
9.3 Getting Started . . . . .	59
9.4 Assignment . . . . .	62
<b>10 Circuit Playground (CPX/CPB) Modules</b>	<b>63</b>
10.1 Parts List . . . . .	63
10.2 Learning Objectives . . . . .	63
10.3 Extra Help . . . . .	63
10.4 Getting Started . . . . .	63
10.5 Installing Modules . . . . .	63
10.6 Low Level Control . . . . .	63
10.6.1 Light . . . . .	63
10.6.2 Sound . . . . .	64
10.6.3 Temperature . . . . .	66
10.6.4 Accelerometer . . . . .	67
10.7 High Level Control . . . . .	69
10.8 Assignment . . . . .	70
<b>11 Integrating Acceleration</b>	<b>71</b>
11.1 Parts List . . . . .	71
11.2 Learning Objectives . . . . .	71
11.3 Getting Started . . . . .	71
11.4 Assignment . . . . .	73
<b>12 Building a Pedometer using an Accelerometer</b>	<b>74</b>
12.1 Parts List . . . . .	74
12.2 Learning Objectives . . . . .	74
12.3 Getting Started . . . . .	74
12.4 Gathering Accelerometer Data . . . . .	74
12.5 Computing Number of Steps: Post-Processing . . . . .	75
12.6 Computing Number of Steps: Online . . . . .	77
12.7 Assignment . . . . .	77
<b>13 Inertial Measurement Unit - Accelerometer, Rate Gyro, Magnetometer</b>	<b>79</b>
13.1 Parts List . . . . .	79
13.2 Learning Objectives . . . . .	79
13.3 Getting Started . . . . .	79
13.4 Assignment . . . . .	85
<b>14 Histograms and Normal Distribution of Photocell Readings</b>	<b>87</b>
14.1 Parts List . . . . .	87
14.2 Learning Objectives . . . . .	87
14.3 Getting Started . . . . .	87
14.4 Throwing Out Outliers . . . . .	90
14.5 Normal Distribution . . . . .	92
14.6 Assignment . . . . .	92
14.6.1 Part 1 . . . . .	92
14.6.2 Part 2 . . . . .	93

<b>15 Pulse Width Modulation (PWM), Servo Calibration (pulse = f(angle)) and Feedback Control</b>	<b>94</b>
15.1 Parts List . . . . .	94
15.2 Learning Objectives . . . . .	94
15.3 Getting Started . . . . .	94
15.4 Feedback Control . . . . .	97
15.5 Assignment . . . . .	100
15.5.1 Part 1 . . . . .	100
15.5.2 Part 2 . . . . .	101
15.5.3 Part 3 . . . . .	101
<b>16 Time Constant of a Thermistor</b>	<b>102</b>
16.1 Parts List . . . . .	102
16.2 Learning Objectives . . . . .	102
16.3 Getting Started . . . . .	102
16.4 Temperature Change Ideas . . . . .	102
16.5 Estimating Time Constant . . . . .	103
16.6 Assignment . . . . .	104
<b>17 Natural Frequency and Damping of a Second Order System and Issues with Aliasing</b>	<b>105</b>
17.1 Parts List . . . . .	105
17.2 Learning Objectives . . . . .	105
17.3 Getting Started . . . . .	105
17.4 Oscillatory Ideas . . . . .	105
17.5 Pendulum Example . . . . .	106
17.6 Aliasing . . . . .	108
17.7 Assignment . . . . .	110

# 1 Purchase Equipment

## 1.1 Items needed for this Lab


1. Laptop with internet connectivity
2. Credit/Debit Card to Purchase items

## 1.2 CircuitPython Kit

In this class you're going to build some circuits that will enhance your learning experience. Rather than just solving problems by hand you're going to take and analyze data. Over the summer of 2020, I began to work with Tangibles that Teach and at the time they bundled all components together. Unfortunately, that company has gone out of business and as such for the time being you must build the kit yourself. Here is a list of all the components in the kit

1. Circuit Playground Bluefruit or Express + Included USB Cable
2. Micro Servo
3. Potentiometer
4. Photocell
5. Two Resistors (330 Ohm and 1K Ohm)
6. Alligator Clips x3
7. External Battery Pack
8. AAA Batteries x3
9. Breadboard
10. Push Button
11. LEDs x2
12. LSM6DS33 + LIS3MDL - 9 DoF IMU

Below is also a photo of all the components listed above. When you get your kit familiarize yourself with all of the components. I created an [unboxing video on Youtube](#) for you to take a look.

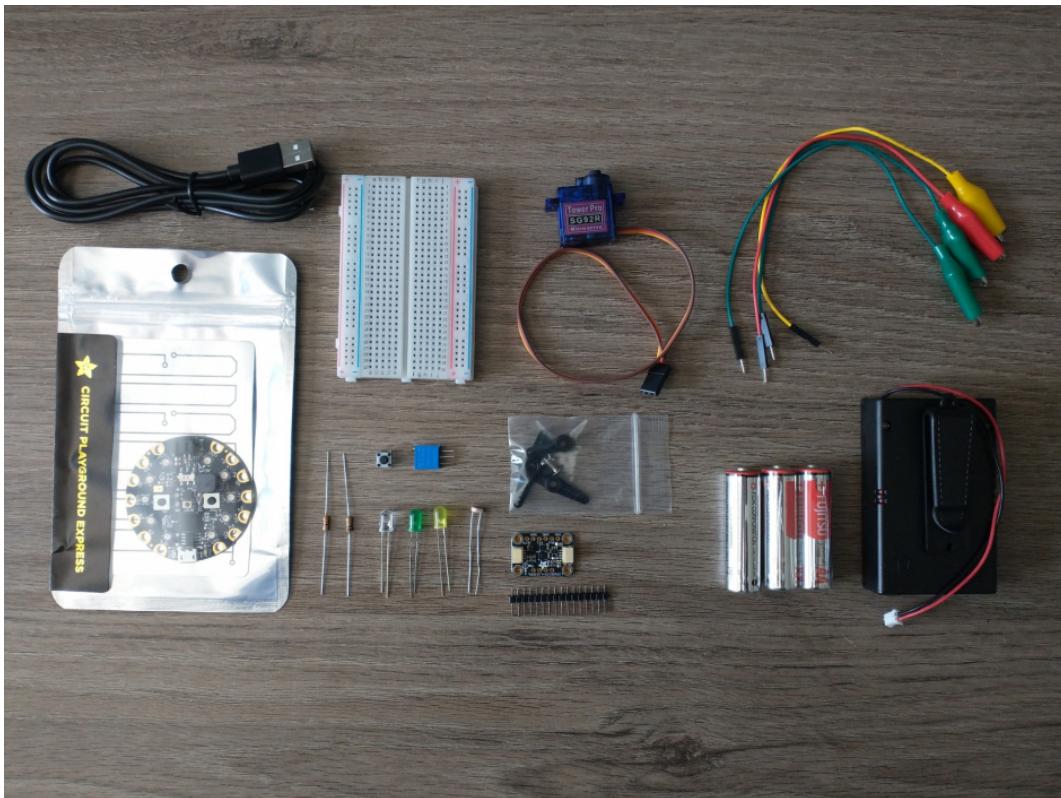

## 1.3 Assignment

Purchase the required materials and create a document with the following items:

1. A receipt of your purchases that shows you have purchased all items necessary for the semester (Typically students just have to buy the CPX/CPB and a USB cable with a data line) - 50%
2. When working in a group, list who you are working with (If you need help looking for group members, state that instead of your team members. Note that in classes over 30 you may not work alone) - 50%


## 2 Download Python for Desktop

As you learn Instrumentation throughout the semester, you will be tasked with creating computer programs on the Circuit Playground Express (CPX). The CPX itself has it's own RAM, CPU, HDD and many sensors. Your CPX is kind of like a mini computer! You can plug the CPX into your computer via USB and access the hard drive (HDD) from your own computer. When you program on the CPX you need to write programs on the CPX itself so that the mini computer can run the program you wrote. The CPX knows how to read multiple different languages but in this class we are going to write everything in the [Python](#) language which has been ported to the CPX and called [CircuitPython](#). Since we have to write everything in CircuitPython we need to first learn how to program some things in Python. You can easily download Python by itself but it's nice to get what's called an Integrated Development Environment (IDE). This way you can practice writing Python code on your computer while you wait for your purchases to arrive in the mail.

So which IDE can you download and which is recommended? I recommend two IDEs. They are listed below. I recommend getting either one. If you just Google “Python download” you will find a humongous list of editors (Scratch, Anaconda, Canopy, Eclipse, PyDev, etc). It’s easy to get lost when searching for something so broad. You’ve been warned.


### 2.1 Thonny

Thonny - <https://thonny.org/> - Youtube video on how to install

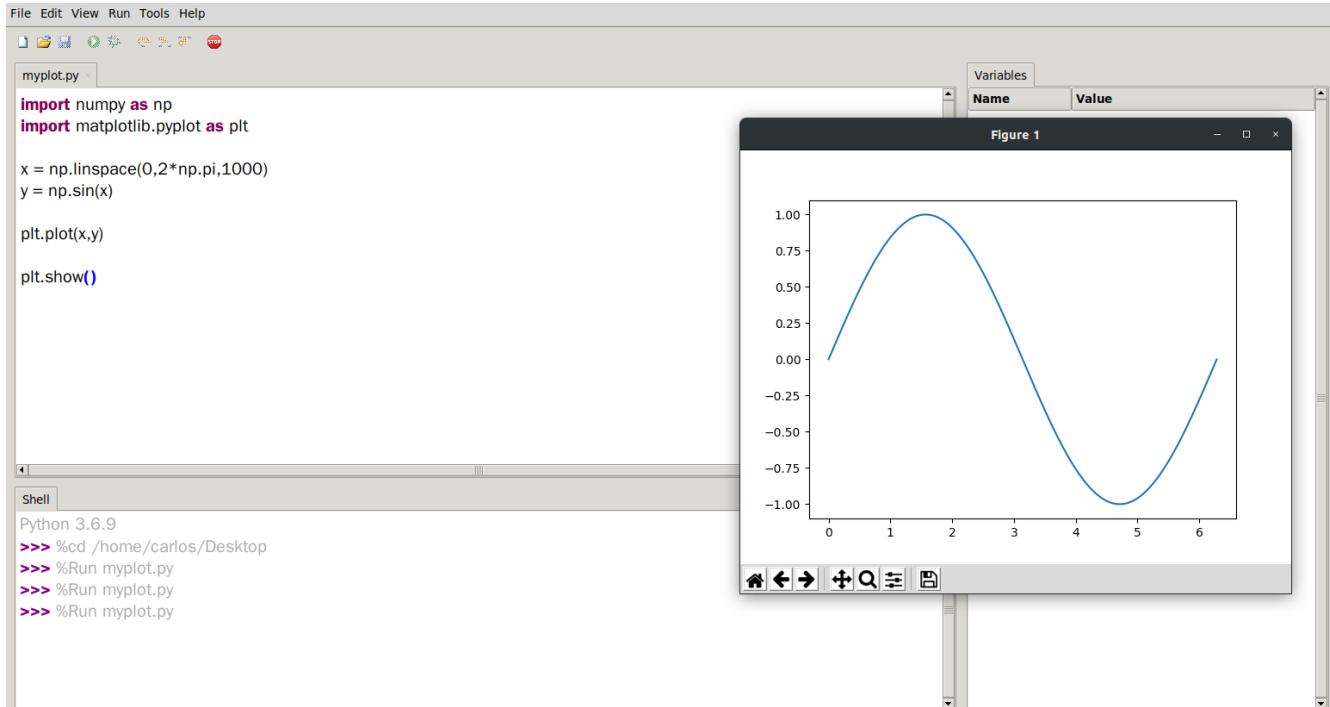

### 2.2 Spyder

Spyder - <https://www.spyder-ide.org/> - Youtube video on how to install

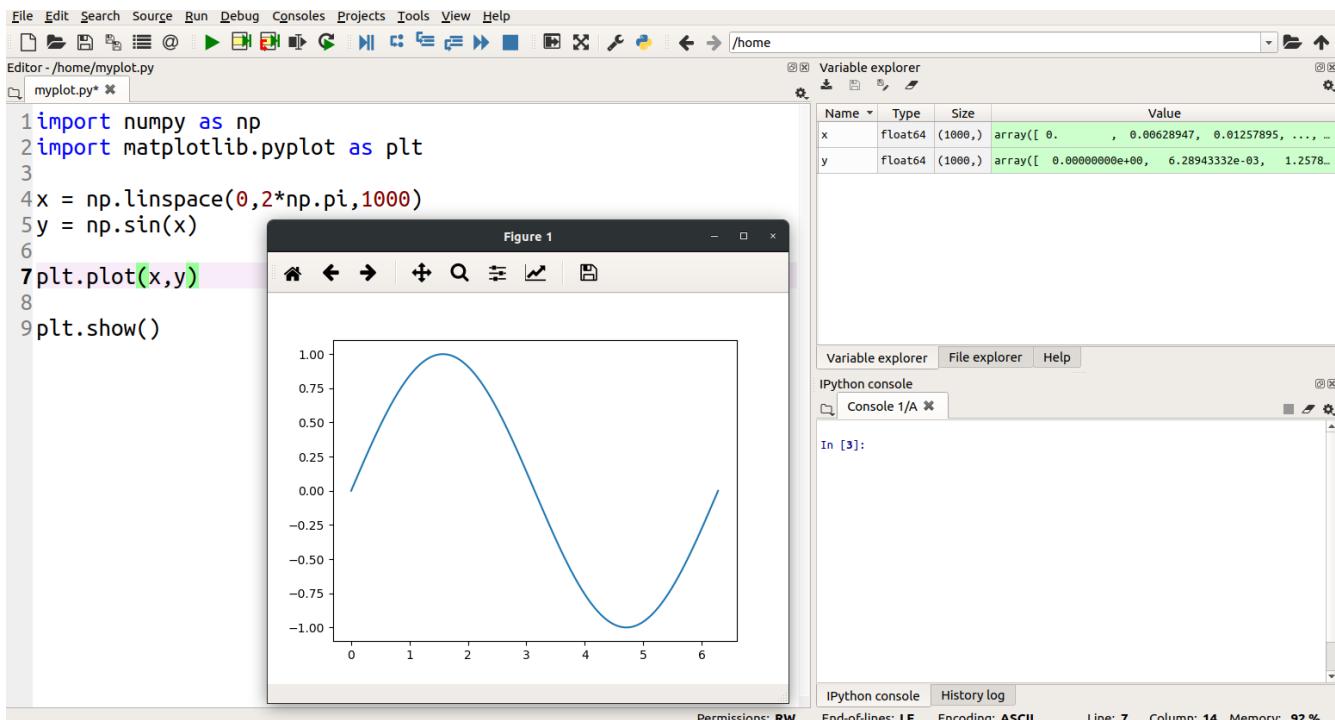


## 2.3 Other Options

It is possible to use [Google Colab](#) if you want to collaborate on Python projects or even get apps for your phone ([Pydroid](#) or [Pythonista](#) depending on Android or iPhone). You'll need to download 32 bit or 64 bit but which one? Well you need to figure out how many bits your computer has. This is a great thing to Google. Type the following: "do I have a 32 bit or 64 bit computer" into Google. I'm willing to bet you have a 64 bit computer but you may as well check. We'll learn about the difference between 32 and 64 bit computers when we get to the projects on Binary.

## 2.4 Setting up your IDE

Once you have Thonny or Spyder installed you need to install numpy and matplotlib which are modules within Python that allow us to do some extra things like numerical computation with Python (numpy) and Matlab style Plotting libraries (matplotlib). I explain how to install modules in my Youtube videos above; however, you need to head over to Tools>Manage Packages in Thonny. You can see in the image below I already have version 3.1.2 but I can upgrade to 3.2.2

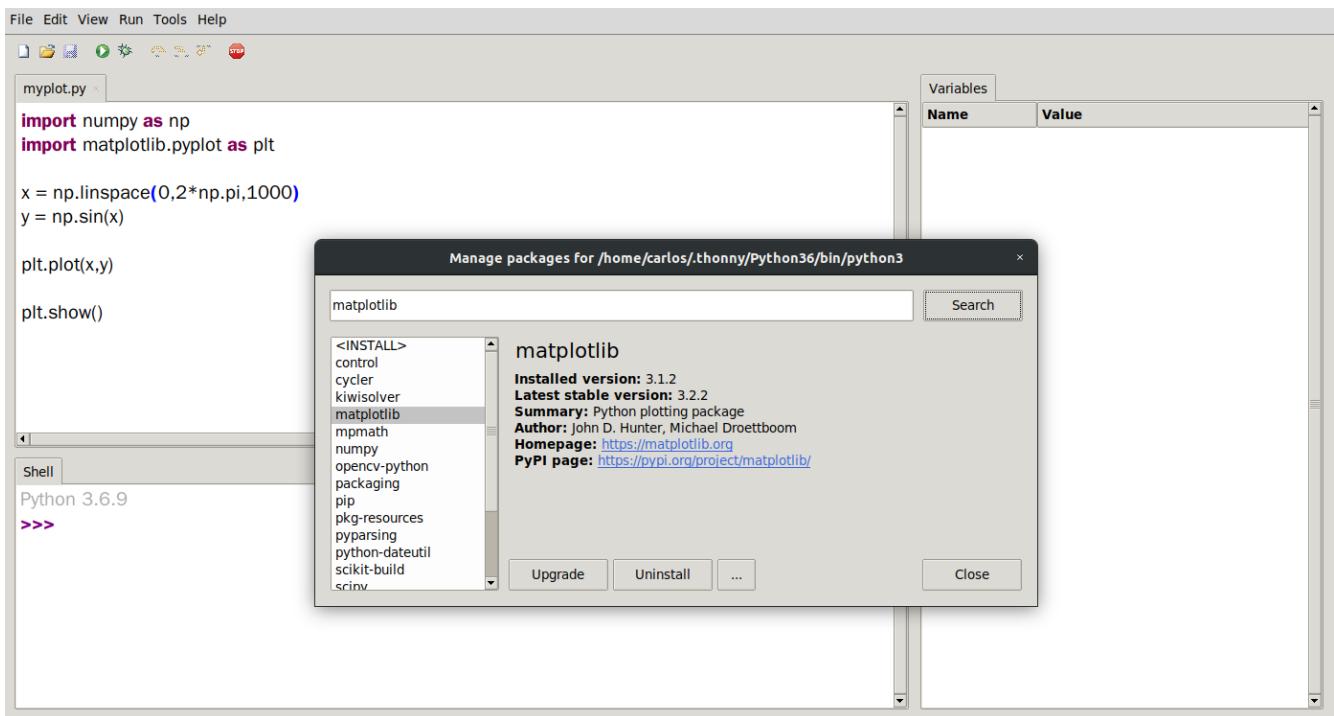


If numpy or matplotlib is not already included in Spyder then you need to type the following into the Python Console in the lower right hand corner of Spyder which is called the IPython console.

```
!pip install matplotlib
```

If that doesn't work try

```
!pip3 install matplotlib
```

You can see in the output example below that I already have matplotlib installed as it says "requirement already satisfied". Assuming you have a valid internet connection it will install the necessary module.

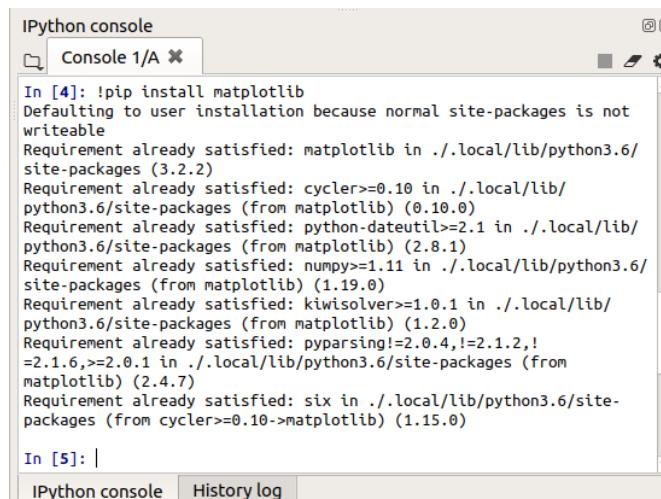

## 2.5 Scripting

Once you have numpy and matplotlib it's time to make a plot. I have a pretty [comprehensive youtube video](#) on how to plot in matplotlib but if you prefer text I will walk through a simple example.

```
import numpy as np
import matplotlib.pyplot as plt

x = np.linspace(0,2*np.pi,1000)
y = np.sin(x)

plt.plot(x,y)

plt.show()
```

The code above will plot a sine wave from 0 to 2pi. The two lines at the top are importing the numpy and matplotlib modules you installed earlier. When they are imported we give them shorter names so it's easier to reference them so numpy will now be called np and matplotlib.pyplot will be called plt. The next two lines then create a vector "x" from 0 to 2pi using 1000 data points. The next line then uses the sine function to create the vector "y". Finally "x" and "y" are plotted and the figure is instructed to pop up on your screen using the show() function.

## 2.6 Built-In Help Function and dir()

Running code will always create syntax errors. Typing your syntax error into Google will yield so many results you might get lost. Sometimes it helps to know how to learn things just from your computer. For example, type in the commands below in the IPython console or the Shell.

```
import numpy as np
dir(np)
```

```

>>> import numpy as np
>>> dir(np)
['ALLOW_THREADS', 'AxisError', 'BUFSIZE', 'CLIP', 'ComplexWarning', 'DataSource', 'ERR_CALL', 'ERR_DEFAULT', 'ERR_IGNORE', 'ERR_LOG', 'ERR_PRINT', 'ERR_RAISE', 'ERR_WARN', 'FLOATING_POINT_SUPPORT', 'FPE_DIVIDEBYZERO', 'FPE_INVALID', 'FPE_OVERFLOW', 'FPE_UNDERFLOW', 'False_', 'Inf', 'Infinity', 'MAXDIMS', 'MAY_SHARE_BOUNDS', 'MAY_SHARE_EXACT', 'MachAr', 'ModuleDeprecationWarning', 'NAN', 'NINF', 'NZERO', 'NaN', 'PINF', 'PZERO', 'RAISE', 'RankWarning', 'SHIFT_DIVIDEBYZERO', 'SHIFT_INVALID', 'SHIFT_OVERFLOW', 'SHIFT_UNDERFLOW', 'ScalarType', 'Tester', 'TooHardError', 'True_', 'UFUNC_BUFSIZE_DEFAULT', 'UFUNC_PYVALS_NAME', 'VisibleDeprecationWarning', 'WRAP', '_NoValue', '_UFUNC_API', '__NUMPY_SETUP__', '__all__', '__builtins__', '__cached__', '__config__', '__doc__', '__file__', '__git_revision__', '__loader__', '__name__', '__package__', '__path__', '__spec__', '__version__', '_add_newdoc_ufunc', '_distributor_init', '_globals', '_mat', '_pytesttester', 'abs', 'absolute', 'absolute_import', 'add', 'add_docstring', 'add_newdoc', 'add_newdoc_ufunc', 'alen', 'all', 'allclose', 'alltrue', 'amax', 'amin', 'angle', 'any', 'append', 'apply_along_axis', 'apply_over_axes', 'orange', 'arccos', 'arccosh', 'arcsin', 'arcsinh', 'arctan', 'arctan2', 'arctanh', 'argmax', 'argmin', 'argpartition', 'argsort', 'argwhere', 'around', 'array', 'array2string', 'array_equal', 'array_equiv', 'array_repr', 'array_split', 'array_str', 'asanyarray', 'asarray', 'asarray_chkfinite', 'ascontiguousarray', 'asfarray', 'asfortranarray', 'asmatrix', 'asscalar', 'atleast_1d', 'atleast_2d', 'atleast_3d', 'average', 'bartlett', 'base_repr', 'binary_repr', 'bincount', 'bitwise_and', 'bitwise_not', 'bitwise_or', 'bitwise_xor', 'blackman', 'block', 'bmat', 'bool', 'bool8', 'bool_', 'broadcast', 'broadcast_arrays', 'broadcast_to', 'busday_count', 'busday_offset', 'busdaycalendar', 'byte', 'byte_bounds', 'bytes0', 'bytes_', 'c_', 'can_cast', 'cast', 'cbrt', 'cdouble', 'ceil', 'cfloat', 'char', 'character', 'chararray', 'choose', 'clip', 'clongdouble', 'clongfloat', 'column_stack', 'common_typ

```

I included a photo of the output from the dir function. You'll notice there are a ton of functions in numpy. Every function in Python has a

`__doc__`

function. That's two underscores followed by "doc" and then another two underscores. If you're ever curious about what a particular function does you can just run the command below again in the IPython console or Shell. In this example I'm looking at what *arctan2* does.

```
print(np.arctan2.__doc__)
```

```
>>> print(np.arctan2.__doc__)
arctan2(x1, x2, /, out=None, *, where=True, casting='same_kind', order='K', dtype=None,
subok=True[, signature, extobj])
```

Element-wise arc tangent of  $\text{``x1/x2''}$  choosing the quadrant correctly.

The quadrant (i.e., branch) is chosen so that  $\text{``arctan2(x1, x2)''}$  is the signed angle in radians between the ray ending at the origin and passing through the point  $(1, 0)$ , and the ray ending at the origin and passing through the point  $(\text{'x2'}, \text{'x1'})$ . (Note the role reversal: the " $\text{'y'}$ -coordinate" is the first function parameter, the " $\text{'x'}$ -coordinate" is the second.) By IEEE convention, this function is defined for  $\text{'x2'} = +/-0$  and for either or both of  $\text{'x1'}$  and  $\text{'x2'} = +/-\infty$  (see Notes for specific values).

This function is not defined for complex-valued arguments; for the so-called argument of complex values, use `'angle'`.

#### Parameters

-----

`x1` : array\_like, real-valued  
 $\text{'y'}$ -coordinates.  
`x2` : array\_like, real-valued  
 $\text{'x'}$ -coordinates. If  $\text{``x1.shape != x2.shape''}$ , they must be broadcastable to a common shape (which becomes the shape of the output).  
`out` : ndarray, None, or tuple of ndarray and None, optional

You'll see that arctan2 takes 2 input arguments "x1" and "x2". I didn't include the entire output but if you continue to scroll through the output it will even include examples on how to use the function.

Another way to learn certain functions is by visiting the appropriate documentation. The [Numpy Docs](#) website for example has all the documentation you need for Numpy. Navigating that website you can find the same documentation for arctan2.

As a last resort you can always Google "how to compute the inverse tangent 2 function in Python". Note though that there is so much content out there on Google that you could easily get lost. Still, there's also so much information that the answers are out there for just about anything.

So you have three methods for finding out how to program in python. The `dir` and `__doc__` functions in Python, using the appropriate documentation online and of course Google. I'm lumping Youtube in with Google which is also another way to learn information although when I want to find information quickly I just use the documentation. It's the best in my opinion.

## 2.7 Assignment

Plot the following function:

$$T(t) = 60(1 - e^{-5t}) + 30 \quad (1)$$

Plot the function from 0 to 10 seconds and label the x axis 'Time (sec)' and the y-axis 'Temperature (F)'. Add a grid as well. You might need to look up how to do some of these things.

Once you've completed the project above, upload a PDF with all of the photos and text below included. My recommendation is for you to create a Word document and insert all the photos and text into the document. Then export the Word document to a PDF. For videos I suggest uploading the videos to Google Drive, turn on link sharing and include a link in your PDF. Note that all code must be included in the appendix or you'll be penalized 10%.

1. Screenshot of your Python IDE - 25%
2. A selfie of you watching one of my python youtube videos and upload that photo - 25%
3. Screenshot your code of the temperature plot above even if it doesn't work (Note that this is somewhat redundant but this is just to ensure students get ample partial credit) - 25%

4. If you got the code to work, hit the Floppy Disk button (SAVE) when your figure pops up and include that in your upload. No screenshots for your graph. - 25%

## 3 Getting Started with the CPX/CPB


### 3.1 Parts List

1. Laptop
2. CPX(or CPB)
3. USB Cable (with a data line. Not all USB cables have data lines)


### 3.2 Setting up your Circuit Playground

By now you hopefully have your Circuit Playground (CPX) and it's time to get your CPX up and running. A very in depth and detailed tutorial can be found on the [Adafruit Learn site](#). The text below is a summary of what you need to do to get the CPX up and running.


When you get your CPX and plug it into the computer via USB it actually won't run Python just yet. First you need to double click the reset button (the button in the center. It says RESET above the button) and put it into boot mode. All the neopixels (the ring lights on the CPX) will light up green.

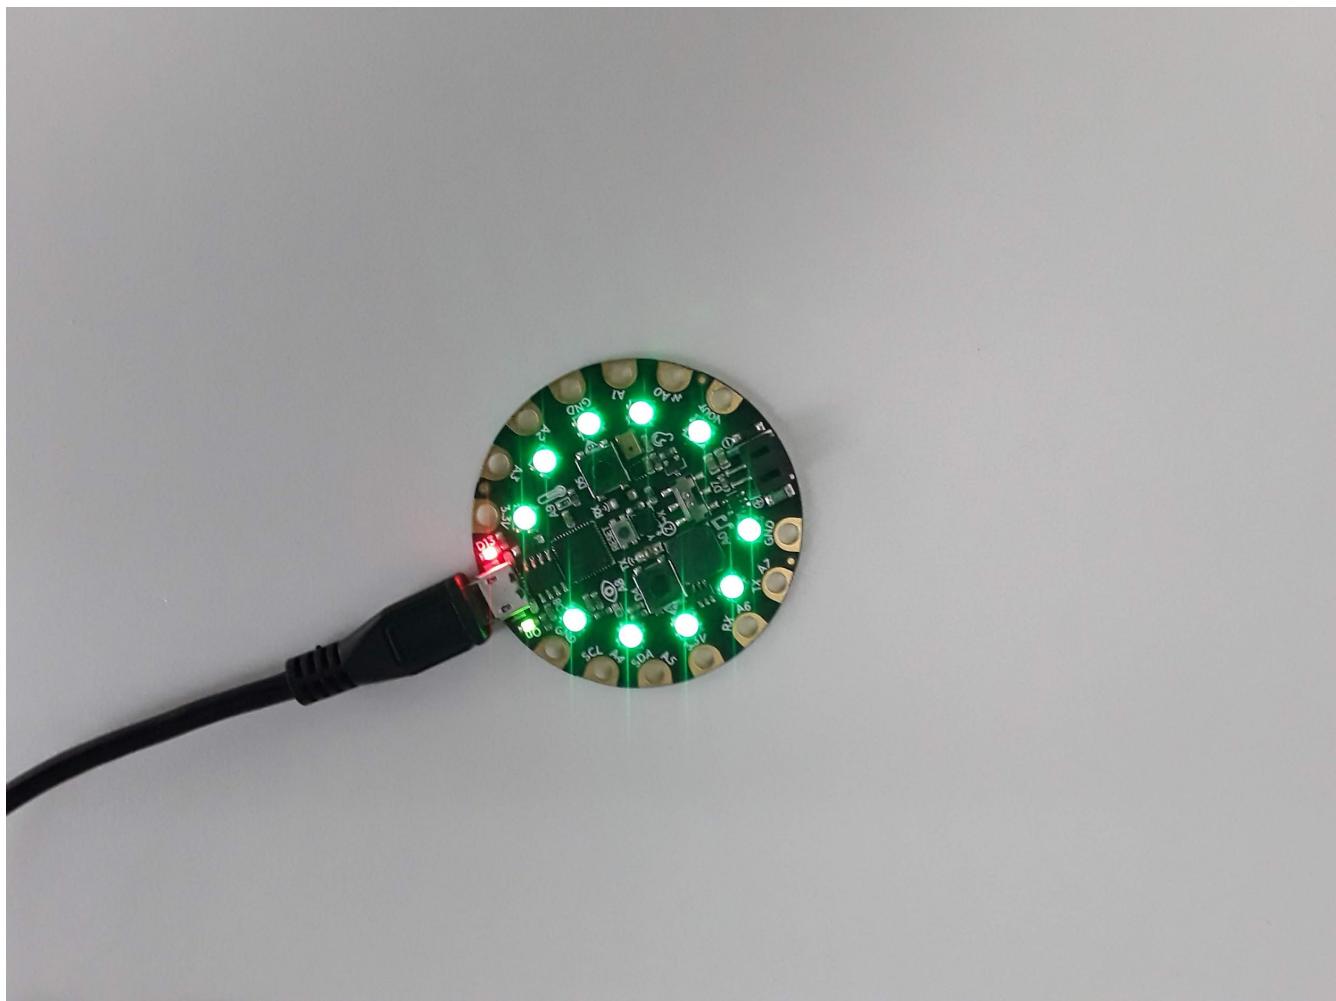

Something called CPLAYBOOT will pop up on your computer just like a USB stick or external harddrive. A couple files will be in there but it doesn't matter what they say right now.

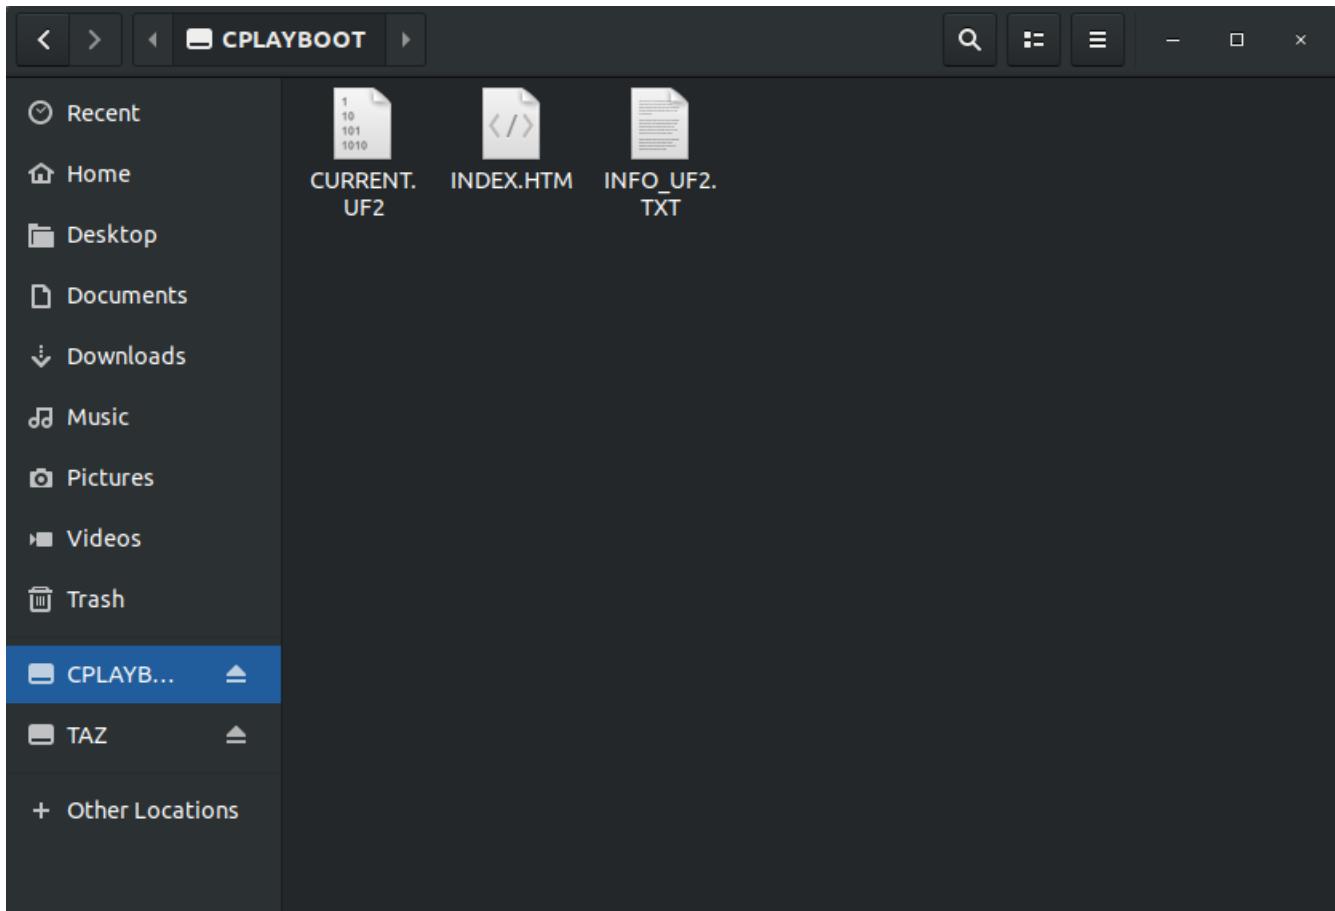

You then need to download what's called a [UF2 file](#) and transfer it onto the CPX. Note if you purchased a kit with the Bluefruit you need to download a [different UF2](#). Make sure you get the right one. Once the UF2 is downloaded you need to drag the UF2 over to the CPLAYBOOT drive on your computer. After a bit of time a USB drive called CIRCUITPY will pop up as a flash drive on your computer. The CPX is now like a USB stick with 2MB of storage. **Note that if you have an old bootloader you must update the [bootloader](#).**

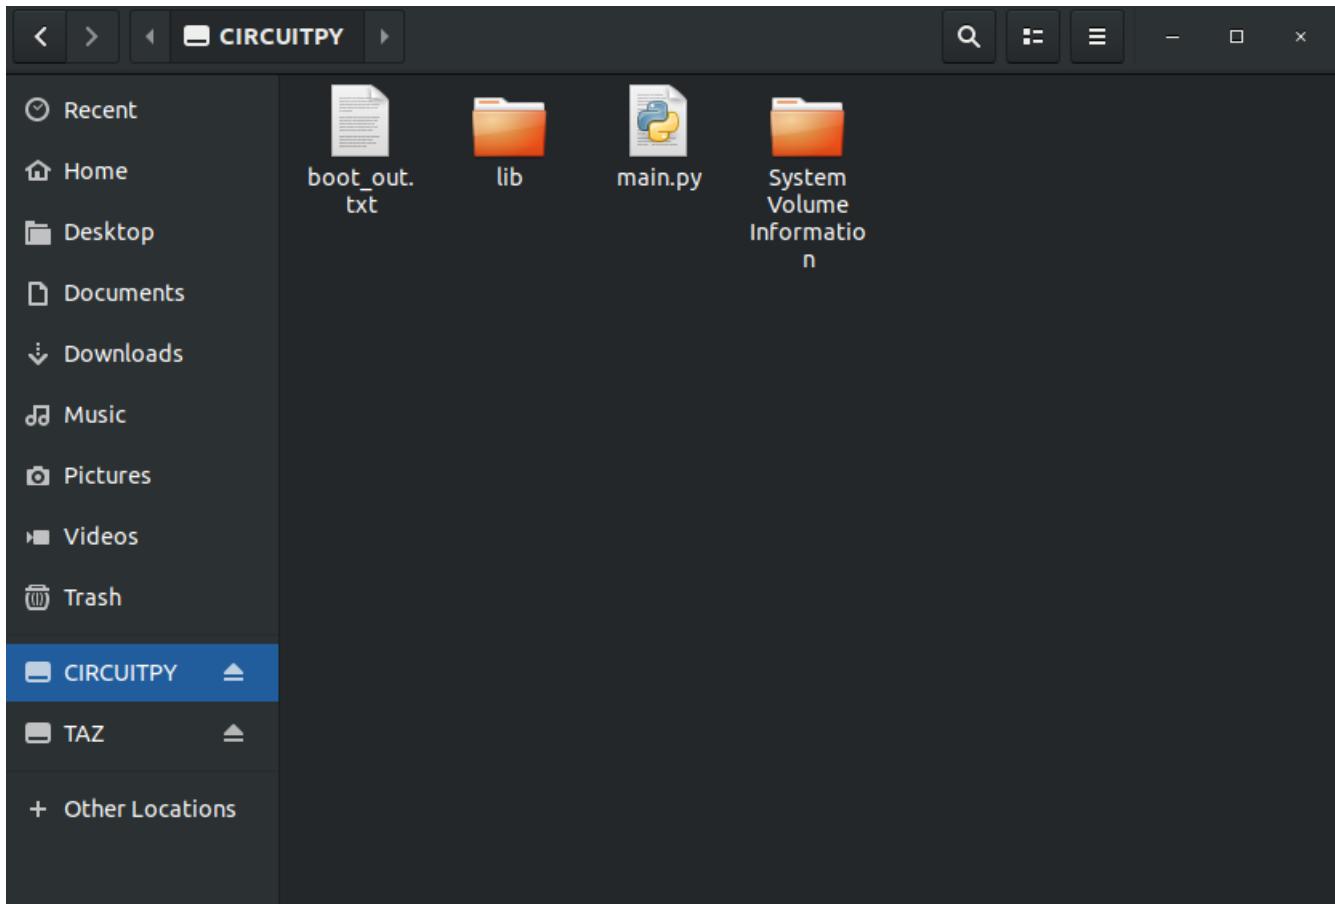


At this point the CPX is like a mini computer. If you put Python code on the “flash drive” it will run python code. Since I’ve done this before, there are a number of files already on my CPX. You may have some or none of these. The “boot\_out.txt” file will tell you the version of CircuitPython you have on the CPX. Mine says this:

Adafruit CircuitPython 5.3.0 on 2020-04-29; Adafruit CircuitPlayground Express with samd21g18


Which means I have CircuitPython version 5.3.0 last updated on April 29th, 2020. The CPX itself is using the [ATSAMD21G18](#) microprocessor. The folder lib is a folder with extra libraries that you may need to install later. The file main.py is the Python file that the CPX is currently running. **The CPX can store as many Python files as possible for a 2MB flash drive but it will only run ONE Python script at a time and that file must be named main.py** The folder *System\_Volume\_Information* is a file management folder that we will never use.

If you want the CPX to run code you simply need to edit the file *main.py* or if that file does not exist you just need to create it. You could just open Notepad or any other text app (Sublime, TexWrangler, Emacs, Vi, Nano, Gedit, Notepad++, Wordpad, VSCode, etc) but the CPX has a lot of debugging options and it is recommended to use a program called “[Mu](#)”. Mu is a good way to write and debug code on the CPX. Note that Mu is only used to program the CPX. If you want to run Python code on your laptop you need to use Thonny or Spyder (or whatever other IDE you downloaded). If you want to run Python code on your CPX you must use Mu. Once you’ve downloaded and installed Mu and open it up it will look like this (Note it’s possible the software gets updated from the time this book is published. As such be sure to select the Circuitpython Mode for board development).

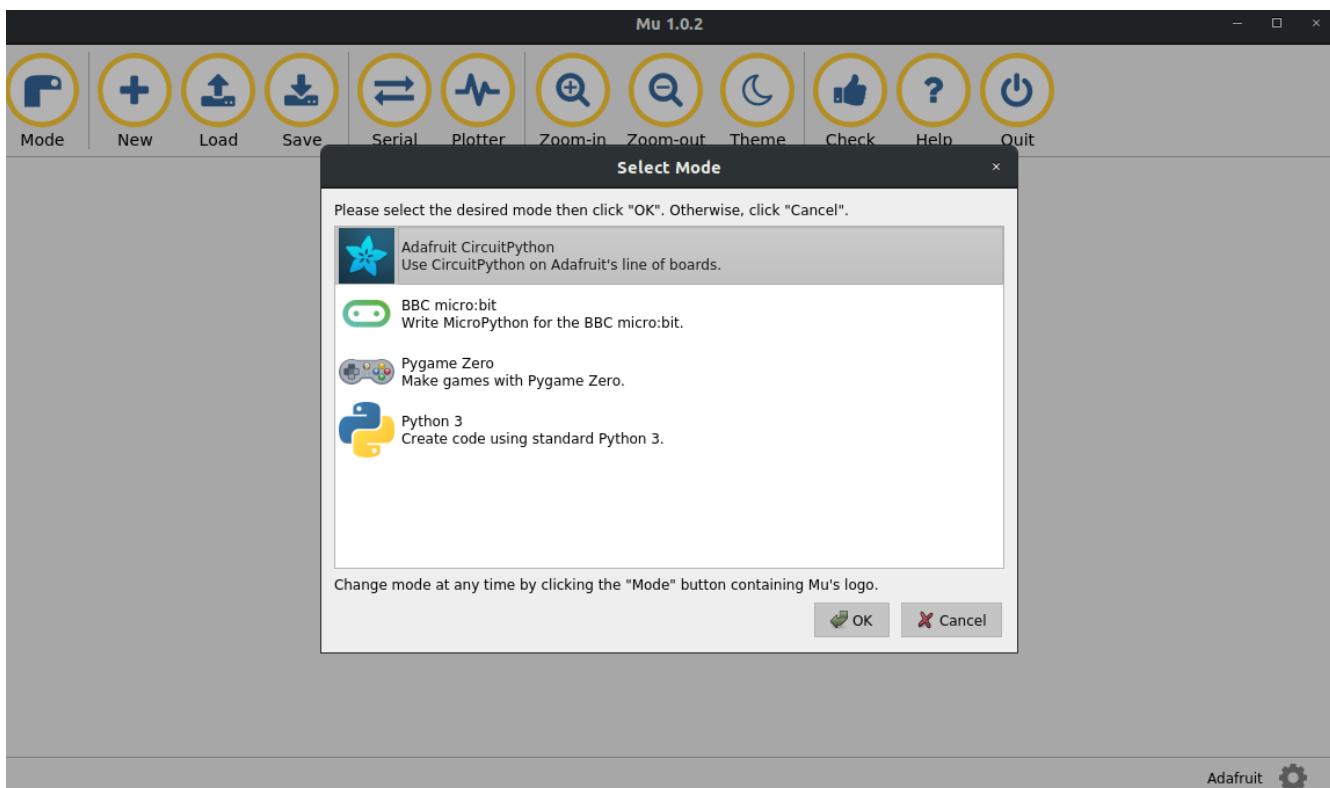

Make sure to select the “Adafruit CircuitPython” option. If the software has been updated and that option no longer exists, be sure to select the option that says Circuitpython for board development.

Alright, let’s start writing code! If you have a file called *main.py* on your CPX click the Load button and load *main.py* (make sure to load the *main.py* that is stored on your CPX and not somewhere else on your computer.) If a file *main.py* does not exist on your CPX simply click the New button and then Save the file as *main.py* (again make sure you save it to the CPX and not to your computer)

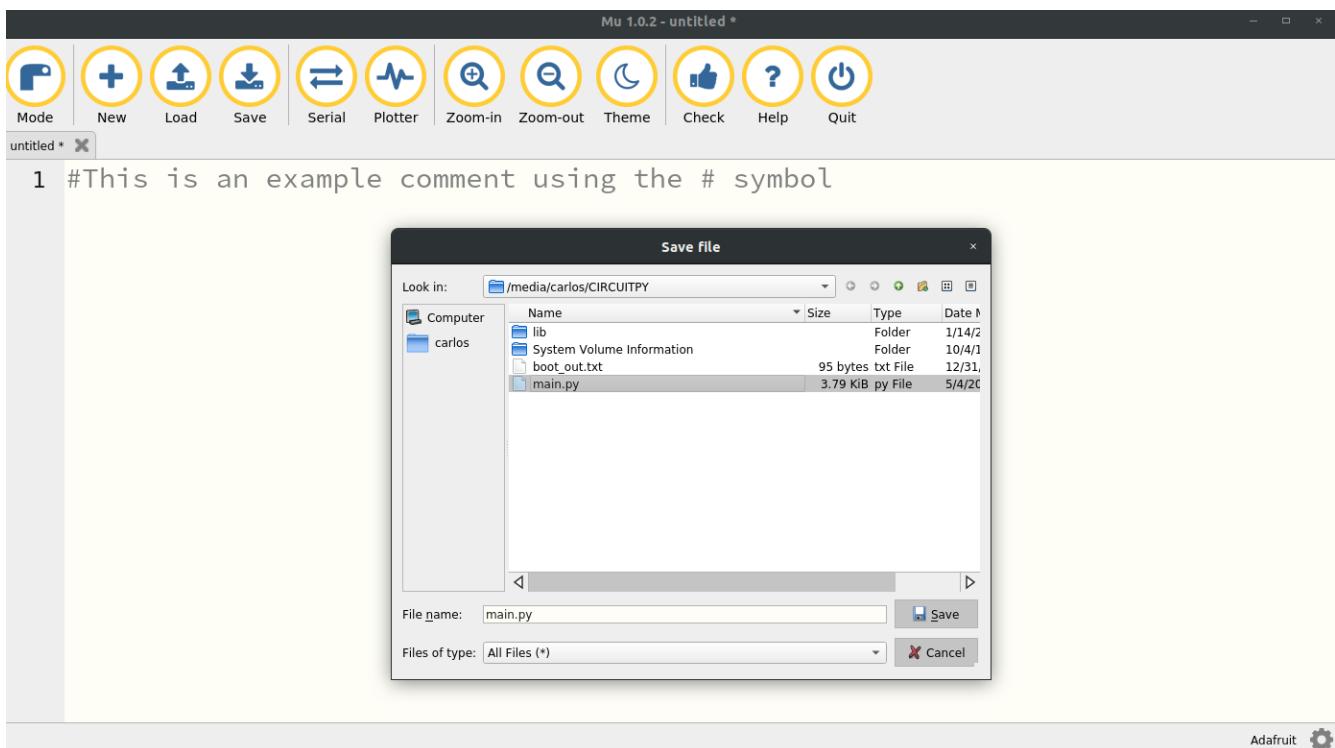

You'll see that I am accessing the CIRCUITPY drive and saving the file as main.py. The file itself is empty and just has a comment using the # symbol. At this point since the file is blank the CPX won't do anything.

*Now this is really important. Your CPX is a USB stick that can hold as many Python files as 2MB will allow but it can only run or execute one python script at a time. Furthermore it will only run two types of files. It will run code.py if it exists and if it can't find code.py it will run main.py If the CPX can't find main.py or code.y it will just not do anything. If you have two versions of main.py or a combination of main.py or code.py it will run one of them and not the other. Make sure you only have one version of main.py or code.y but not both! Some common things to check if your CPX isn't working.*


1. Make sure you're using Mu in the right Mode
2. Make sure main.py or code.py is on the CIRCUITPY drive and not somewhere on your computer.
3. Make sure you are editing the right file in Mu. Do you have two versions of main.py?
4. Are you editing using Thonny or Spyder?
5. Are you editing a file on your computer? Make sure you are writing to the CIRCUITPY drive.
6. Unplug the CPX, close Mu and try again.

So let's get the CPX to do something simple like blink an LED. I have an entire [Github](#) devoted to Microelectronics. Specifically I have a [folder with all of my Circuit Playground files](#). The easiest program to run is the [blink.py](#) script. I've attached a screenshot of the script below.

```
1 import board
2 import digitalio
3 import time
4
5 led = digitalio.DigitalInOut(board.D13)
6 led.direction = digitalio.Direction.OUTPUT
7
8 while True:
9     print(time.monotonic())
10    led.value = True
11    time.sleep(0.5)
12    led.value = False
13    time.sleep(0.5)
14    led.value = True
15    time.sleep(0.1)
16    led.value = False
17    time.sleep(0.1)
```

---

We will talk about what this code is doing later on. For now copy and paste these 17 or so lines of code and paste them into Mu specifically the *main.py* script. It will hopefully look like this.

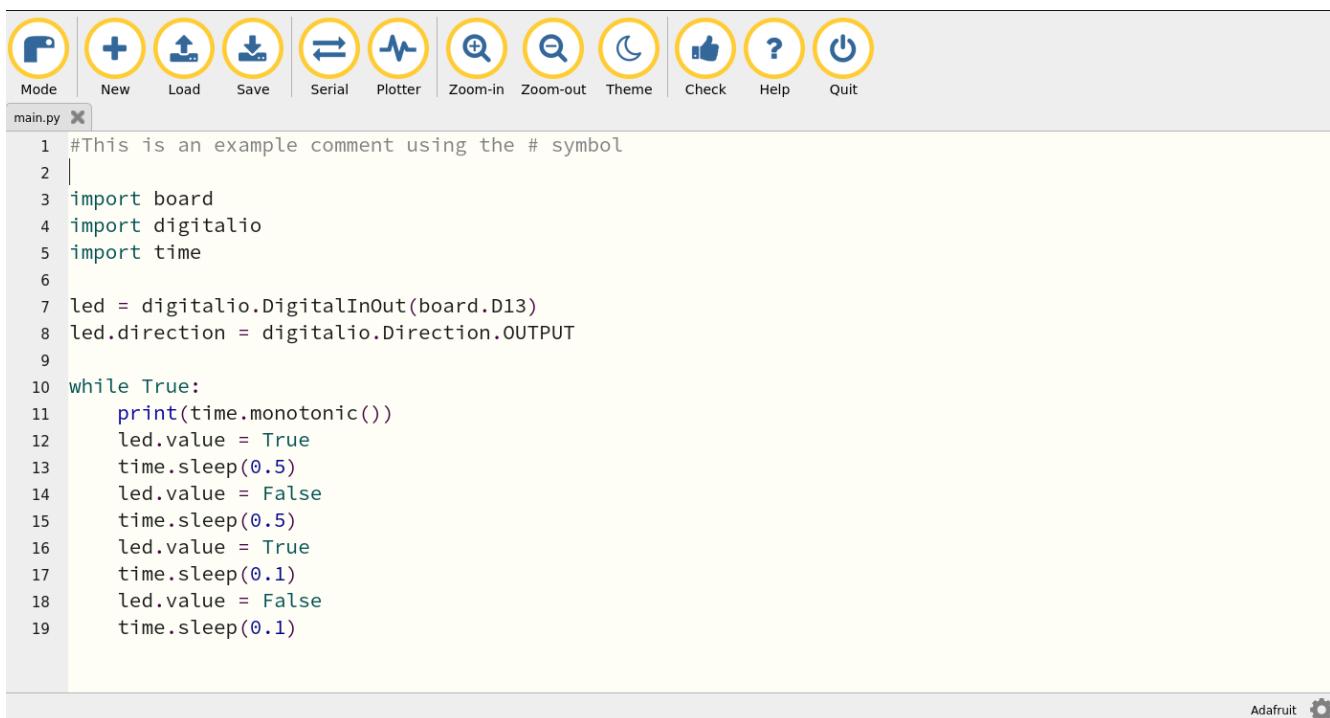

```

1 #This is an example comment using the # symbol
2
3 import board
4 import digitalio
5 import time
6
7 led = digitalio.DigitalInOut(board.D13)
8 led.direction = digitalio.Direction.OUTPUT
9
10 while True:
11     print(time.monotonic())
12     led.value = True
13     time.sleep(0.5)
14     led.value = False
15     time.sleep(0.5)
16     led.value = True
17     time.sleep(0.1)
18     led.value = False
19     time.sleep(0.1)

```

Adafruit 

Make sure to save. You can click *Zoom-In* and *Zoom-out* to zoom in and out to change the font size and see more of the output. If the blink code is working you will see a red led labeled D13 on the CPX blink back and forth. D13 stands for digital pin 13. You'll notice there are analog pins labeled A5 and A6 among other numbers. Let's talk about the code a bit more and explain why it's doing what it's doing. The three lines at the top of the code are *import* commands to import different modules just like we did for *numpy* and *matplotlib*. In this case the modules being imported are *board*, *digitalio* and *time*. The module *board* is used to import the layout of the CPX so we can access different pins on the CPX. The module *digitalio* stands for digital input output which means we are inputting and outputting digital signals. Since we can combine this module with the *board* module we will be able to output digital signals to different pins on the CPX board. Remember that PCB stands for printed circuit board so *board* implies we are accessing pins on the CPX PCB. Hopefully that makes sense. The final module we are importing is *time* which acts just like the *time* module on your desktop computer. It will let us access the CPX's internal clock.

Moving along, lines 7 and 8 create an LED object using the *board* module and *digitalio*. It's a long line of code that basically says, create a variable called *led* that lets us output a digital signal to pin D13. We also set the direction of the LED to output since we only want to write to the LED.

Lines 10 through 19 kick off an infinite loop that never ends. The line that says *while True:* means loop while *True*. Well *True* is always true which means it will loop forever. The colon at the end of the line tells Python that the loop condition statement ends and to begin looping from 11 through 19.

Line 11 specifically says *print(time.monotonic())*. First the *print()* function is used to print things so that you and I can see it. Rather than just seeing a blinking LED we want to see the time printed. The *time.monotonic()* is using the module *time* which we imported and using a function from that module called *monotonic()* which calls the internal clock of the CPX. So how do you see the output from the print statement? Hit the *Serial* button on Mu and you will hopefully see some output. Here's what it looks like on my machine.

Mu 1.0.2 - main.py

```

Mode New Load Save Serial Plotter Zoom-in Zoom-out Theme Check Help Quit
main.py ✘
3 import board
4 import digitalio
5 import time
6
7 led = digitalio.DigitalInOut(board.D13)
8 led.direction = digitalio.Direction.OUTPUT
9
10 while True:
11     print(time.monotonic())
12     led.value = True
13     time.sleep(0.5)
14     led.value = False
15     time.sleep(0.5)
16     led.value = True
17     time.sleep(0.1)
18     led.value = False
19     time.sleep(0.1)

Adafruit CircuitPython REPL
4742.87
4744.06
4745.27

```

Adafruit

In this case you can see the time printed every time it goes through the loop. You may even see an error. This *Serial* button is great for debugging because it will tell you the error in your code. For example, in the picture below I have an error in my code and the *Serial* output is letting me know.

Mu 1.0.2 - main.py

```

Mode New Load Save Serial Plotter Zoom-in Zoom-out Theme Check Help Quit
main.py ✘
1 #This is an example comment using the # symbol
2
3 import board
4 import digitalio
5 import timed
6
7 led = digitalio.DigitalInOut(board.D13)
8 led.direction = digitalio.Direction.OUTPUT
9
10 while True:
11     print(time.monotonic())
12     led.value = True
13     time.sleep(0.5)
14     led.value = False
15     time.sleep(0.5)
16     led.value = True
17     time.sleep(0.1)

Adafruit CircuitPython REPL
main.py output:
Traceback (most recent call last):
  File "main.py", line 5, in <module>
ImportError: no module named 'timed'

Press any key to enter the REPL. Use CTRL-D to reload.

```


Adafruit

In this case I have an error on line 5. It's saying there is no module named *timed*. The reason that module doesn't exist is because the module is actually *time* not *timed*. You can use the *Serial* monitor to check on your

program and see what errors you may have. Ok so there are two more lines of code to discuss. They are `led.value = True` and `time.sleep(0.5)`.

These lines of code are repeated throughout the while loop and do two things. First, the `led.value` either sets the value of the LED to True which turns the light on or False which turns the light off. The LED is digital which means the signal can either be on or off. There's no in between for digital signals. The `time.sleep()` function tells the CPX to pause for half a second. You can change the number in the parentheses if you want to change length of time the code pauses. Note that the CPX completely pauses. That is no code runs during a sleep.

If you've gotten the LED to blink you're all set for this lab. However, I'd like to you learn a few more things about documentation. Just like Python on your desktop you can lookup the documentation on the CPX itself. For example, I've added a print statement to print the directory of time.

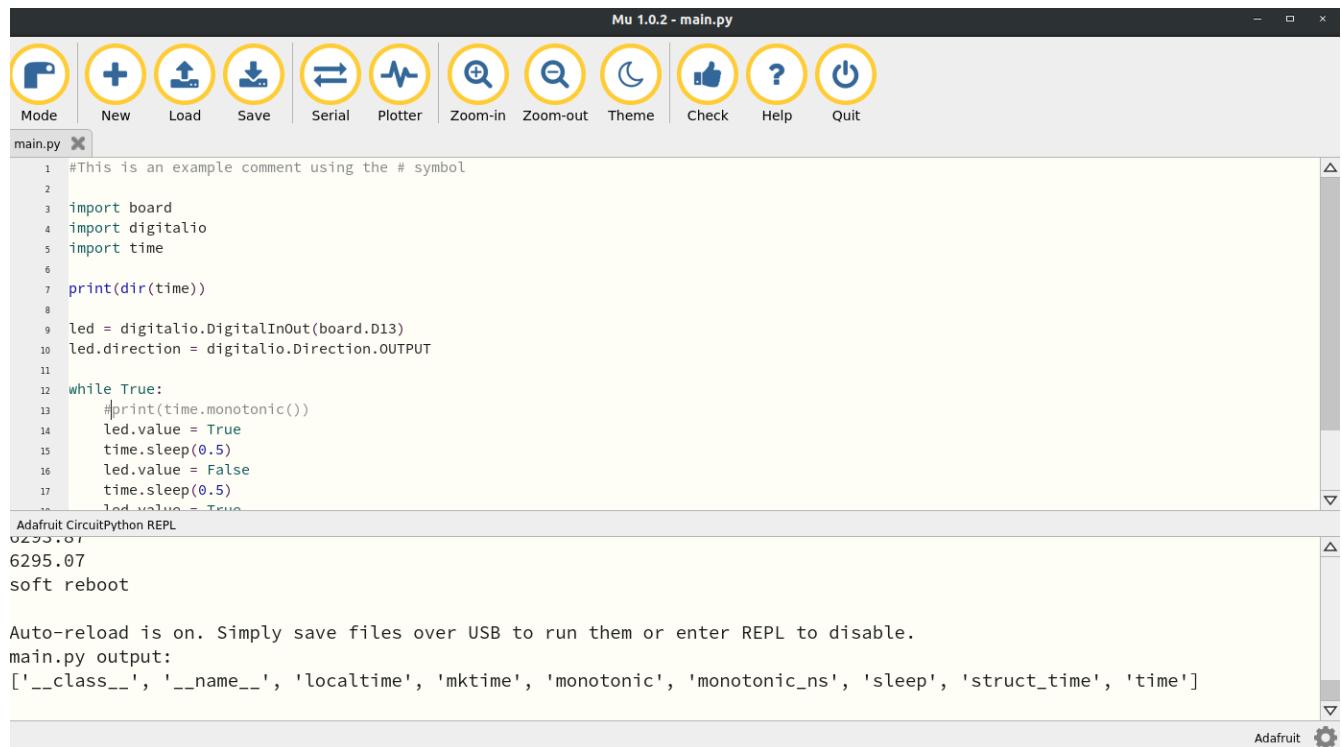

```
Mu 1.0.2 - main.py
Mode New Load Save Serial Plotter Zoom-in Zoom-out Theme Check Help Quit
main.py X
1 #This is an example comment using the # symbol
2
3 import board
4 import digitalio
5 import time
6
7 print(dir(time))
8
9 led = digitalio.DigitalInOut(board.D13)
10 led.direction = digitalio.Direction.OUTPUT
11
12 while True:
13     #print(time.monotonic())
14     led.value = True
15     time.sleep(0.5)
16     led.value = False
17     time.sleep(0.5)
18     led.value = True
Adafruit CircuitPython REPL
02:55:01
6295.07
soft reboot

Auto-reload is on. Simply save files over USB to run them or enter REPL to disable.
main.py output:
['__class__', '__name__', 'localtime', 'mktime', 'monotonic', 'monotonic_ns', 'sleep', 'struct_time', 'time']

Adafruit
```

In this case I've added `print(dir(time))` to line 7. The output shows that the `time` module has 9 functions including `monotonic()`. Unfortunately CircuitPython does not have `__doc__` functions built in which means if you want to learn about a specific function, you need to visit the [documentation for CircuitPython](#). Here's the [specific documentation for the time module](#). A lot of [example code from the Adafruit Learning System is also on Github](#).

Finally, in order to keep practicing using Python on your desktop I want you to modify the code above to run on your desktop computer. You're going to have to modify a few things. First, make sure to open Thonny or Spyder depending on which version of Python IDE you downloaded. Then, only import the `time` module. All the other modules don't exist on your desktop. Also, get rid of all the lines of code that blink the LED. We just want to print time in a while loop. Finally, the time module on your desktop uses a function called `time.time()` (unless you have Python3 installed) so when you print time make sure to use that module instead. Again visit the [documentation for time for Python if you want to learn more](#). Thonny by default will load Python version 3 but it's possible you may have Python version 2 so make sure you look up the documentation for the appropriate version of Python. After searching through the documentation you can use a function called `asctime()` on your desktop. This is the output I get in Thonny when I add a sleep of 1 second. The exercise for you is to do something similar.

>>> %Run myprint.py

Thu	Jul	2	10:42:37	2020
Thu	Jul	2	10:42:38	2020
Thu	Jul	2	10:42:39	2020
Thu	Jul	2	10:42:40	2020
Thu	Jul	2	10:42:41	2020
Thu	Jul	2	10:42:42	2020
Thu	Jul	2	10:42:43	2020
Thu	Jul	2	10:42:44	2020

### 3.3 TL;DR

1. Plug in your CPX and double tap it to go into reset mode. CPLAYBOOT will mount to your computer. (Some CPXes you need to hold the button down instead of double tap).
2. Download the [UF2 file](#).
3. Drag the UF2 file to your CPLAYBOOT drive. After a few seconds CIRCUITPY will mount.
4. You need to then download [Mu](#)
5. Open Mu and make sure to select the mode Adafruit CircuitPython (or just CircuitPython if you have a new version)
6. Open main.py (or code.py) in Mu from the CIRCUITPY drive in Mu. (It's possible you have code.py on your drive instead of main.py which is fine. Just open one or the other)
7. Copy the blink.py script into main.py (or code.py)
8. Once you have the script running, modify the script to run on your Desktop using Spyder or Thonny

There is an accompanying [youtube video to help you see me perform the 8 steps above](#).

### 3.4 Assignment

Once you've completed the project above, upload a PDF with all of the photos and text below included. My recommendation is for you to create a Word document and insert all the photos and text into the document. Then export the Word document to a PDF. For videos I suggest uploading the videos to Google Drive, turn on link sharing and include a link in your PDF. Note that all code must be included in the appendix or you'll be penalized 10%.

1. Include a screenshot of your computer showing the CIRCUITPY drive on your computer - 25%

2. Copy and paste your blink.py code and write a paragraph explaining any changes you made to get it to work - 25%
3. Take a video of you and your CPX blinking the LED. State your name, wave at the camera and show the CPX blinking (You must use software like OBS studio which records your screen and yourself. No cell phone videos allowed). - 25%
4. Modify the blink.py code to run on your desktop computer in Spyder or Thonny. Copy and paste your desktop version of the code and screenshot the output. Include the code and the output in your submission - 25%

## 4 Troubleshooting Guide

**Is your CPX/CPB broken or not running code? Read below.**

1. Your CPX is a USB stick that can hold as many Python files as 2MB will allow but it can only run or execute one python script at a time. It will look for code.py and then main.py and that's it.
2. Make sure you're using Mu in the right Mode (CircuitPython)
3. Make sure main.py or code.py is on the CIRCUITPY drive and not somewhere on your computer.
4. Make sure you are editing the right file in Mu. Do you have two versions of main.py or perhaps main.py and code.py?
5. Do you have boot.py on there when you don't need it?
6. Are you editing using Thonny or Spyder? You're supposed to use Mu.
7. Are you editing a file on your computer? Make sure you are writing to the CIRCUITPY drive.
8. Do you have the right modules in your *lib* folder?
9. Unplug the CPX, close Mu and try again.
10. First, try and reset the CPX to CPLAYBOOT and reflash the UF2 to see if that fixes it.
11. If you have a linux computer you can “sudo screen /dev/ttyACM0” and then run “import storage” and then “storage.erase\_filesystem()”
12. If that doesn't work sometimes you just need to completely erase the CIRCUITPY drive so head over to this [troubleshooting guide](#) and follow some of the steps they tell you.
13. As a last resort you can try to download these UF2s and hopefully it will fix all errors and mistakes - **CPX, CPB**
14. If you're having an issue with an old bootloader be sure to update the [bootloader for the CPB](#) or alternatively the [bootloader for the CPX](#). At the time of this writing here is the command you need to upload the new bootloader the CPB. If you have version 0.4.0 or later you can use the [UF2 method](#).

```
adafruit-nrfutil --verbose dfu serial --package
circuitplayground_nrf52840_bootloader-0.8.2_s140_6.1.1.zip -p /dev/ttyACM0
-b 115200 --singlebank --touch 1200
```

For the CPX there is a UF2 that you transfer over to the CPLAYBOOT drive. At the time of this writing the version you're looking for is *update-bootloader-circuitplay\_m0-v3.15.0.uf2*.

15. Are you running out of memory? To figure out how much RAM you have on your CPX/CPB you need to *import gc* then run *gc.collect()* and then *print(gc.mem\_free())*. At the time of this writing, the CPX has about 17 KB of RAM and the CPB has around 140 KB of RAM.

## 5 External LEDs and Push Buttons

### 5.1 Parts List

1. Laptop
2. CPX + USB Cable
3. 2 Alligator clips
4. Push Button
5. Breadboard
6. LED (Light Emitting Diode) (x3 in case you fry some)
7. Resistor (300 to 1000 Ohms)

## 5.2 Learning Objectives

1. The VOUT and 3.3V pin are always "ON" even when code is not running on the CPX. So long as your CPX is plugged in via USB or a Lipo Battery
2. LED are Light Emitting **Diodes** which means current only flows in one direction
3. LEDs need resistors in series otherwise they will get too hot and burn up
4. Breadboard pinout diagrams
5. Analog pins can be controlled by simply using the digitalio module
6. LEDs can be hooked up to analog pins and set to blink by changing the board pin

In this project we're going to use the same blink code as before but modify it to blink an external LED. The purpose of this lab is to familiarize yourself with the pins on the CPX and create a simple circuit using the 5V pin on the CPX and one of the Analog pins. Your laptop has a battery with something between 10 to 20V. There are DC to DC converters in your laptop that provide 5V to your USB ports. These USB ports can be used to power your CPX as you have done in the past few labs.

If you purchased the optional **battery pack** you can also power the CPX using 3 AA batteries. These batteries nominally have 1.5 V but fully charged it's actually something like 1.8 V. So 1.8 times 3 is 5.4V which is enough to power the CPX. If you have the battery pack and some AA batteries, give it a try. If you still have the blink code from the last project on board you'll see the D13 LED blink as before. You won't be able to see the serial print() output as before but that code will be running which is why D13 is blinking. **I have noticed that some of the battery packs have power and ground wires swapped. If the battery pack doesn't work it may be because those two wires are backwards.**


The CPX itself uses 3.3V logic which means when it converts numbers to binary a 0 (False) represents 0 volts and a 1 (True) represents 3.3V. The CPX has ports that are labeled various things. GND stands for ground and you need to hook the negative end of your circuit to this and it also has VOUT which supplies 5V to any circuit you build. Hook the positive end of your circuit to the VOUT pin. There is also a port labeled 3.3V and obviously that outputs 3.3V

You're going to need to use a breadboard so if you're not familiar with how breadboards work I would recommend watching this [video on how breadboards work](#). Your lab today specifically involves an external LED. You can read about [LEDs](#) more online if you wish. **Remember that the long leg of the LED is the positive end and the short leg is the negative end.** The task today is to wire an LED up to the CPX in the following ways


**Whenever you modify a circuit on the breadboard, always be sure to remove power from the CPX. You can damage multiple components if you're not careful.**

## 5.3 LED with no Code

For this part we are going to light up the LED without the use of any code on the CPX. First, wire up the circuit with the positive end connected to 5V. This is how my circuit looks. Make sure to use a resistor between 300 and 1000 Ohms. An LED does not have that much internal resistance so you need a resistor in series with an LED to reduce the amount of current flowing through the LED or the entire LED will fry. If you use a resistor that has too much impedance the LED just won't turn on because the voltage/current through the LED will be below the activation voltage of the circuit.

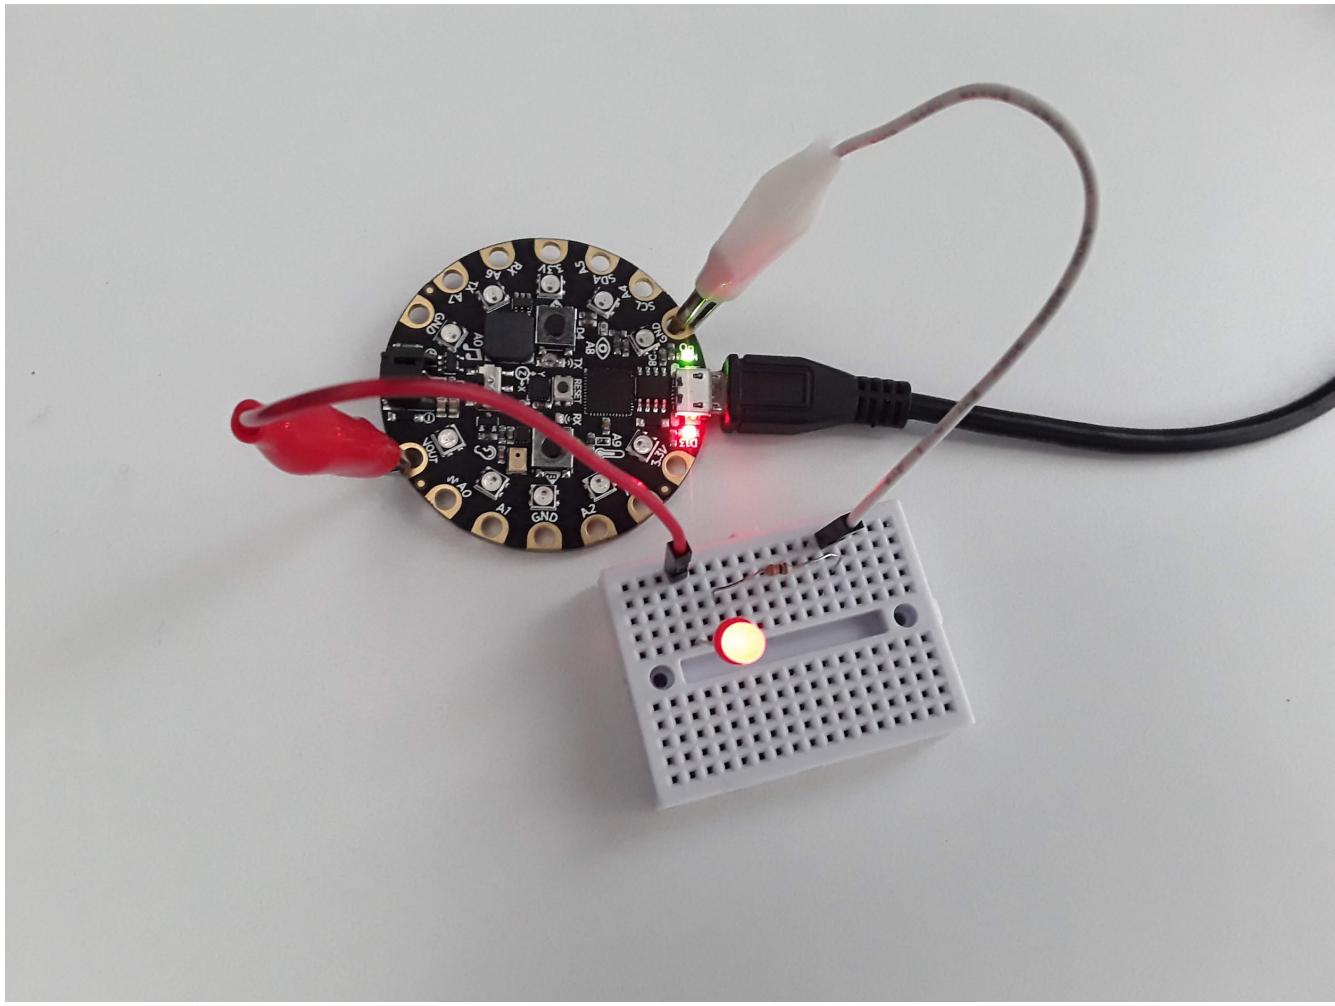


Once you have that circuit working, wire up the circuit again with the 3.3V output. Do you notice anything different when you hook up the circuit with different pins? Here's my circuit. Do you notice something different about the intensity of the LED? Why is it different?

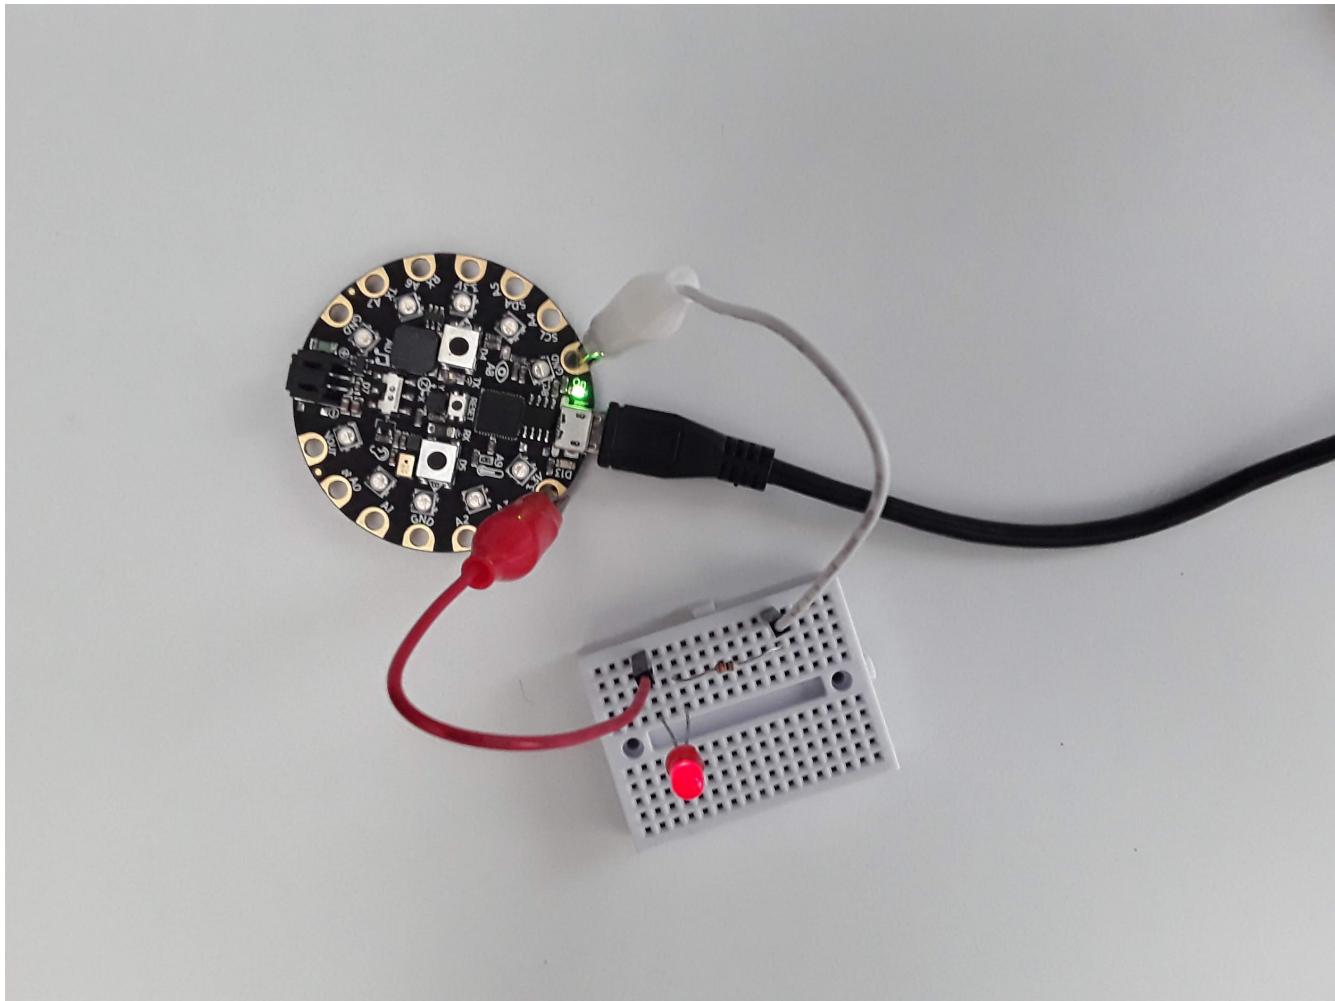


## 5.4 LED with a push button

Now that we understand breadboards a bit, we're now going to manually blink the LED using a push button placed onto the breadboard and have it act like a switch. Therefore, when the button is pressed, the LED will turn on and when the button is released the LED will turn off. The button just acts like a wire so you can plug in the button anywhere in the circuit.

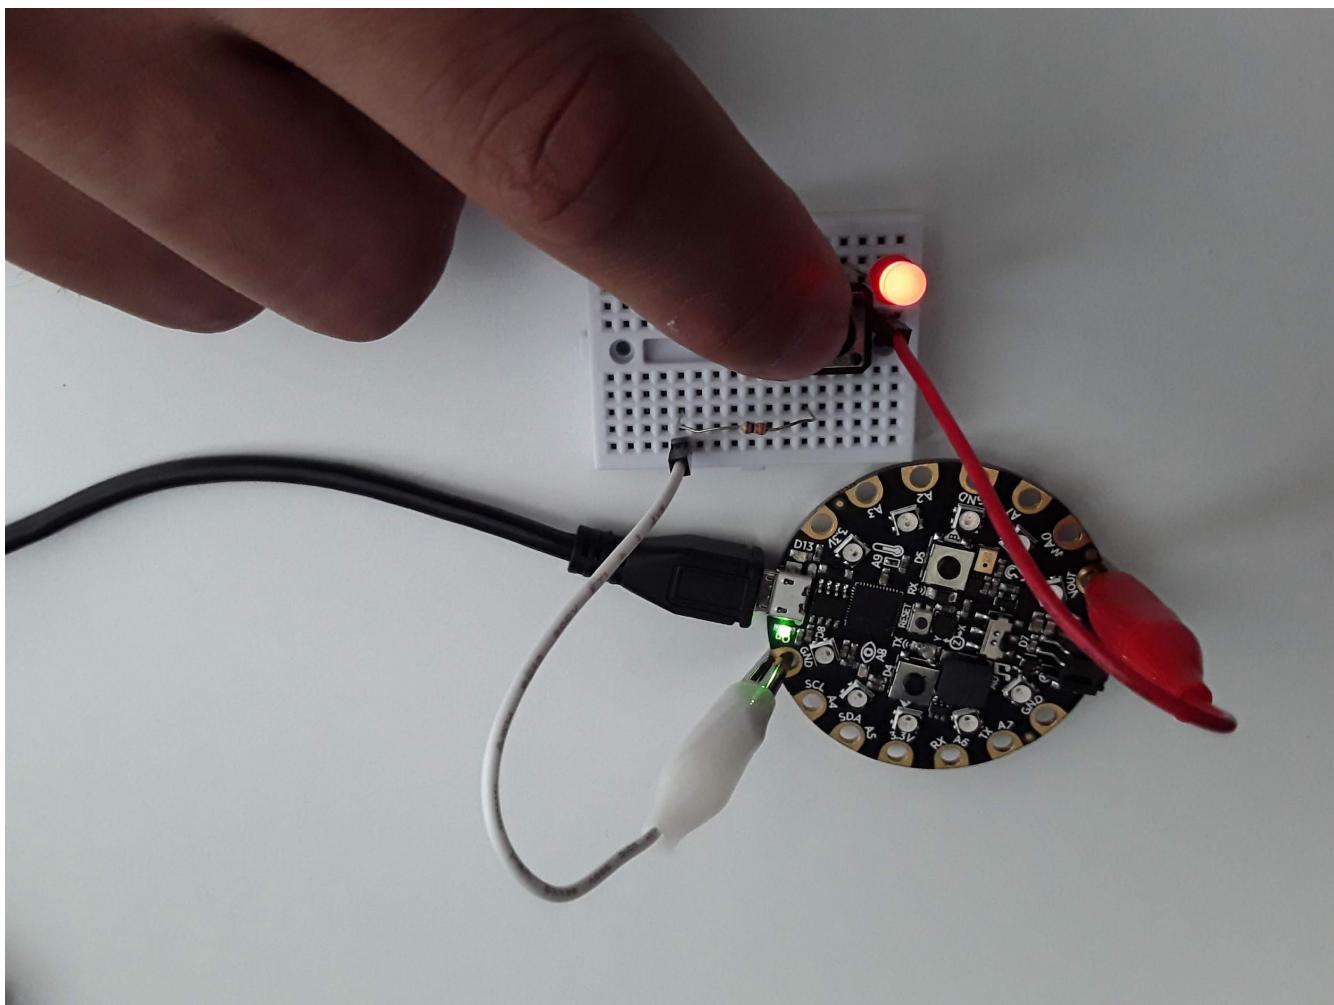


## 5.5 LED with code

Next I want you to remove the button from the circuit and wire up the LED like you had it when the positive end was connected to VOUT or 3.3V. Except this time I want you to hook the positive end of the circuit to pin A2. Then edit your blink code to blink pin A2. Take a look at the blink code. Right now the code is blinking pin D13. How do you think you need to change the code to blink pin A2? Here's what my circuit looks like for this one. I won't include code for this one since you just need to change one line of code.

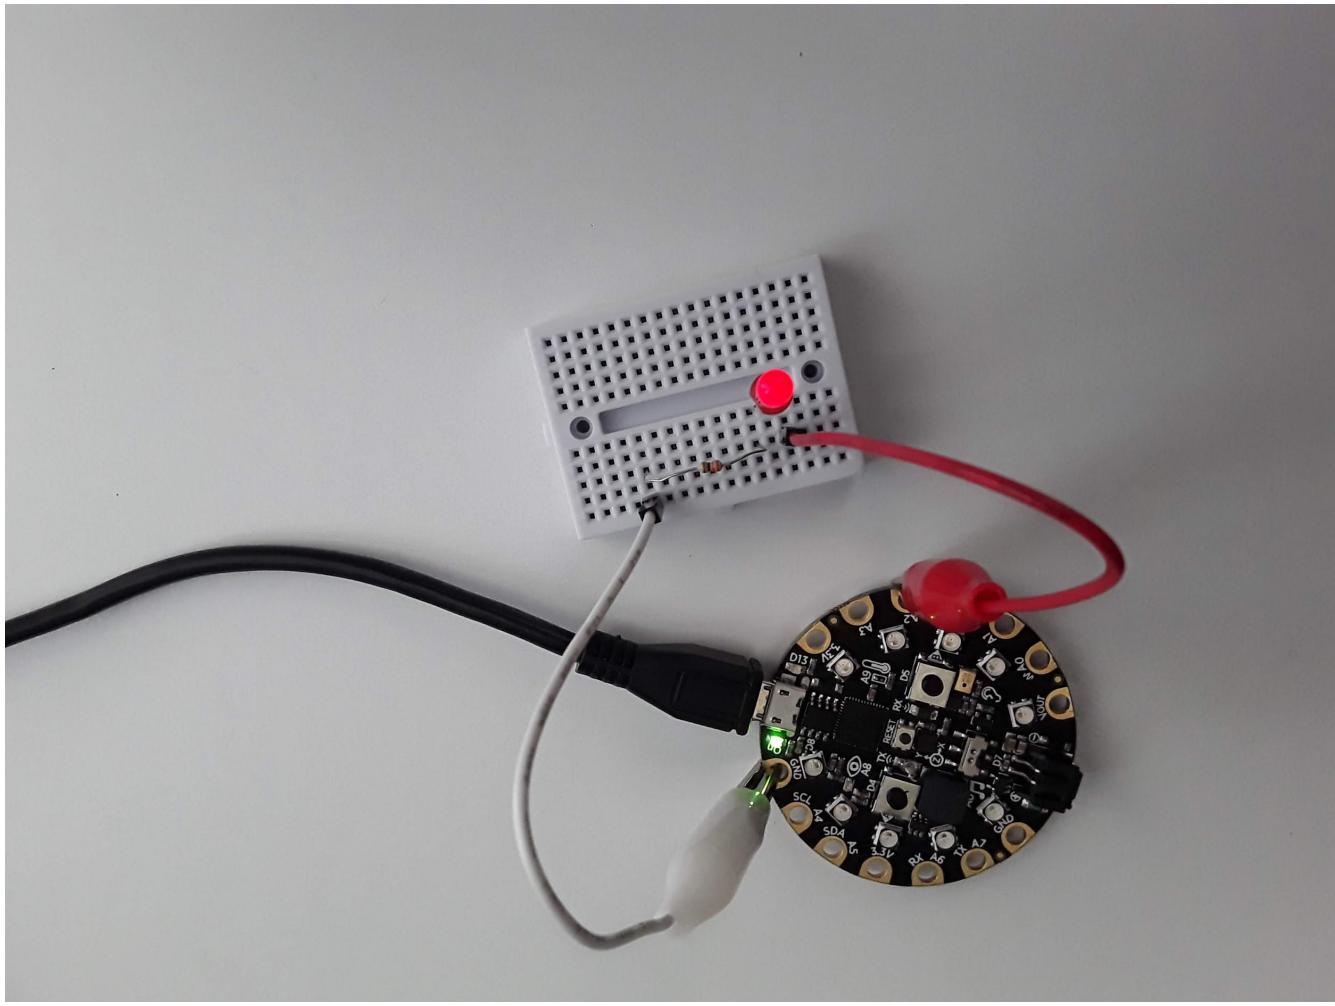

## 5.6 LED with CPX button

Finally, I want to use one of the buttons on the CPX to blink the LED hooked up to pin A2. For this code to work you first need to detect a button press and then tell the program to change the light from True to False depending on what it's current status is. This one is a bit more difficult so I'll include the code here and discuss the code itself. Here is my circuit (identical) to the previous one with Button A on the CPX pressed down.

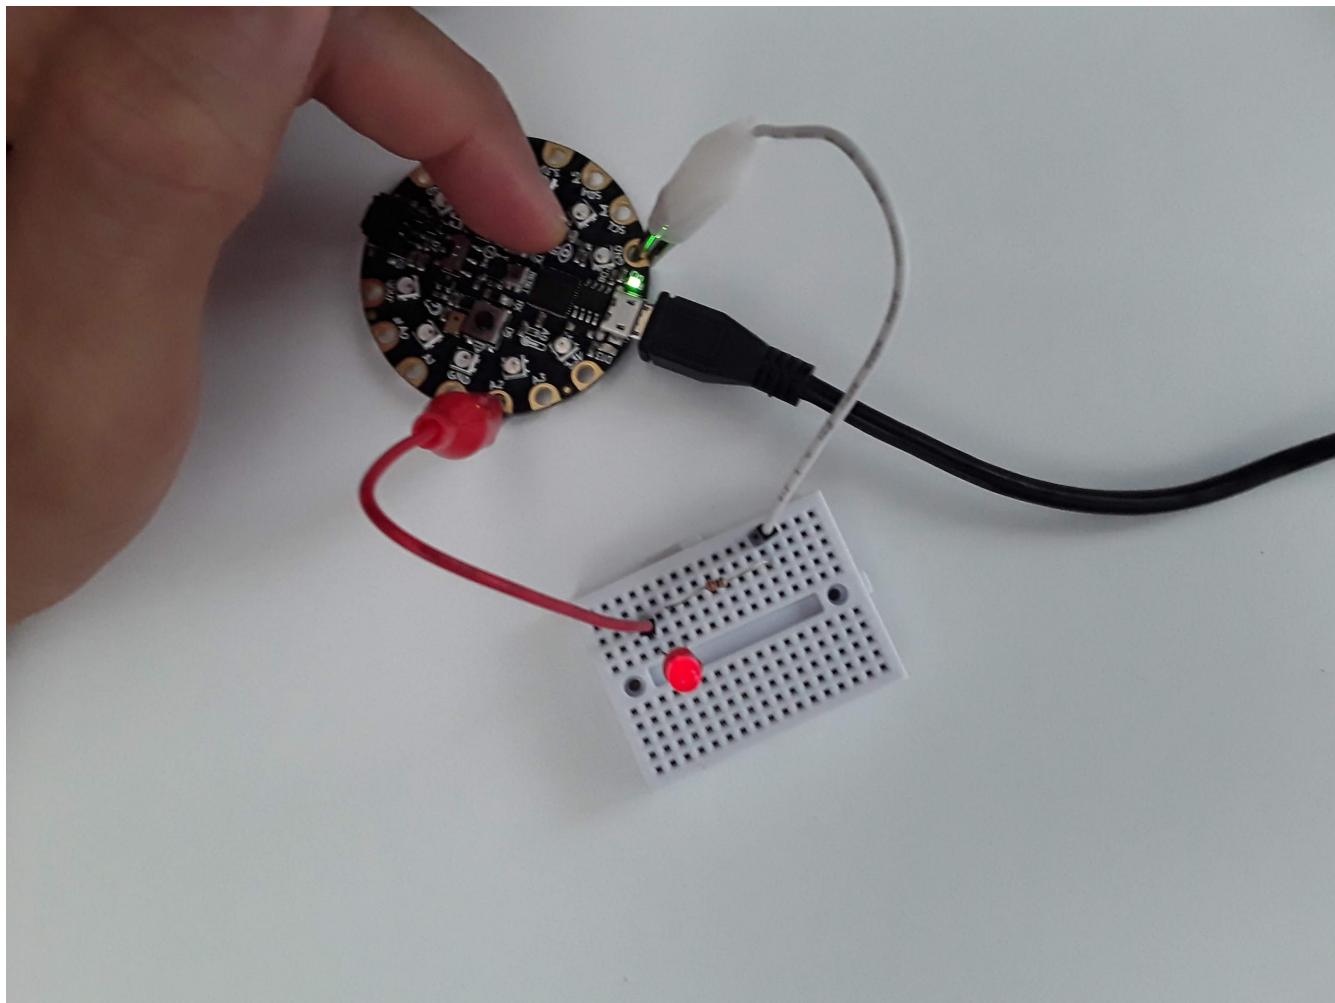

Alright so how do we detect a button press? Well the documentation on this is not so straight forward. What we want to do is detect the INPUT of a digital signal and then do something if we detect that signal. Here's the code I created to get it to work.

---

```
1 import board
2 import digitalio
3 import time
4
5 buttonA = digitalio.DigitalInOut(board.BUTTON_A)
6 buttonA.direction = digitalio.Direction.INPUT
7 buttonA.pull = digitalio.Pull.DOWN
8
9 led = digitalio.DigitalInOut(board.A2)
10 led.direction = digitalio.Direction.OUTPUT
11 led.value = True
12
13 while True:
14     print('Button value is ',buttonA.value)
15     led.value = False
16     if buttonA.value == True:
17         print('Button Value is ',buttonA.value)
18         led.value = True
19         while buttonA.value == True:
20             print('Waiting for you to let go....')
21             # Wait for all buttons to be released.
22             time.sleep(0.1)
23     time.sleep(0.1)
```

---

The code above is an image. You could type exactly what you see and hope you don't type any errors (which is highly unlikely) or you could look for my code on my [Github](#). Have you bookmarked this link yet? I recommend you do so!!! So you're making a code about Buttons....hmmm. Click that Github link. Where do you think the code about Buttons is located? Anywho, let's talk about the code.

The first 3 lines are exactly the same as before. Line 5 through 7 are similar to creating the "led" variable except we're using *BUTTON\_A* as the board value and setting the direction to *INPUT*. Finally we're setting the pull direction to *DOWN*. This means the button acts like a pull down resistor and when it's pressed the value of the button goes *HIGH*.

Lines 9-11 are the same as before. We create an led variable and tell the CPX that the led is hooked up to pin A2. We then start the while loop on line 13. First if you click the Serial button you'll see the text 'Button value is False'. It's False because *buttonA.value* is not being pressed. On line 15 the led is set to False (turned off). On line 16 the button value is checked using an if statement as to whether or not the button is pressed (True). If the button is pressed, the user will be notified that the button is pressed on line 17 and the led will be set to True (on)

in line 18. Lines 19-22 are while loop that will notify the Serial monitor that you must let go of the button before the code can continue to the main while loop. The `time.sleep` functions are there to make sure a human can operate the button without code running faster than a human can press a button. When I press the button down here is the output I get from the *Serial* monitor.

```

Activities mu
Thu 11:36 CPU 15% Mem 6.3 GB Swap 1.1 GB en: en: Mu 1.0.2 - main.py
Mode New Load Save Serial Plotter Zoom-in Zoom-out Theme Check Help Quit
main.py push_button_external_LED.py
7 buttonA.pull = digitalio.Pull.DOWN
8
9 led = digitalio.DigitalInOut(board.A2)
10 led.direction = digitalio.Direction.OUTPUT
11 led.value = True
12
13 while True:
14     print('Button value is ',buttonA.value)
15     led.value = False
16     if buttonA.value == True:
17         print('Button Value is ',buttonA.value)
18         led.value = True
19         while buttonA.value == True:
20             print('Waiting for you to let go....')
21             # Wait for all buttons to be released.
22             time.sleep(0.1)
23             time.sleep(0.1)
Adafruit CircuitPython REPL
Button value is False
Button value is False
Button value is False
Button value is False
Button value is True
Button Value is True
Waiting for you to let go....

```

Here you'll see 4 lines that say "Button value is False" and then two lines that say "Button value is True" followed by 5 lines that say "Waiting for you to let go...". See if you can get this code to work and play with it and modify it as you see fit. By the way, the LED connected to pin D13 has this exact same circuitry, an LED a resistor, it's all just soldered to the PCB so you don't have to build it using a breadboard. Hopefully now you have some appreciation for buttons and LEDs!!

## 5.7 Assignment

Once you've completed the project above, upload a PDF with all of the photos and text below included. My recommendation is for you to create a Word document and insert all the photos and text into the document. Then export the Word document to a PDF. For videos I suggest uploading the videos to Google Drive, turn on link sharing and include a link in your PDF. Note that all code must be included in the appendix or you'll be penalized 10%.

1. Include a photo of your circuit with your LED turned on using VOUT (make sure your face is in the photo) - 20%
2. Include a photo of your circuit with your LED turned on using 3.3V (make sure your face is in the photo) - 20%
3. Include a video of you turning your LED on and off with the push button (again make sure your face is in the video for enough time to say who you are and say hello) - 20%
4. Include a video of your LED blinking on and off automatically by modifying the blink code (make sure your face is in the video for enough time to say who you are and say hello) - 20%
5. Include a video of your LED blinking by pressing a button on the CPX. Note the LED must blink while you press and hold the button. You'll need to modify the code to get that to work. (make sure your face is in the video for enough time to say who you are and say hello) - 20%

## 6 Using the CPX/CPB as a Data Acquisition System (DAQ)

### 6.1 Parts List

1. Laptop
2. CPX/CPB
3. USB Cable

### 6.2 Learning Objectives

1. Record real time measurements from the CircuitPlayground using the Serial monitor
2. Learn how to use the typing module to type data directly into a spreadsheet or text file
3. Learn how to log data on the on board memory of the CircuitPlayground

### 6.3 Extra Help

This is a pretty hard project to do with multiple different methods. After you've read through this document I suggest you watch a youtube I created on [Logging Data with the Circuit Playground Express](#). I have also made video where I [log temperature and accelerometer data using on board memory with the CircuitPlayground Bluefruit](#).

### 6.4 Getting Started

Taking data is the core of any instrumentation project. Data Acquisition Systems or DAQ for short come in all shapes and sizes. Believe it or not the CPX can be used as a crude and cheap DAQ. The CPX can easily take temperature data and monitor the temperature in a greenhouse or take humidity readings of a plant to monitor soil content. Before we learn about the different sensors on board the CPX, we want to make sure we can store that data later rather than just having it spit data out via the serial monitor. For starters though let's get the CPX to print out something simple like button presses since we've touched on that already. The code I'm using is shown below and can also be found on [Github](#).

```
1 import board
2 import digitalio
3 import time
4
5 buttonA = digitalio.DigitalInOut(board.D4)
6 buttonA.direction = digitalio.Direction.INPUT
7 buttonA.pull = digitalio.Pull.DOWN
8
9 while True:
10     print(int(buttonA.value))
11     time.sleep(0.1)
```

The code is pretty similar to what I had in the past. I import board, digitalio, and time. I create a buttonA object using the digitalio library to record button presses. I then enter into a while loop print the buttonA.value.

The difference here is that I use the int() function to convert the buttonA.value to an integer. The reason why I do this is because buttonA.value is a boolean. It is either True or False. An integer though is a number and thus a value of False is 0 and True is 1. If you open the serial monitor and push the A button down a few times you'll see some zeros and 1's.

The screenshot shows the Mu 1.0.2 IDE interface. At the top is a toolbar with icons for Mode, New, Load, Save, Serial, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. Below the toolbar are three tabs: main.py, push\_button\_external\_LED.py, and button\_presses.py. The button\_presses.py tab is active, displaying the following Python code:

```
1 import board
2 import digitalio
3 import time
4
5 buttonA = digitalio.DigitalInOut(board.D4)
6 buttonA.direction = digitalio.Direction.INPUT
7 buttonA.pull = digitalio.Pull.DOWN
8
9 while True:
10     print(int(buttonA.value))
11     time.sleep(0.1)
```

Below the code editor is the Adafruit CircuitPython REPL window, which shows the output of the code execution:

```
1
0
0
1
0
1
1
```

In the bottom right corner of the REPL window, there is an Adafruit logo with a gear icon.

Mu also has a really neat builtin plotter. You'll see next to the Serial button there is a button called Plotter. If you click that button now nothing will pop up on the screen. Unfortunately in order to plot using the Plotter you need to modify the print() statement to this:

```
print((int(buttonA.value),))
```

Notice the extra parentheses and the comma. Now if you click Plotter you'll see something like this. You'll notice that the print statement now has commas in it and the Plotter is recording button presses.

The screenshot shows the Mu 1.0.2 IDE interface. The top menu bar includes 'File' (Mode, New, Load, Save), 'Edit' (Serial, Plotter, Zoom-in, Zoom-out, Theme), 'Tools' (Check, Help, Quit), and 'Help'. The code editor has tabs for 'main.py' (selected), 'push\_button\_external\_LED.py', and 'button\_presses.py'. The code in 'main.py' is:

```
1 import board
2 import digitalio
3 import time
```

The 'Adafruit CircuitPython REPL' window shows the output of the code, which is currently empty. The 'Adafruit CircuitPython Plotter' window displays a graph of a digital signal over time, showing periodic square waves between 0.00 and 1.00.

The problem with this is we still can't save the recorded data anywhere. Before we get into saving data let's first edit the print statement again to get rid of the Plotter by removing the extra parentheses and add time.monotonic() that way we can keep track of when a button was pressed. My print statement looks like this now:

```
print(time.monotonic(),int(buttonA.value))
```

Looking at the serial monitor now you'll see that time is being printed alongside the button presses.

The screenshot shows the Mu 1.0.2 IDE interface. The top bar displays "Mu 1.0.2 - main.py". Below the bar is a toolbar with icons for Mode (file), New, Load, Save, Serial, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. The main workspace shows a Python script named "button\_presses.py" with the following code:

```
1 import board
2 import digitalio
3 import time
4
5 buttonA = digitalio.DigitalInOut(board.D4)
6 buttonA.direction = digitalio.Direction.INPUT
7 buttonA.pull = digitalio.Pull.DOWN
8
9 while True:
10     print(time.monotonic(), int(buttonA.value))
11     time.sleep(0.1)
```

Below the workspace is the Adafruit CircuitPython REPL window, which outputs the following serial data:

```
Adafruit CircuitPython REPL
777.944 0
778.044 1
778.144 1
778.244 0
778.344 0
778.444 1
778.544 0
778.644 0
778.744 1
```

Now we are in a position where we can record some data and save it to our computer. There are 4 ways to record data. I call the first, Method1 and you basically just copy and paste from the serial monitor, Method2 where you have the CPX/CPB type data into a spreadsheet and Method3 where you log data internally onto the CPX/CPB itself. The 4th method called Method4 utilizes the Bluetooth Module. Since that has it's own issues there is a completely separate section on how to explain Bluetooth (See section [7](#)). Note you can only do Bluetooth if you have the Circuit Playground Bluefruit (CPB).

## 6.5 Method 1 - Copying Serial Monitor Data

If you open up the serial monitor you can see the data output. If you unplug the CPX while it's taking data the code will stop. **Note: In newer versions, unplugging your CPX will result in a loss of data. If this happens try pressing CTRL+C after you click the REPL window.** With the code stopped you can select all the data in the Serial monitor and then copy and paste the data into a text file on your computer. You can actually copy this into a new file on Thonny and just save it as a \*.txt file. Once you have the data in a text file you can proceed to plotting in Python on your desktop which I discuss in the last section. Here's some example data in Gedit which is a simple text editing program.

```
9.589 0
9.689 0
9.789 0
9.889 1
9.989 0
10.089 0
10.189 0
10.289 0
10.389 1
10.489 1
10.589 1
10.689 1
10.789 1
10.889 1
10.989 0
11.089 0
11.189 1
11.289 1
11.389 0
11.489 1
11.589 1
11.689 1
11.789 0
11.889 0
11.989 0
12.089 0
12.189 0|
```

## 6.6 Method 2 - Automatically Populate a Spreadsheet

The downside with the above method of course is if you have a ton of data to record you could lose the data or run into a massive copy and paste issue. The second option is to use this module called keyboard which takes control of your keyboard on your desktop computer and actively types your data into a spreadsheet. The code is very extensive but I'll include the simple one here so we can discuss it. Below are the first 30 lines of code. The first 6 lines of code are just comments since I heavily adopted this code from the [Adafruit Learn System](#). My version of this code can be found on my Github. Lines 8 - 14 are import commands as we've seen previously. The regular import modules board, time and digitalio are imported but we are also importing the Keyboard module so that the CPX can takeover our keyboard. Lines 16-22 create two buttons. First we create buttonA attached to pin D4 and then a switch attached to pin D7. If you look on the CPX there is a switch labeled D7. Before you copy this code onto the CPX make sure you move the switch towards the ear looking symbol. Lines 26-28 created the keyboard object. We are going to call it layout for this example code.

```

1 # Circuit Playground Express Data Logger
2 # Log data to a spreadsheet on-screen
3 # Open Spreadsheet beforehand and position to start (A,1)
4 # Use slide switch to start and stop sensor readings
5 # Time values are seconds since board powered on (relative time)
6 # Adapted from Adafruit Forums
7
8 import time
9 import digitalio
10 import board
11 import usb_hid
12 from adafruit_hid.keyboard import Keyboard
13 from adafruit_hid keycode import Keycode
14 from adafruit_hid.keyboard_layout_us import KeyboardLayoutUS
15
16 buttonA = digitalio.DigitalInOut(board.D4)
17 buttonA.direction = digitalio.Direction.INPUT
18 buttonA.pull = digitalio.Pull.DOWN
19
20 switch = digitalio.DigitalInOut(board.D7)
21 switch.direction = digitalio.Direction.INPUT
22 switch.pull = digitalio.Pull.UP
23
24 # Set the keyboard object!
25 # Sleep for a bit to avoid a race condition on some systems
26 time.sleep(1)
27 kbd = Keyboard(usb_hid.devices)
28 layout = KeyboardLayoutUS(kbd) # US is currently only option.
29
30 print("Time\tButton Value") # Print column headers

```

The next 30 lines are shown below. Lines 32-35 define a function. Functions in Python have a pretty standard structure. The keyword def is used to denote that the next line is a definition for a function. The name of the function is *slow\_write()*. The input to the function is string which ironically enough is a string object. Line 33-35 define what the function does. Line 33 sets up a for loop where the code loops through each character in the string. Everytime it gets to a new character it will use your keyboard to type that character using the layout.write(c) command. The time.sleep(0.02) is just to slow down the keyboard so your computer can keep up. That function is defined above the standard while True: statement on line 37 but is called on line 42. You'll see there is a *slow\_write(output)* on line 42. In this case output is a string and it's sent to the function *slow\_write()*. So in this case we have a function that can write a string so we just need to take data and then write it using our keyboard. Line 38 is an if statement that will only be true if the switch on pin D7 is pushed towards the music note on the CPX. If the switch is not thrown the code will move to the else statement on line 52 and tell the user that you need to flip the switch. If the switch is thrown line 40 will take data for us. First it will record the time.monotonic() and store it as a floating point number using the %0.1f designation which means that it will store 1 decimal as a %floating point number for f.

```

32  def slow_write(string):    # Typing should not be too fast for
33      for c in string:       # the computer to be able to accept
34          layout.write(c)
35          time.sleep(0.02)   # use 1/5 second pause between characters
36
37  while True:
38      if switch.value == True:
39          # Turn on the LED to show we're logging
40          output = "%0.1f\t%d" % (time.monotonic(), int(buttonA.value))
41          print(output)        # Print to serial monitor
42          slow_write(output)  # Print to spreadsheet
43
44          kbd.press(Keycode.DOWN_ARROW)  # Code to go to next row
45          time.sleep(0.01)
46          kbd.release_all()
47          for _ in range(2):
48              kbd.press(Keycode.LEFT_ARROW)
49              time.sleep(0.005)
50              kbd.release_all()
51          #time.sleep(0.025)  # Wait a bit more for Google Sheets
52      else:
53          print('Not logging. Flip Switch to start logging')
54      # Change 0.1 to whatever time you need between readings
55      time.sleep(1.0)

```

The second number in the string is an integer or a base 10 (decimal) integer designated by the %d part of the format. The integer is int(buttonA.value). You'll see a \ in between the formatted numbers which is a tab. The tab is there to tab between cells in a spreadsheet. Line 41 will print the output string to the Serial monitor and it will also type the contents of the string. Very important here. When you flip the switch on the CPX your keyboard will start typing in whatever active window is selected. If you don't have a spreadsheet opened and active (selected), the keyboard will just begin typing in whatever window is open. Make sure you have a spreadsheet program open and ready to go. Lines 44-51 tell the keyboard to hit the *DOWNGARROW* on your keyboard to move to the next row and the *LEFTARROW* twice to move back to the first column. Line 55 is a sleep to only log data once a second. I ran this code for a bit and had it type into LibreOffice Calc which is a free spreadsheet program. Google Sheets or Microsoft Excel will also work just fine.

Example\_Data.csv - LibreOffice Calc

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P
1	573.2	0														
2	574.4	0														
3	575.6	0														
4	576.8	1														
5	578	1														
6	579.2	1														
7	580.5	0														
8	581.7	0														
9	582.9	0														
10	584.1	1														
11	585.3	1														
12	586.5	1														
13	587.8	0														
14	589	0														
15																
16																
17																
18																
19																
20																
21																
22																
23																
24																
25																
26																
27																
28																
29																
30																
31																
32																
33																
34																
35																
36																
37																
38																

Sheet 1 of 1 | Default | English (USA) | Average: ; Sum: 0 | 100% |

You'll see that the first column is time with 1 decimal point and the second column is the button press values. At this point you must click *Save As...* and save the document as a CSV which stands for Comma Separated Value. Once you have the file saved you can proceed to plotting in Python on your Desktop.

## 6.7 Method 3 - Logging Data Directly to on board memory

The problem with the above 2 methods is that you need a laptop to log data in the field. It would be nice if you could use the optional battery pack and just have the CPX log data on the CPX itself. This is the most complex way but in my opinion the best way. In order to get this to work you need to allow the drive on the CPX to have read/write permissions. This requires you to load a piece of software called boot.py and put it on the CPX. I have this [software on my Github](#). The software is shown below. The first 10 lines are probably very familiar. Import some modules and then create a switch object. Line 13 is where all of the storage permissions are changed. If the flip is switched towards the A button, the storage module is used to allow you to write to the CPX. The problem here is that if you do this, you won't be able to edit code. I'll explain the procedure here in a minute. As always, the relevant Adafruit tutorial is on the [Adafruit Learn System](#) if you want to read more about it. Again make sure you store this file onto the CIRCUITPY drive and save it as boot.py

```

1 import board
2 import digitalio
3 import storage
4
5 # For Gemma M0, Trinket M0, Metro M0/M4 Express, ItsyBitsy M0/M4 Express
6 #switch = digitalio.DigitalInOut(board.D2)
7 # switch = digitalio.DigitalInOut(board.D5) # For Feather M0/M4 Express
8 switch = digitalio.DigitalInOut(board.D7) # For Circuit Playground Express
9 switch.direction = digitalio.Direction.INPUT
10 switch.pull = digitalio.Pull.UP
11
12 # If the switch pin is connected to ground CircuitPython can write to the drive
13 storage.remount("/", switch.value)
14 if (switch.value):
15     print('Storage changed')
16 else:
17     print('Change the switch')

```

---

In addition to storing the file boot.py you'll need to edit your main.py script to only log data when the switch is moved towards the B button. The software to record button presses on disk is shown below and as always [on my Github](#). In this software we again see the standard commands. Lines 1-3 import all the modules we need and then 5-15 create a switch, a button and an LED. In this case we're using the LED soldered to the board. Line 17-20 check to see if the user has flipped the switch. If the switch is False the storage module on boot.py will allow the drive to act like a data logger and it will open a file called *Test\_Data.txt* for writing ('w'). If the switch is True then the user will be notified that the file has not been opened for writing. Lines 22 through 33 include the infinite while loop. Line 23 turns the LED on and line 24 prints out the current time and the button value in integer form. If the switch value is False the program will create an output string by converting all numbers to strings using the str function. Notice that there is a *str("\n")* at the end of the output variable which tells the computer to write a new line of data to the file. Lines 28 and 29 write the output to the file from line 18 and then flush the output which means the CPX waits for the data to be fully written before moving on. It also turns the LED off so we know the CPX took data even when we aren't looking at the Serial monitor. If the switch value is true it means that the we never opened the data file and thus we tell the user we aren't logging data and it's time to flip the switch and hit reset. **NOTE: The figure below is from an old version of the code. The newest version produces the same outcome. The only difference is that the D13 LED blinks when the code is running and the first neopixel toggles 3 different colors when the system is logging data. This allows for extra user information when operating Method 3 without a computer and the serial monitor. Note that these additions require the use of neopixel.mpy module.**

## 6.8 Installing Modules

**One issue you're going to run into when you run the codes below is that you won't have some of the modules on your CPB/CPX.** To fix this you need to download the [CircuitPython Libraries](#). You need to download the appropriate version: 6.x, 7.x or 8.x. How do you know what version of CircuitPython you have? Well head over to your CIRCUITPY drive and open the boot\_out.txt file and it will tell you the version. Note that this is the same version as the .UF2 file installed back in the Getting Started labs (See Chapter 3). When you download the modules it will download a .zip file. Extract the .zip file on your desktop computer and then open the *lib* folder on your desktop and your CIRCUITPY. You then need to transfer the modules (ONLY THE ONES YOU NEED) from your desktop to your CPX/CPB *lib* folder. The reason why you can't copy the entire folder is because the CPB/CPX only has 2MB of flash and the CircuitPython download is 4.1 MB at the time of this writing.

```

1 import time
2 import board
3 import digitalio
4
5 switch = digitalio.DigitalInOut(board.D7)
6 switch.direction = digitalio.Direction.INPUT
7 switch.pull = digitalio.Pull.UP
8
9 buttonA = digitalio.DigitalInOut(board.D4)
10 buttonA.direction = digitalio.Direction.INPUT
11 buttonA.pull = digitalio.Pull.DOWN
12
13 led = digitalio.DigitalInOut(board.D13)
14 led.direction = digitalio.Direction.OUTPUT
15 led.value = True
16
17 if switch.value == False:
18     file = open('Test_Data.txt', 'w')
19 else:
20     print('Not opening file for writing')
21
22 while True:
23     led.value = True
24     print(time.monotonic(), int(buttonA.value))
25     if switch.value == False:
26         print('Writing Data to Disk')
27         output = str(time.monotonic()) + " " + str(int(buttonA.value)) + str('\n')
28         file.write(output)
29         file.flush()
30         led.value = False
31     else:
32         print('Not logging data. Flip the switch and then hit reset')
33     time.sleep(1) #sleep for so many seconds between measurements

```

---

So here is the flow of what you want to do for method 3.

1. Unplug the CPX
2. Flip the switch towards the A button.
3. Plug in the CPX and save the boot.py and main.py files. Remember you can only save Python scripts when the switch is flipped towards the A button.
4. When you are ready to start recording data, flip the switch towards the B button. If you're looking at the Serial monitor, the software will throw an error. Just ignore it and hit the reset button. When your computer recognizes the CPX you can turn the Serial monitor on and off.
5. When you are done taking data simply slide the switch over towards the A button and hit reset again. This is what my Serial monitor looks like when I do this. You'll see that I was writing to disk for like 25 seconds and then I flipped the switch back towards the A button.


The screenshot shows the Mu 1.0.2 IDE interface. The top menu bar displays "Mu 1.0.2 - main.py". Below the menu is a toolbar with icons for Mode, New, Load, Save, Serial, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. The main workspace contains several tabs: "main.py", "push\_button\_external\_LED.py", "button\_presses.py", "record\_button\_presses\_typing.py", and "boot.py". The "main.py" tab is active, displaying the following Python code:

```
13 led = digitalio.DigitalInOut(board.D13)
14 led.direction = digitalio.Direction.OUTPUT
15 led.value = True
16
17 if switch.value == False:
18     file = open('Test_Data.txt', 'w')
19 else:
20     print('Not opening file for writing')
21
```

Below the code, the Adafruit CircuitPython REPL window shows the following output:

```
Writing Data to Disk
23.364 0
Writing Data to Disk
24.502 0
Writing Data to Disk
25.639 0
Not logging data. Flip the switch and then hit reset
26.64 0
Not logging data. Flip the switch and then hit reset
27.641 0
Not logging data. Flip the switch and then hit reset
28.642 0
Not logging data. Flip the switch and then hit reset
```

With the switch flipped and data taken, open your folder manager and take a look at the CIRCUITPY drive. This is what mine looks like. You'll see I have two Python files and a file *Test\_Data.txt* with all my data in it.

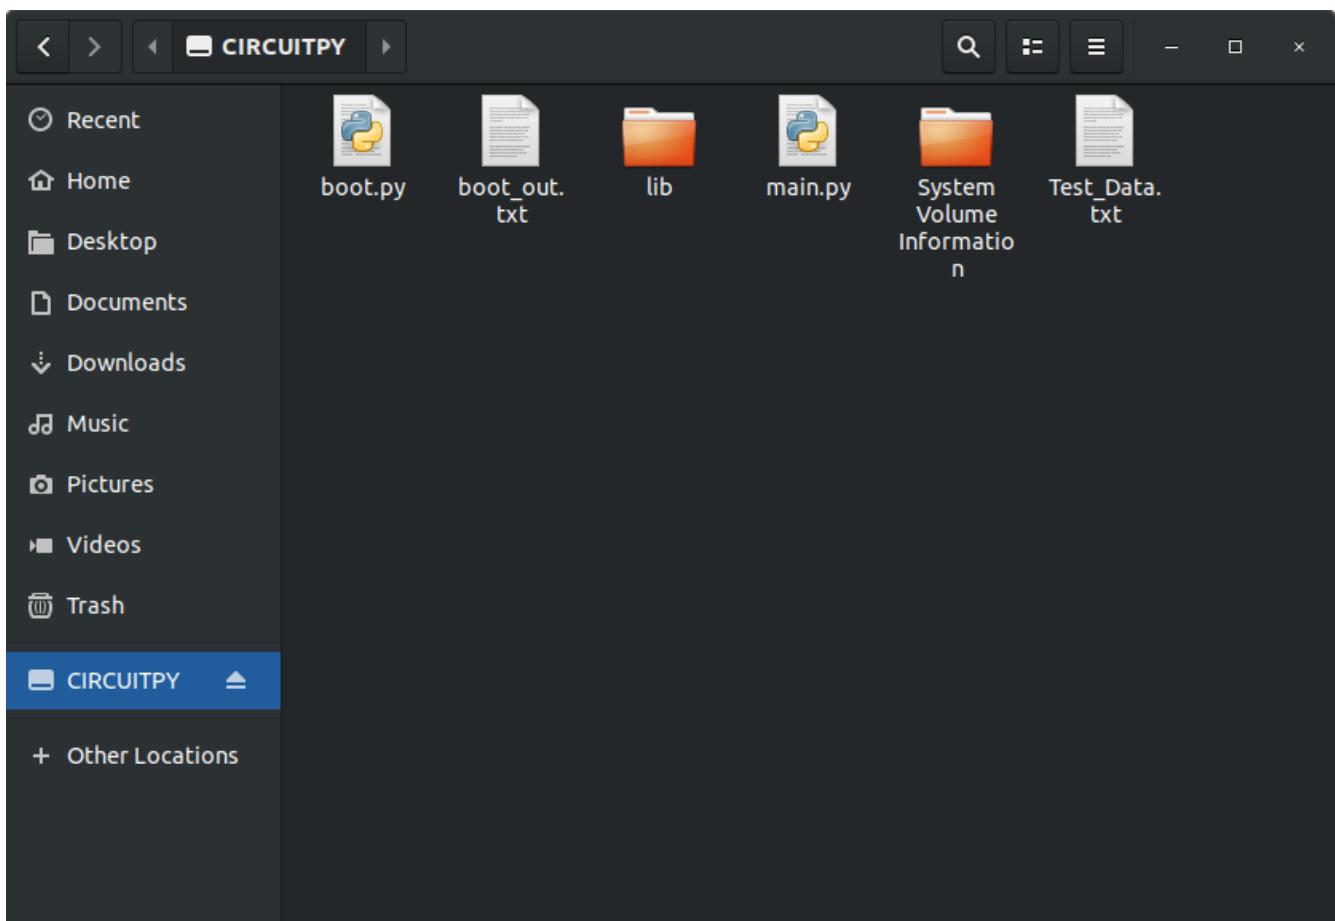

If you open the *Test\_Data.txt* file you will hopefully see data in it.

A screenshot of a text editor window titled "Example\_Button\_Press\_Data.txt" located at "/Desktop". The window has standard controls for Open, Save, and zoom. The text area contains a series of binary-like data points separated by spaces:

```
9.589 0
9.689 0
9.789 0
9.889 1
9.989 0
10.089 0
10.189 0
10.289 0
10.389 1
10.489 1
10.589 1
10.689 1
10.789 1
10.889 1
10.989 0
11.089 0
11.189 1
11.289 1
11.389 0
11.489 1
11.589 1
11.689 1
11.789 0
11.889 0
11.989 0
12.089 0
12.189 0
```

The bottom status bar indicates "Plain Text", "Tab Width: 8", "Ln 45, Col 9", and "INS".

At this point you can copy this text file over to your desktop computer and proceed to the Python plotting portion. Ok so let's recap method 3 one more time.

1. Unplug CPX (or remove power)
2. Slide switch to A
3. Plug in CPX (or provide battery power)
4. Slide switch to B
5. Reset
6. Take data for however long you want
7. Slide switch to A
8. Remove power if you're on battery power
9. Plug CPX into computer if not already connected
10. Transfer data file to computer

## 6.9 Method 4 - Logging Data on a Cell Phone using Bluetooth (CPB Only)

As mentioned in the introduction it's possible to have the Circuit Playground send data wirelessly to a cell phone using Bluetooth provided you have Bluetooth setup and a smart phone with the Adafruit Connect App. Bluetooth is explained in detail in its own section (See Section 7). Method 4 is a valid form of logging data it just requires a cell phone to be powered the entire time and it must be within 30 feet of the Circuit Playground at all times. This also only works on the CPB since the CPX does not have a Bluetooth transmitter.


## 6.10 Plotting Logged Data

Alright so there you have it. I have explained 4 methods to datalogging. Here are the methods again in summary.

1. Print data to Serial and copy and paste
2. Use the Keyboard module to save data to a spreadsheet
3. Access the storage of your CPX and write data to a text file on the CPX
4. Send data wirelessly to a Cell Phone using Bluetooth - CPB Only (See Section 7)

All methods will work but some will obviously have their pros and cons. I suggest you get comfortable with 1 method and use that for the remainder of the semester. Whatever option you choose though will provide you with a data file that you can read in Python on your desktop computer to plot. The simplest way to import data is by using the loadtxt function from the module numpy. Here is some very simple code to plot data from a text file. I also have a [Youtube video explaining how to plot a text file](#) if you'd rather watch something.

When you plot make sure your *Test\_Data.txt* file is in the same folder as your plotting script in Thonny or Spyder. Here's my example code (this code is not on Github but you only need 3 or 4 lines of code to plot).

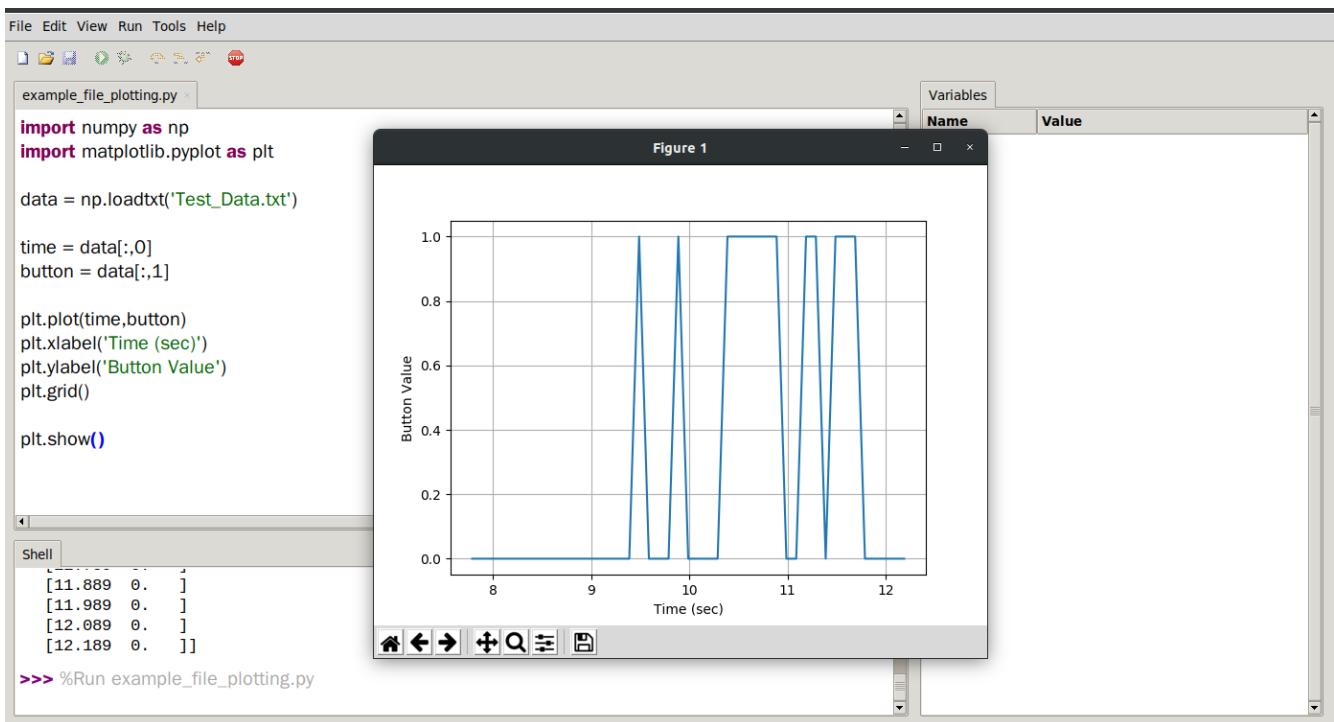

In this example lines 1 and 2 import numpy and matplotlib. Line 4 imports data from the `Test_Data.txt` file and then 6 and 7 save the first and second columns into time and button. The remaining lines plot the data and create x and y labels as well as a grid. Hopefully now you are well versed in taking data and plotting in Python.

## 6.11 Assignment

Once you've completed the project above, upload a PDF with all of the photos and text below included. My recommendation is for you to create a Word document and insert all the photos and text into the document. Then export the Word document to a PDF. For videos I suggest uploading the videos to Google Drive, turn on link sharing and include a link in your PDF. Note that all code must be included in the appendix or you'll be penalized 10%.

1. Use method 1, 2 or 3 and save time and button presses to a text file
2. Include a video explaining which method you are using to record button presses and show yourself pressing the CPX button a few times and recording data. Make sure to wave and introduce yourself - 30%
3. Copy and Paste your CPX code used to log data - 20%
4. Copy and paste your Python desktop code used to plot your data - 20%
5. Include a plot of your button presses with time on the x-axis and button presses on the y-axis (no screenshots) - 30%

# 7 Bluetooth on the CircuitPlayground Bluefruit (CPB Only) - Method4?

## 7.1 Parts List

1. Smart Phone
2. Adafruit BLE Connect App ([Play Store/App Store](#))
3. CircuitPlayground Bluefruit
4. USB Cable
5. Laptop

## 7.2 Learning Objectives

1. Understand the bluetooth module on the CircuitPlayground Bluefruit
2. Learn how to send data via the Bluefruit to your smart phone
3. Understand how to plot data sent via UART

## 7.3 Extra Help

You might find plotting data via bluetooth to be rather difficult and it was pretty difficult for me until I learned that you can export data as a txt file rather than a csv file. Before I learned how to do that I put together a [4 part series](#) describing everything in this module. Worst case you can just watch the [third video in the series](#). The video is 30 minutes but the first 8 minutes goes through setting up the bluetooth module and the rest of the video is just on plotting the exported csv data which took me some time. Note that exporting data as a txt file is the preferred method as parsing the file is way easier.

## 7.4 Installing Modules

**One issue you're going to run into when you run the codes below is that you won't have some of the modules on your CPB/CPX.** To fix this you need to download the [CircuitPython Libraries](#). You need to download the appropriate version: 6.x, 7.x or 8.x. How do you know what version of CircuitPython you have? Well head over to your CIRCUITPY drive and open the boot\_out.txt file and it will tell you the version. Note that this is the same version as the .UF2 file installed back in the Getting Started labs (See Chapter 3). When you download the modules it will download a .zip file. Extract the .zip file on your desktop computer and then open the *lib* folder on your desktop and your CIRCUITPY. You then need to transfer the modules (ONLY THE ONES YOU NEED) from your desktop to your CPX/CPB *lib* folder. The reason why you can't copy the entire folder is because the CPB/CPX only has 2MB of flash and the CircuitPython download is 4.1 MB at the time of this writing.

## 7.5 Getting Started

I mentioned in the DAQ project that there is technically a Method4. This is because with bluetooth you can send data from your phone to your Circuitplayground Bluefruit (CPB) and you can also send data to your smart phone. Once the data is on your phone you can export the data to a text file. That basically means you can use the bluetooth module as another method to save data from the CPB. There is a lot you can do with bluetooth but the bottom line is that All code required for this module is on my [Github](#). First we're going to run the [bluetooth\\_uart\\_button.py](#) script which sends button data to your smart phone via something called UART which is a type of serial communication. It's beyond the scope of this lesson but serial is digital as opposed to analog which is done using the AnalogIn functions (See Chapter 8)

```

1 # CircuitPython Bluefruit LE Connect Button Send Example
2 #####Import Stuff
3 import board
4 import time
5 import analogio
6 from adafruit_ble import BLERadio
7 from adafruit_ble.advertising.standard import ProvideServicesAdvertisement
8 from adafruit_ble.services.nordic import UARTService
9 import busio
10 import digitalio
11 import math
12
13 #####Setup blue tooth
14 ble = BLERadio()
15 uart_server = UARTService()
16 advertisement = ProvideServicesAdvertisement(uart_server)
17 print('Bluetooth Setup')
18
19 ##SETUP Button
20 ##Button Presses
21 buttonA = digitalio.DigitalInOut(board.BUTTON_A)
22 buttonA.direction = digitalio.Direction.INPUT
23 buttonA.pull = digitalio.Pull.DOWN
24 print('Button Setup')
25 start_time = time.monotonic()

```


Lines 3-11 import a ton of modules. You'll recognize many of them like analogio, and time but the new ones are the ones that say ble. These are the bluetooth modules required for the CPB. Lines 21-24 setup the button so we can log the button via bluetooth and Lines 14-17 kick off the BLERadio object and the UARTService() to send data. Line 25 also grabs the current time before the infinite while loop that way the timer starts closer to zero.

```


26 while True:
27     # Advertise when not connected.
28     print('Not connected')
29     print('Look for',ble.name)
30     ble.start_advertising(advertisement)
31     ##Keep looping until connection established
32     while not ble.connected:
33         pass
34     #Stop advertising once connected
35     print('Connected')
36     ble.stop_advertising()
37
38     ##Once connected
39     while ble.connected:
40         #Time =
41         t = time.monotonic()-start_time
42         #Button press
43         b = int(buttonA.value)
44
45         #Print to STDOUT
46         print((t,b))
47
48         #And send them over uart (which is basically serial) but this is _server
49         uart_server.write('{}{},{}\n'.format(t,b))
50
51         #Sleep for 5Hz
52         time.sleep(0.2)# Write your code here :-)

```


The code above is the infinite while loop which actually contains 2 while loops. Lines 28-33 prints the name of your bluetooth sensor and then starts advertising bluetooth to whoever is listening. It will then enter a while loop from 32-33 until bluetooth is connected. Once bluetooth is connected it will enter into the second while loop from line 39-52. In those lines 40-46 is responsible for taking all the necessary measurements and printing them to the serial monitor in Mu. In this case it's only printing the current time and the value of the button as an integer. *buttonA.value* is either True or False and the *int* function converts that to a 0 or a 1. Line 49 then sends the data over bluetooth using the UART server. You'll notice in this case the code is sending t,b by using the format variable and the 2 empty brackets. If you want to send more data you need to add more empty brackets and more variables to the format function. When you first save this script your CPB will not be connected and enter into an infinite while loop where it waits for your smart phone to connect. If you open your smart phone and open the Bluefruit Connect App the following screen will pop up.

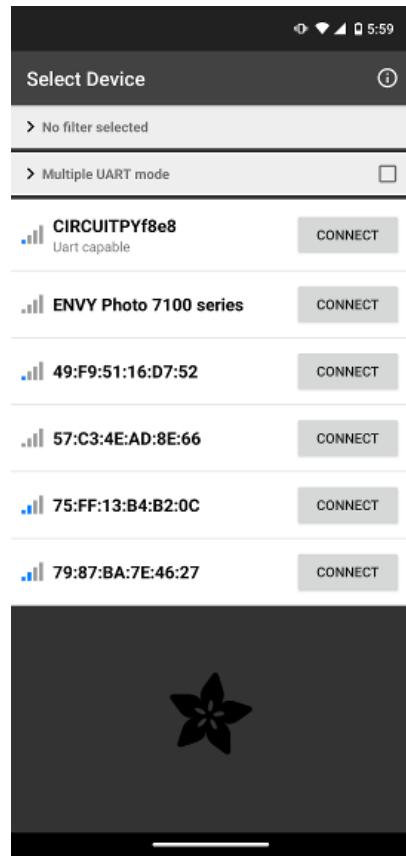


In this case there are numerous different bluetooth modules can be seen but the one you need to click is the one that says CIRCUITPYf8e8. You will have a different code after CIRCUITPY and you can figure out what your 4 digit code is by making sure you have the *print('Look for',ble.name)* in your code. Once you do that the CPB will begin sending time and the button press to your smart phone.

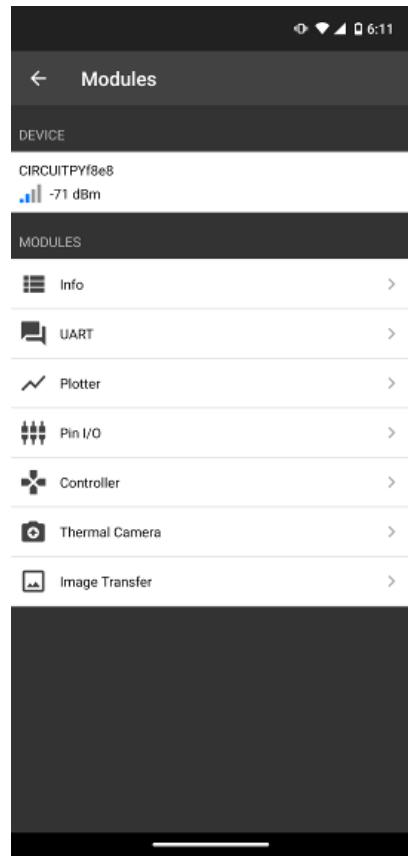


There are numerous items you can click. The Controller is very fun for creating a remote control robot but we're only going to go over the UART and Plotter tabs. If you click the plotter tab you will be greeted with a live screen of the data being sent.

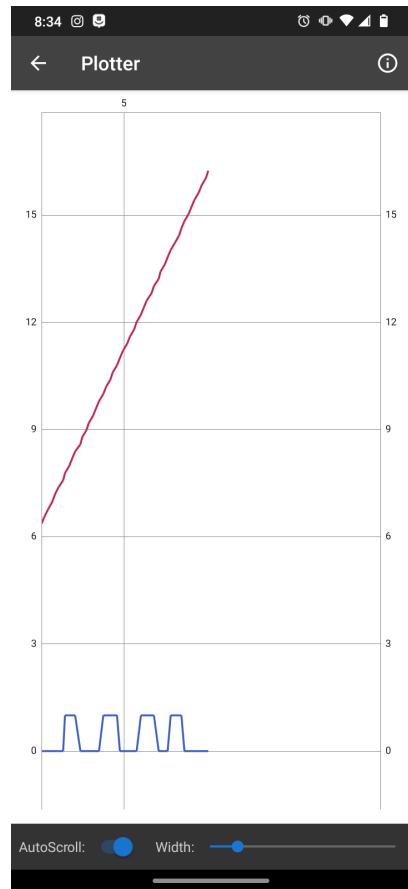

In the photo above you can see three data streams that is coming directly from the CPB. The red line is time and the blue line is the button value. Notice the blue line goes from 0 to 1 which means I pressed the button a few times. The red line is always increasing which kind of messes up the plotter so you can always go back to your code in Mu and just send your data. This is great for live demonstrations and for debugging if you need to see data from an experiment and you don't have access to a laptop with Mu. If you hit the back arrow and then click UART you will see the raw data come in as text.

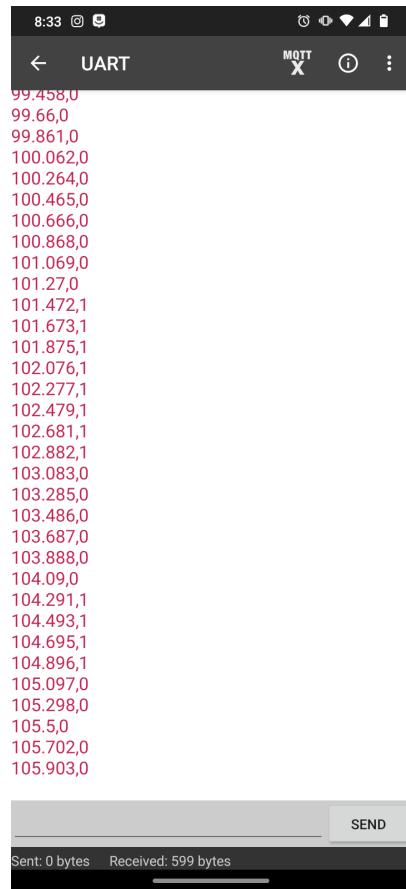

Again here you can see the 3 data streams separated by commas. The very neat thing with the UART tab is that you can click the three vertical dots in the upper right hand corner and click export to TXT. The easiest thing for me was to export the data to google drive and then download the data to my computer. Once I downloaded the TXT file to my computer and opened it the data file looked like this.

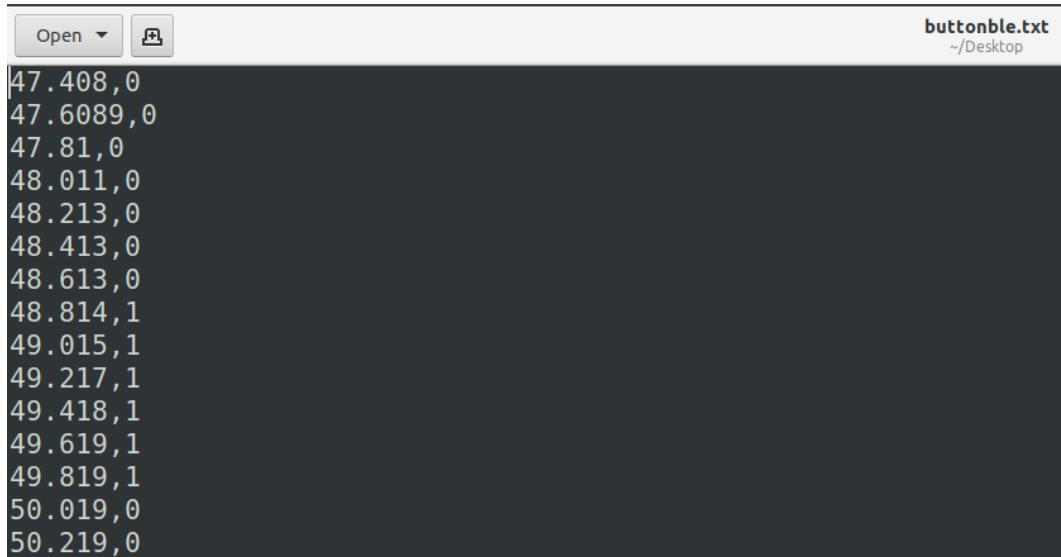

If you export the file as a CSV the data file will look completely different and it's much more complicated to plot. If you export the data as a TXT file you just need to use the np.loadtxt command to read in the data. Note you might have commas in your data file. If there are commas just use the CTRL+H command and replace all

commas with spaces or use the `np.loadtxt('buttonble.txt', delimiter=',')` command. Plotting your button presses should be as simple as the previous lab thus plotting the button is left as an exercise to the reader.

## 7.6 Assignment

Once you've completed the project above, upload a PDF with all of the photos and text below included. My recommendation is for you to create a Word document and insert all the photos and text into the document. Then export the Word document to a PDF. For videos I suggest uploading the videos to Google Drive, turn on link sharing and include a link in your PDF. Note that all code must be included in the appendix or you'll be penalized 10%.

1. First get the bluetooth code on your CPB and connect your smart phone to it and video tape yourself connecting the CPB to your smart phone (20%)
2. Take a screenshot of the Plotter on your phone (15%)
3. Take a screenshot of the UART raw data on your phone (15%)
4. Export time, and button presses to a TXT file and plot it on your computer. Include your raw data in an appendix. (20%)
5. Include a plot of your button presses with time on the x-axis and button value on the y-axis (30%)

# 8 Measuring Voltage Across a Potentiometer

## 8.1 Parts List


1. Laptop
2. CPX/CPB
3. USB Cable
4. Potentiometer
5. Resistor (the Ohms depends on how large your potentiometer is)
6. Breadboard

## 8.2 Learning Objectives


1. Understand voltage division of resistors in series
2. Measure an analog signal on the CircuitPlayground
3. Understand the binary measurement done by the analog to digital conversion (ADC)

## 8.3 Getting Started

At this point you've learned about analog to digital converters (ADC). It turns out that the CPX has 8 analog ports hooked up to a 3.3V logic 16 bit ADC. The input range on the ADC is 0 to 3.3V and the output range is 0 to 65536 which is  $2^{16}$  hence 16 bits. In order to get accustomed to the ADC on the CPX, we're going to do a simple example where we measure the voltage drop across a potentiometer. You can read about [potentiometers online if you wish](#). Basically though, a potentiometer is a variable resistance resistor that changes resistance by turning a knob. The knob changes the connection point of a wire and thus the length of the wire. This in turn changes the resistance. Potentiometers come in all shapes and sizes. Here are some [potentiometer examples](#). I've done this lab with a few potentiometer. Ideally you'd like to have the potentiometer hooked up in series with another resistor so that you end up building a voltage divider but it's possible you can do it without it. Here's my circuit all hooked up without a resistor in series. Two legs are connected to 3.3V and GND while the middle leg of the potentiometer is connected to pin A2.

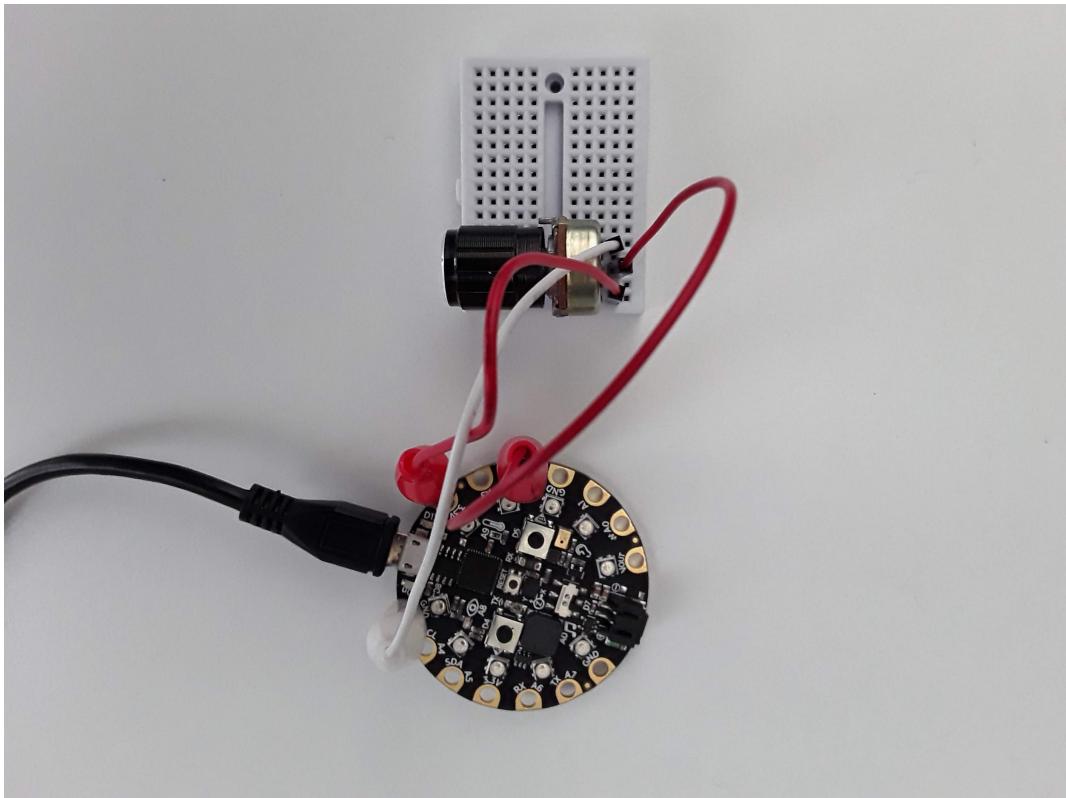

As I said before, some potentiometers do not have enough resistance when turned all the way down. I suggest that you put a resistor in between the third leg and ground. Some experimenters have melted plastic or gotten really hot. One student even blew up a potentiometer. Here is my circuit with a resistor in series.

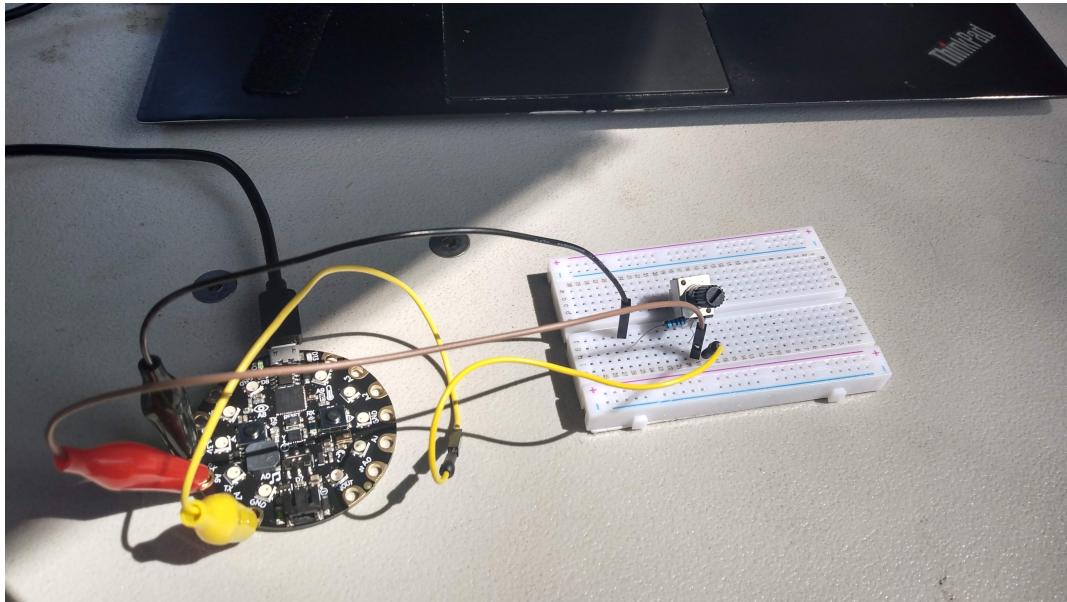

There is a relevant [Adafruit Learn Tutorial](#) to help with the *analogio* module but I'll explain the minimum required here to get some analog values plotted in *Plotter* and Python on your computer. First let's take a look at some [simple example code](#) to read an analog signal and plot it using the *Plotter*.

```
1 import time
2 import board
3 import analogio
4
5 analog = analogio.AnalogIn(board.A2)
6
7 while True:
8     print((analog.value,))
9     time.sleep(0.05)
```

In the example code above, lines 1-3 again import the necessary modules with *analogio* being the new module here. Line 5 creates the analog object by attaching pin A2 to the analog function. Lines 7-9 then simple read the analog value and print it to *Serial* and the *Plotter*. Running this code on my laptop and turning the knob on the potentiometer produces this output. My potentiometer has a very large knob on the front and is easy to turn. Some potentiometers have a small screw on top that you need to turn with a screwdriver. Turning the screw or the knob results in chaning the resistance and therefore changing the voltage read by the CPX.

The screenshot shows the Mu 1.0.2 IDE interface. At the top, there's a toolbar with icons for Mode, New, Load, Save, Serial, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. Below the toolbar, a tab bar lists several files: main.py, write\_button\_presses\_disk.py, button\_presses.py, boot.py, push\_button\_external\_LED.py, record\_button\_presses\_ttyping.py, and capacitive\_touchio.py. The main area contains the Python code for main.py:

```

1 import time
2 import board
3 import analogio
4
5 analog = analogio.AnalogIn(board.A2)
6
7 while True:
8     print((analog.value,))
9     time.sleep(0.05)

```

To the left of the code editor is the Adafruit CircuitPython REPL window, which displays a series of raw data tuples:

```
(18832,)  
(12640,)  
(7216,)  
(3088,)  
(592,)  
(1008,)  
(2896,)  
(3840,)
```

On the right side of the interface is the Adafruit CircuitPython Plotter window, which shows a line graph of the analog signal over time. The y-axis ranges from -32000 to 32000, and the x-axis represents time.

For this lab I want you to spin the potentiometer all the way to one side and then the other while recording time and the analog value. I then want you to plot the data with time on the x-axis and voltage on the y-axis. Remember to convert a digital output to voltage you just need to use the equation below where D is the raw value from the analog port. 3.3V is the range of the ADC and  $2^{16}$  is the maximum value the ADC can represent.


$$V = \frac{3.3D}{2^{16}} \quad (2)$$

After doing this experiment myself, this is the plot I obtain. The code is not provided as reading data and plotting has been discussed in a previous lab (See chapter 6). From the screenshot though you can see how I convert the digital output to an analog signal.

#### **NOTE THAT ON LINE 6 IT READS**

```
time -= time[0]
```

Notice the minus sign in front of the equal sign. That effects a lot.

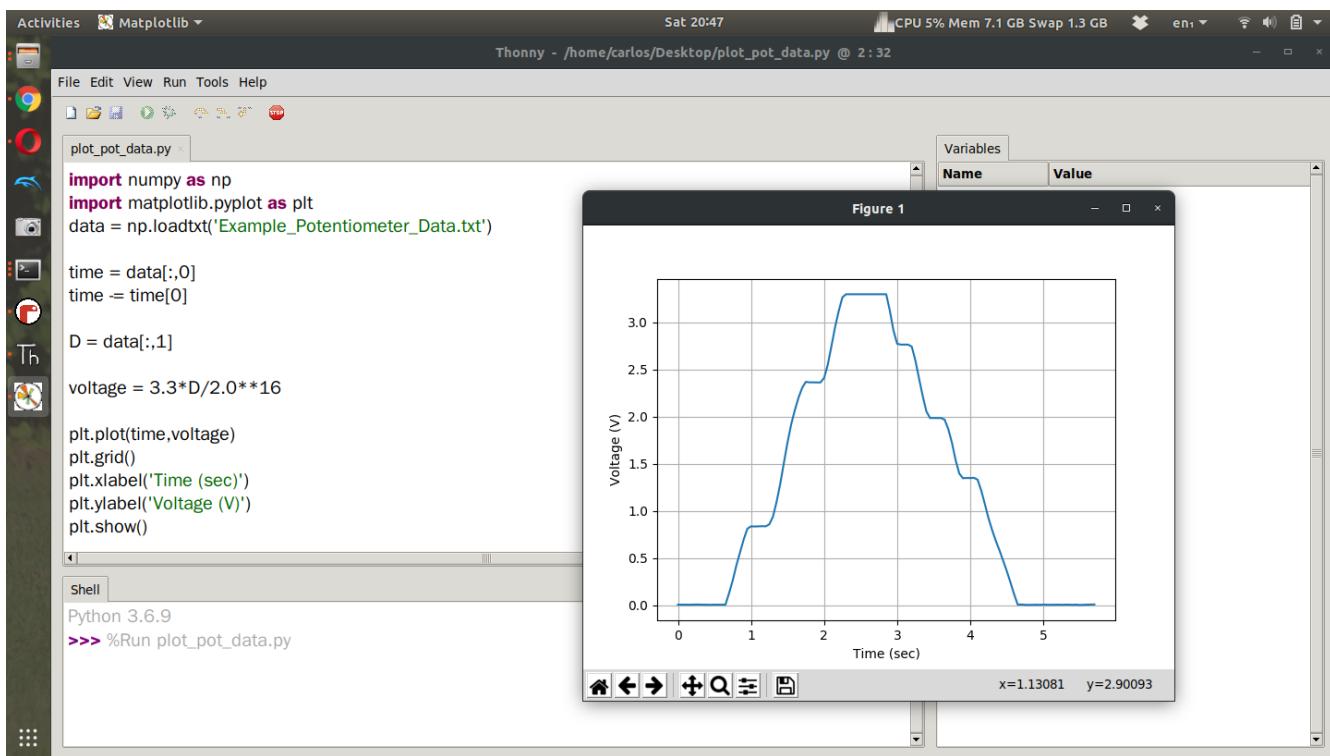

Your assignment for this lab is to do the same as I've done above. Wire up the potentiometer, read the analog signal and plot it in Python on your desktop computer. I've made some youtube videos on first just [creating the circuit and plotting the data](#) and then another video where I [write data to the CPX using method 3](#).

## 8.4 Assignment

Once you've completed the project above, upload a PDF with all of the photos and text below included. My recommendation is for you to create a Word document and insert all the photos and text into the document. Then export the Word document to a PDF. For videos I suggest uploading the videos to Google Drive, turn on link sharing and include a link in your PDF. Note that all code must be included in the appendix or you'll be penalized 10%.

1. Include a video of you wiggling the potentiometer and watching the digital signal in the Plotter in Mu go up and down (make sure your face is in the video at some point and you state your name) - 50%
2. Embed your plot of voltage vs time in a document and also include your code In Python both from the CPX and in Thonny or Spyder to plot - 50%

# 9 Wind Speed from Pitot Probe

## 9.1 Parts List


1. Laptop
2. CPX/CPB
3. USB Cable
4. Alligator Clips (x3)
5. Pitot Probe (Not included in kit at the moment so will need to buy this separately or borrow one)
6. Breadboard

## 9.2 Learning Objectives

1. Understand how pitot probes works
2. Understand the relationship between a voltage signal from a pitot probe to a pressure value
3. Understand the relationship between pressure and windspeed

## 9.3 Getting Started

Although a CPX has numerous sensors built in, you can easily augment the capabilities of the CPX using either I2C or just the ADC on board the CPX. In this lab, if you purchased a **pitot probe** you will be able to do this assignment. Since you don't need the pitot probe for very long you can always borrow one from some other team. Let's talk about the hardware and the wiring to get this to work.

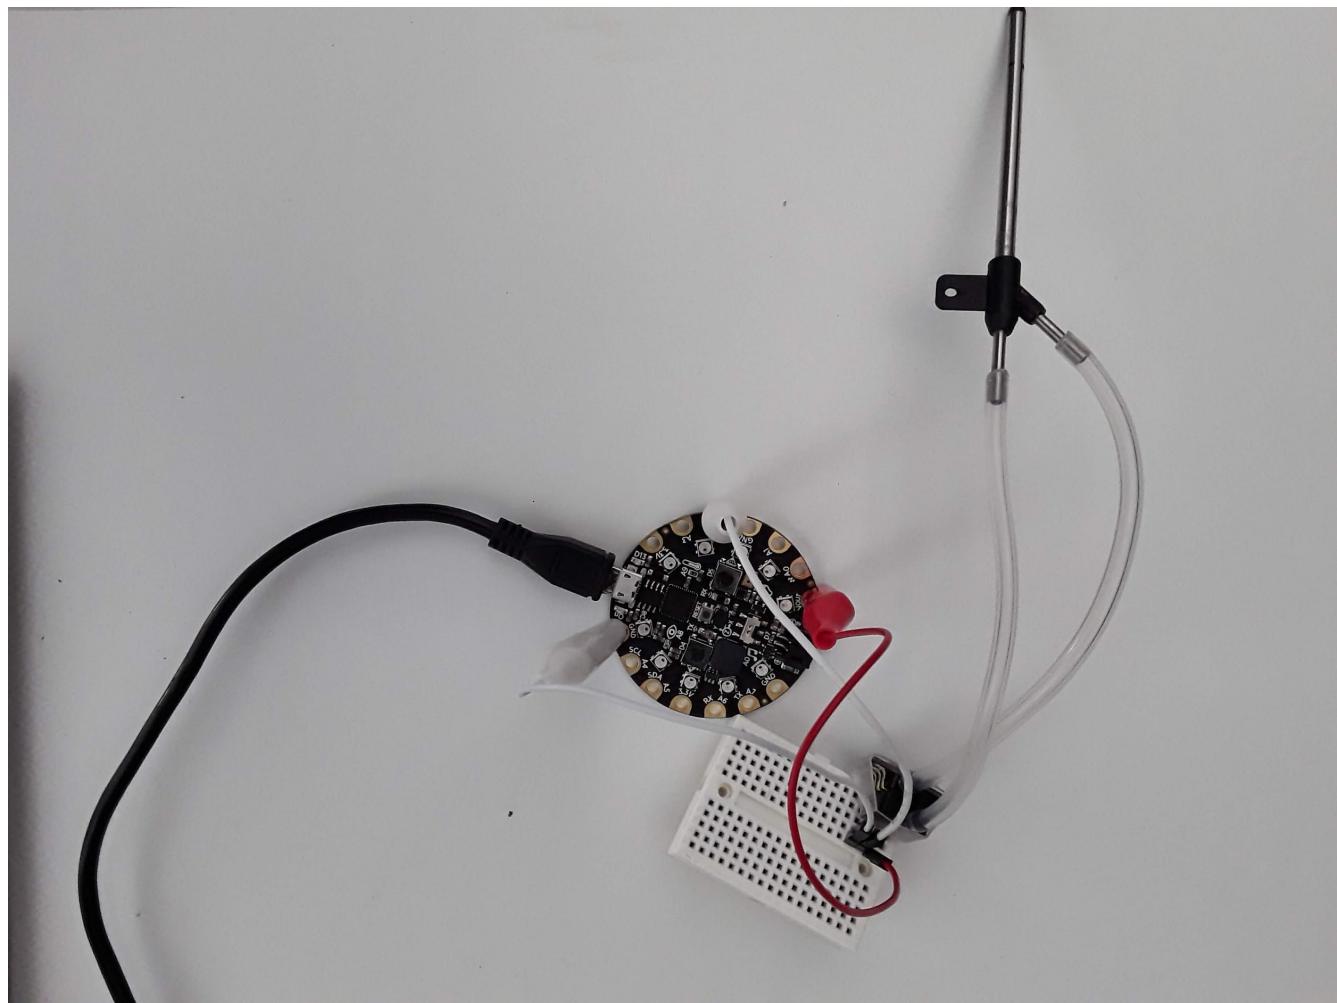

The pitot probe has two pressure taps that measure ambient pressure and stagnation pressure. These taps move through two silicon tubes to a pressure transducer that has a strain gauge in separating both pressures. When the pressure on one side of the transducer is larger than the other, it will flex the membrane and create strain. This strain runs through a wheatstone bridge with a voltage offset to the pin labeled analog. The transducer has 3 pins, +5V, GND and Analog. It is pretty straightforward how to wire this up but remember that +5V needs to go to VOUT, GND to GND and Analog to any analog pin. I chose pin A2. At that point it's very simple to just print the analog signal in bits to Serial. I've done this below. The code is the same [analog code](#) that we've used in the past.

```

1 import time
2 import board
3 import analogio
4
5 analog = analogio.AnalogIn(board.A2)
6
7 while True:
8     print((analog.value,))
9     time.sleep(0.05)

```

---

The goal of the experiment is to take pitot probe data for 15 seconds with no wind, then 15 seconds of data with a fan on and then 15 seconds of no wind data. You'll need to use one of the datalogging methods (See chapter [6](#)) to log both time and pitot probe analog value. Once you have that data, import the data into Python on your desktop computer and convert the signal to windspeed. In order to convert the analog value to windspeed you need to first convert the analog value to voltage. Remember that the ADC on the CPX is going to convert the analog signal from the pitot probe to a digital output. So use this equation first to convert the analog signal (which I call D) to voltage. The 2 to the 16th power represents the 16 bit ADC.

$$V = \frac{3.3D}{2^{16}} \quad (3)$$

Before converting Voltage to windspeed we need to first subtract off the bias from the pitot probe. I explain this process in this [accelerometer video](#). I've done this project before and have posted a video on Youtube about [Converting Pitot Probe Data to Windspeed](#). *There is a typo in the video. V1 is supposed to have a sqrt().* Once you have computed the bias you can compute the change in pressure using the equation below which converts the change in voltage to Pascals ( $V_b$  is the voltage bias you obtain when the wind is off). The data sheet states that the voltage is linearly proportional to pressure in Pascals which is nice.


$$P = 1000(V - V_b) \quad (4)$$

Using pressure, the equation below can be used to compute windspeed, where U is the windspeed and the density at sea-level ( $\rho$ ) is 1.225  $kg/m^3$ .


$$U = \sqrt{\frac{2P}{\rho}} \quad (5)$$

Using your data, create a plot of windspeed with time on the x-axis and windspeed on the y-axis. Some steps that might help you as you complete this project. First, have Mu plot the voltage coming from the pitot probe. If you've done everything right it will not be zero. The data sheet says there's an offset voltage of 2.5V so you will hopefully get something around 50,000 when you don't blow into the pitot probe. 50,000 multiplied by  $3.3/2^{16}$  is around 2.5V. Make a note of that average value you get so you can subtract it off later. Once you've verified you're reading the pitot probe correctly, blow into the pitot probe and using the Plotter or Serial, verify that the analog signal increases. If the signal decreases, it means the pressure taps on the pressure transducer are backwards and you need to flip them. Either that or just flip the sign in your plotting routine on your computer but flipping the tubes might be easier for you. Hopefully when you do this lab you will get some data that looks like this. In this

Figure you'll see that when the fan wasn't running the signal was something around 49,800 which is fine. It means your bias is around 2.5 volts. Every pitot probe and circuit will be different. You can then convert this signal to voltage then and then pressure and then finally wind speed.

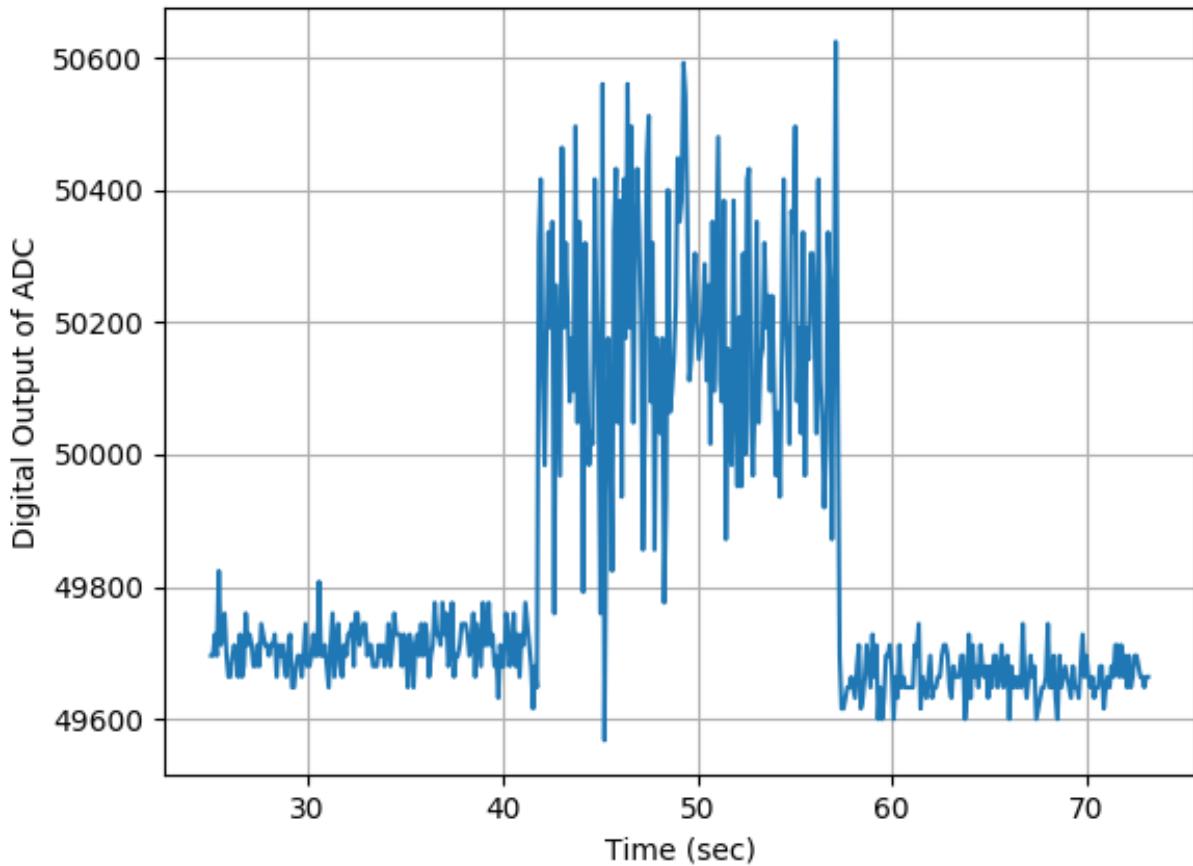

The code to accomplish this is relatively simple and a portion of the code is shown below. You'll see that when I subtracted the bias from the voltage I also zeroed out any negative values. That is, any delta voltage less than zero was set to zero. A couple of things about this chart. The data from the pitot probe is super noisy which means attaching a [complementary filter](#) is probably a good idea provided you don't over filter the signal and run into [aliasing issues](#). You can see that I implemented an offline complementary filter and plotted it in the orange line which helps the noise issue quite a bit. You'll also notice that the noise is about 2 m/s. It turns out that pitot probes are actually not very accurate lower than about 2 m/s. They would be great for an airplane or you driving down the highway but they wouldn't be very good to take wind data outside on a calm day.

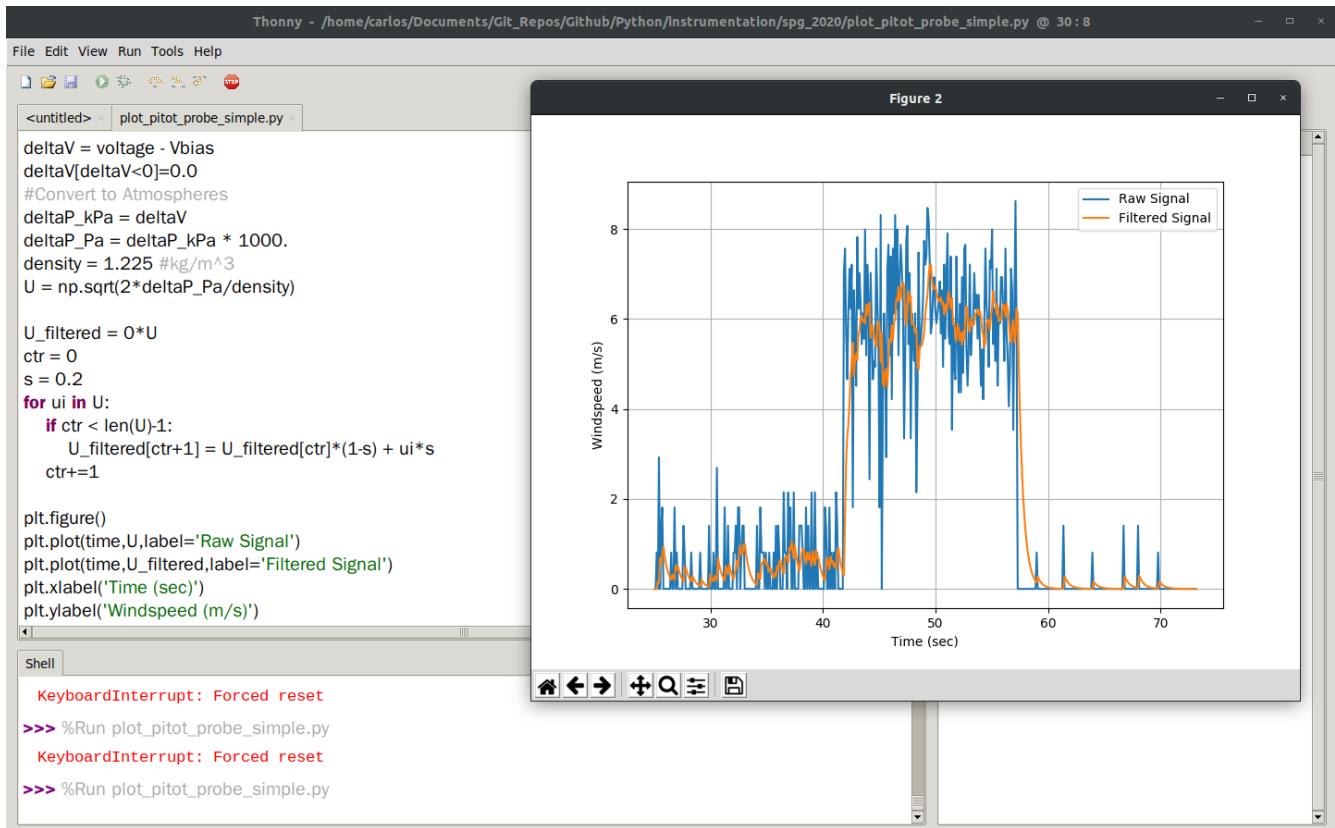

## 9.4 Assignment

Once you've completed the project above, upload a PDF with all of the photos and text below included. My recommendation is for you to create a Word document and insert all the photos and text into the document. Then export the Word document to a PDF. For videos I suggest uploading the videos to Google Drive, turn on link sharing and include a link in your PDF. Note that all code must be included in the appendix or you'll be penalized 10%.

1. If you borrowed a pitot probe return the pitot probe - Pass/Fail - If you don't return the pitot probe you receive a zero
2. Include a video of you taking data and explaining the circuit (make sure you are in the video) - 50%
3. Include a plot of the raw analog signal vs time just like I did above - 20%
4. Include a plot of windspeed vs time as I did above - 20%
5. Filter your signal using an offline complementary filter and include it in your plot like I did above - 10%

# 10 Circuit Playground (CPX/CPB) Modules

## 10.1 Parts List

1. Laptop
2. CPX/CPB
3. USB Cable

## 10.2 Learning Objectives

1. Understand the different sensors on the Circuitplayground
2. Learn the difference between high level and low level control
3. Get more practice plotting data from onboard sensors

## 10.3 Extra Help

If you need extra help on this assignment I have uploaded a youtube video where I [read the temperature and accelerometer from the CircuitPlayground Bluefruit](#)

## 10.4 Getting Started

The CPX has numerous built-in sensors. These include a light sensor, an IR sensor, an accelerometer, a microphone, a speaker, some neopixels, a temperature sensor and 8 analog inputs with ADCs and even I2C (pronounced I squared C - it's a kind of serial communication) that you can use to easily hook up more sensors to it. We're not going to utilize all of these sensors since that would be a rather large project. Instead we're going to learn how to use the temperature, light and sound sensors as well as the accelerometer. For each of these examples there is a relatively easy way to access the sensors using a built-in module called *adafruit\_circuitplayground.express* if you are using the CPX. If you are using the CPB you need to type *adafruit\_circuitplayground.bluefruit*. It's a very nice module because it imports everything on the board. The problem is you can run into module conflicts. This happens when two different modules try to access the same pins on the CP. Sometimes if you import *adafruit\_circuitplayground* you won't be able to import some other modules. **Note you might need to add the *adafruit\_circuitplayground* library to your lib/ folder on your CIRCUITPY drive.** Due to this module conflict issue, there are some low level control commands you can use to access each of the sensors on board. We're obviously going to learn the low level control method first and then I'll show you how to access the sensors using the *adafruit\_circuitplayground* module. **If you get a “currently in use” error it means you have a module conflict. Hence why I’m showing you the low level control method.**

## 10.5 Installing Modules


**One issue you’re going to run into when you run the codes below is that you won’t have some of the modules on your CPB/CPX.** To fix this you need to download the [CircuitPython Libraries](#). You need to download the appropriate version: 6.x, 7.x or 8.x. How do you know what version of CircuitPython you have? Well head over to your CIRCUITPY drive and open the boot\_out.txt file and it will tell you the version. Note that this is the same version as the .UF2 file installed back in the Getting Started labs (See Chapter 3). When you download the modules it will download a .zip file. Extract the .zip file on your desktop computer and then open the *lib* folder on your desktop and your CIRCUITPY. You then need to transfer the modules (ONLY THE ONES YOU NEED) from your desktop to your CPX/CPB *lib* folder. The reason why you can’t copy the entire folder is because the CPB/CPX only has 2MB of flash and the CircuitPython download is 4.1 MB at the time of this writing.

## 10.6 Low Level Control

### 10.6.1 Light

The light sensor on the CPX is just a simple photocell wired in series with a resistor. There is a lab on photocells (See chapter 14 if you’d like to do that lab first to learn about photocells. The GND leg of the photocell is connected to pin A8. You can check the pin by looking at the graphic of an eye on the CPX and taking a look at the digital pin next to it. We’ve already learned how to access analog pins (See chapter 8) in a previous lab so just use the code from that lab and change the pin to A8. Here’s what my code looks like when I change the pin to A8. I also

brought the Plotter up and moved my finger in front of the light to make sure the light was working. Verify that your CPX responds the same way before moving on.

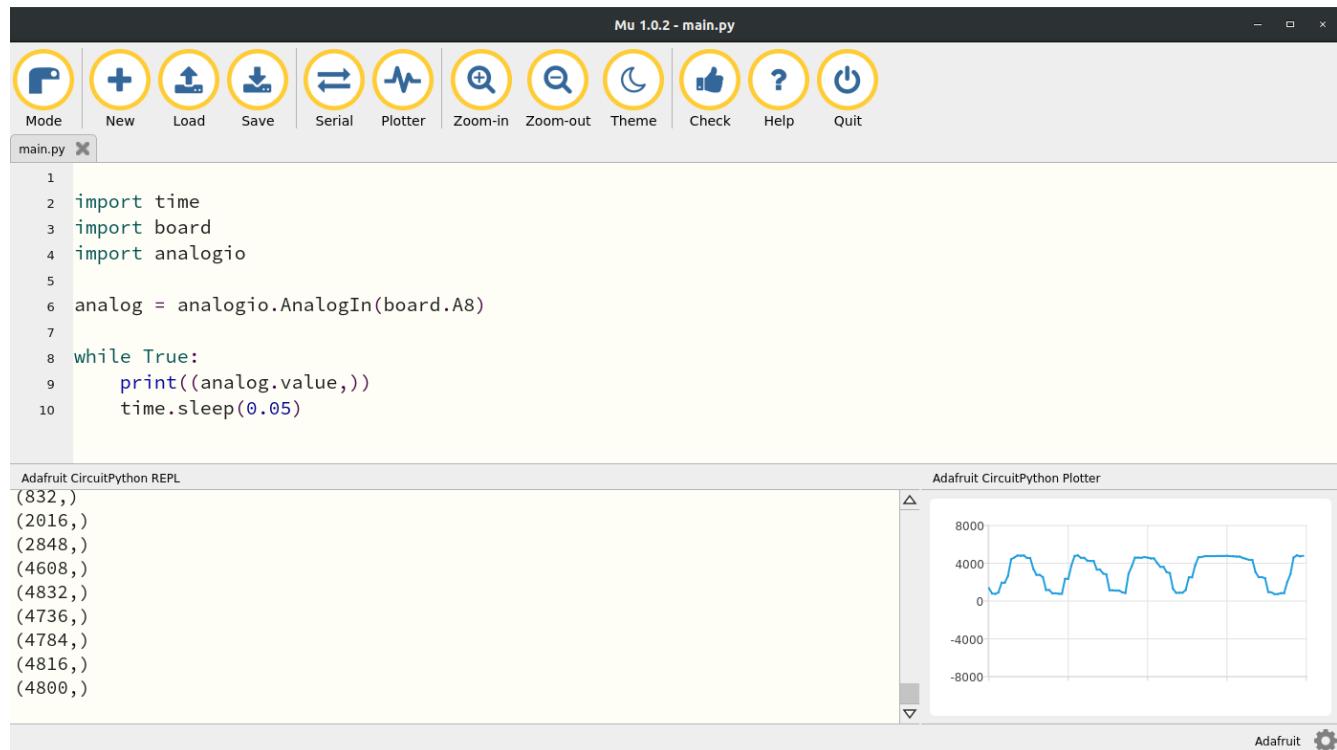

### 10.6.2 Sound

The sound sensor uses the audiobusio library and creates a mic object using the (Pulse Density Modulation) PDM library. You have to set the sample rate and the number of bits to use to capture the data. We're going to set the bits to 16 to utilize the whole spectrum and then set the sample rate to 16 kHz. It's not quite 44.1 kHz like most modern microphones but it will do. After creating the mic object we have to compute some root mean squared values and thus two functions are defined before the while true loop in the code. The code itself is shown below. The code starts on line 22 because the first 22 lines are [copyright from Dan Halbert, Kattni Rembor, and Tony DiCola from Adafruit Industries](#). I have edited the code a bit to fit my needs and uploaded [my version to Github](#). In the code line 23-27 import standard modules as well as some new ones. The array module is used to create array like matrices. The math module is used to compute functions like cos, sin, and sqrt. Then of course the audiobusio module is used to create the mic object on line 42. Notice the two functions defined on 33 and 39 which create a function for computing the mean and for computing the normalized root mean square value of the data stream. Basically what's going to happen is we're going to record 160 samples as defined on line 160. So on line 43 we create a hexadecimal array (hexadecimal: base 16 hence the num\_bits set to 16 on line 31) with 160 zeros. In the while true loop we're going to sleep for 0.01 seconds and then record some samples. Since we're sampling at 16 kHz the time it takes to record 160 samples is  $160/16000 = 16/1600 = 1/100 = 0.01$  seconds. Since we're taking 160 samples we need to compute some sort of average which is why the normalized root mean square value is computed on line 48.

```

22 # Circuit Playground Sound Meter
23 import array
24 import math
25 import audiobusio
26 import board
27 import time
28
29 # Number of samples to read at once.
30 NUM_SAMPLES = 160
31 num_bits = 16
32
33 def normalized_rms(values):
34     meanbuf = int(mean(values))
35     samples_sum = sum(float(sample - meanbuf) * (sample - meanbuf) for sample in values)
36     rms_mean = math.sqrt(samples_sum/len(values)) ##Notice that samples_sum = (sample-mean)**2
37     return rms_mean
38
39 def mean(values):
40     return sum(values) / len(values)
41
42 mic = audiobusio.PDMIn(board.MICROPHONE_CLOCK, board.MICROPHONE_DATA, sample_rate=16000, bit_depth=num_bits)
43 samples = array.array('H', [0] * NUM_SAMPLES)
44
45 while True:
46     time.sleep(0.01)
47     mic.record(samples, len(samples))
48     m = normalized_rms(samples)
49     print((m,))

```

When I run this code and talk normally into the microphone. I get this output in the Plotter. You'll notice that the data is pretty noisy in the beginning. It's possible we could increase the number of samples we take each loop by editing line 30 but that would slow down our code. So there's a tradeoff between filtering here and speed. That's something will investigate in some later labs.

The screenshot shows the Mu 1.0.2 IDE interface. At the top is a toolbar with icons for Mode, New, Load, Save, Serial, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. Below the toolbar is a code editor window titled "main.py" containing Python code for a microphone sensor. The code uses the audiobusio library to record samples from the microphone and calculate the normalized RMS value. It also includes a while loop with a sleep interval. To the left of the code editor is the "Adafruit CircuitPython REPL" window displaying a series of tuples representing sensor data. To the right is the "Adafruit CircuitPython Plotter" window showing a line graph of the sensor data over time.

```

41     return sum(values) / len(values)
42
43 mic = audiobusio.PDMIn(board.MICROPHONE_CLOCK, board.MICROPHONE_DATA, sample_rate=16000, bit_depth=num_bits)
44 # Record an initial sample to calibrate. Assume it's quiet when we start.
45 samples = array.array('H', [0] * NUM_SAMPLES) #8 bit must be in ByteArray format or B, 16 bit must be in Hexa
46 mic.record(samples, len(samples))
47 input_floor = 50
48
49 while True:
50     time.sleep(0.01)
51     mic.record(samples, len(samples))
52     m = normalized_rms(samples)
53     print((m,))

```

Adafruit CircuitPython REPL

```

(52.8045,)
(49.6323,)
(122.439,)
(171.046,)
(108.765,)
(97.9404,)
(82.1918,)

```

Adafruit CircuitPython Plotter

### 10.6.3 Temperature

The temperature sensor is actually a [thermistor](#). A thermistor is basically a thermometer resistor which means the resistance depends on temperature. This means that you can read the analog signal coming from the thermistor just by reading the analog signal from pin A9. If you look for the thermometer symbol on the CPX you'll see pin A9. Therefore, it is possible to just use the analogio library and just read in the analog voltage but in order to convert to celsius and then fahrenheit you need to use some heat transfer equations to convert the analog signal to celsius. Thankfully the folks at Adafruit have done it again with an *adafruit\_thermistor* module. If you head over to their [github on this module](#) you'll see the relevant conversion under the definition temperature which at the time of this writing is on line 86. [The Adafruit Learn system also does a bit of work to explain the conversion from voltage to temperature](#). For now though we will just appreciate the simplicity of the code below which is also [on my Github](#).

```

1 import time
2 import board
3 import adafruit_thermistor
4
5 #Temperature Sensor is also analog but there is a better way to do it since voltage to temperature
6 #Is nonlinear and depends on series resistors and b_coefficient (some heat transfer values)
7 #thermistor = AnalogIn(board.A9) ##If you want analog
8 thermistor = adafruit_thermistor.Thermistor(board.A9, 10000, 10000, 25, 3950)
9
10 while True:
11     temp = thermistor.temperature
12     #temp = thermistor.value #if you want analog
13     print((temp,))
14     time.sleep(0.5)

```

As always lines 1-3 import the relevant modules and then line 8 create the thermistor object. You'll notice the

input arguments are the pin which is A9 as well as the resistor values which are in series with the thermistor. These resistors are soldered to the PCB so they are fixed at 10 kOhms. The 25 is for the nominal resistance temperature in celsius of the thermistor and 3950 is the b coefficient which is a heat transfer property. Running this code and then placing my finger on the A9 symbol causes the temperature to rise just a bit. You'll notice the temperature rise quite quickly when I place my finger on the sensor but when I remove the sensor it takes some time before the sensor cools off. This has to do with the dynamic response of the sensor. We'll discuss this in some future labs on dynamic measurements. For now you can move on to the accelerometer.

```

Mu 1.0.2 - record_temperature_thermistor.py
Mode New Load Save Serial Plotter Zoom-in Zoom-out Theme Check Help Quit
main.py record_sound_simple.py record_temperature_thermistor.py
2 import board
3 import adafruit_thermistor
4
5 #Temperature Sensor is also analog but there is a better way to do it since voltage to temperature
Adafruit CircuitPython REPL
(29.0464,)
(29.0236,)
(29.0236,)
(29.0009,)
(29.0236,)
(28.9553,)
(29.0464,)
(29.0236,)
(29.0464,)
(29.0009,)
(28.9553,)
(29.0009,)
(29.0009,)
(28.978,)
(28.978,)
(29.0009,)
(28.9553,)

Adafruit CircuitPython Plotter
Adafruit

```

#### 10.6.4 Accelerometer


The accelerometer is a 3-axis sensor. As such it is going to spit out not just 1 value but 3 values. Accelerations in x,y and z or North, East, Down or Forward, Side to Side, Up and Down. Since it's reading 3 values we can't just read 3 analog signals (we can but the accelerometer chip design didn't want to do that) so instead we're going to use the I2C (I like indigo and square C. So I squared C. Not 12C or one two C. It's I squared C) functionality. I2C is a type of serial communication that allows computers to send strings rather than numbers. It's a much more complex form of communication but since it's standard we can just use the busio module which contains the I2C protocol.

```

1 import time
2 import board
3 import busio
4 import digitalio
5 import adafruit_lis3dh
6
7 ##Accelerometer is hooked up to SDA/SCL which is I2C
8 i2c = busio.I2C(board.ACCELEROMETER_SCL, board.ACCELEROMETER_SDA)
9 _int1 = digitalio.DigitalInOut(board.ACCELEROMETER_INTERRUPT)
10 lis3dh = adafruit_lis3dh.LIS3DH_I2C(i2c, address=0x19, int1=_int1)
11 lis3dh.range = adafruit_lis3dh.RANGE_8_G
12
13 while True:
14     x,y,z = lis3dh.acceleration
15     print((x,y,z))
16     time.sleep(0.1)

```

In this code we see a lot more imports than normal. In addition to the standard time, board and digitalio modules we need the busio module and the *adafruit\_lis3dh*. You might think that LIS3DH is a very weird name for an accelerometer but it's actually the name of the chip on your CPX. The chip itself is very standard and is well documented on multiple websites. [Here's one from ST](#). You can also buy the [chip on a breakout board from Adafruit](#) and then of course the Adafruit Learn site has plenty of tutorials on [reading Accelerometer data in CircuitPython](#). As always I've learned what I can from the relevant tutorials and created [my own simple version to read the accelerometer data and posted it to Github](#). I digress, lines 8-11 of the code do a lot. It first uses the SCL and SDA pins to set up an I2C object which establishes serial communication to the accelerometer. Line 9 creates an interrupt which is beyond the scope of this course. Finally, line 10 creates the actual accelerometer object by sending it the I2C pins, the hexadecimal address in the I2C protocol and finally the interrupt pin. Line 11 then sets the range. Line 14 in the while loop is where the x,y and z values of the accelerometer are read and then promptly printed to Serial on line 15. If I run this code and shake the sensor a bit I can get all the values to vary. If you put the CPX on a flat surface, the Z axis will measure something close to 9.81. The units of the accelerometer are clearly in  $m/s^2$ .

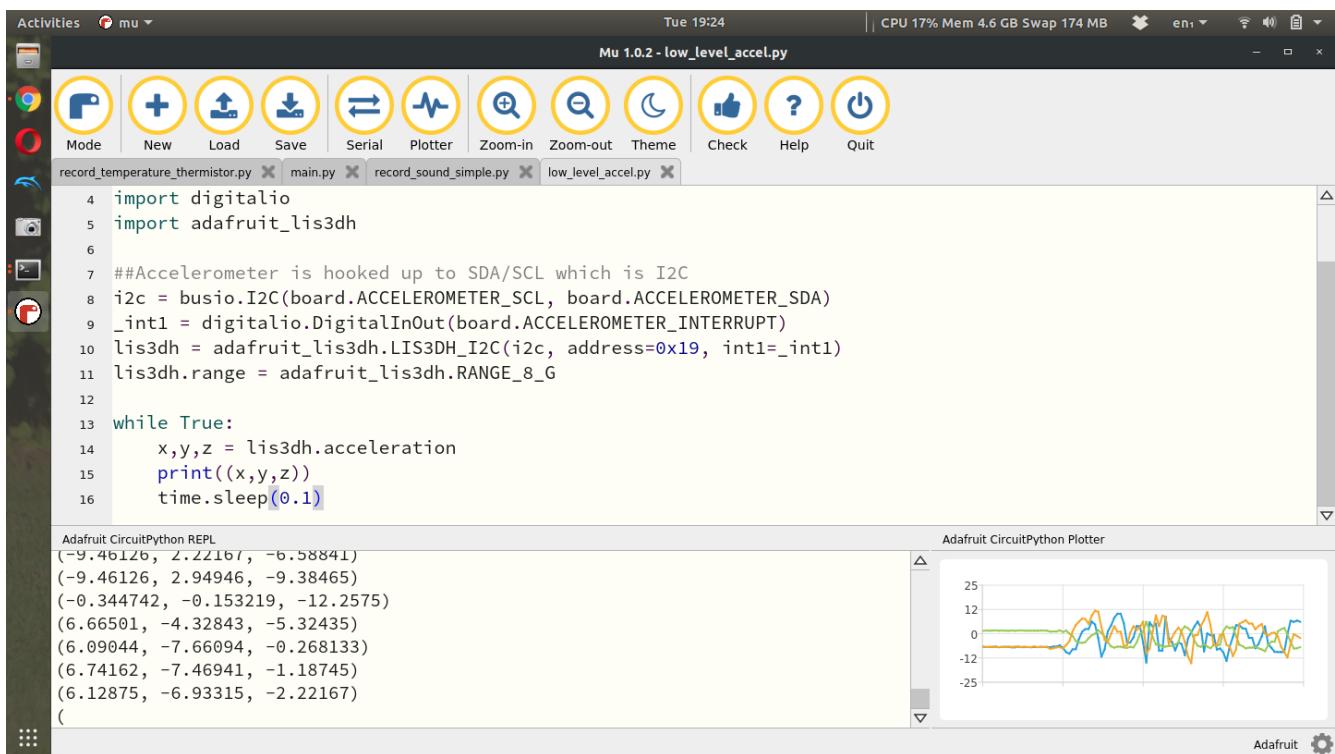

## 10.7 High Level Control

Alright so we've learned the hard way for all the sensors using low level control of the various sensors. Let's now import the simple adafruit\_circuitplayground.express module. The Adafruit Learn site offers pretty much every example code snippet you'd ever need for all the different push buttons and sensors on the CPX. Head over there if you ever need something outside of the scope of this text. As I said before, the main module you need to import is done by adding the following to the top of your code

```
from adafruit_circuitplayground.express import cpx
```

Note that you need to change that line to `adafruit_circuitplayground.bluefruit import cpb`. Then everywhere you see `cpx` you replace with `cpb`. This will import the `cpx` module into your working code. From here the commands to read different things are relatively simple. Here are the commands for all the various sensors

```
light = cpx.light

x,y,z = cpx.acceleration

temperature = cpx.temperature
```

There unfortunately is no simple module for the sound sensor. You'll still need to use the low level control no matter what. According to Adafruit though, if you get the Circuit Playground Bluefruit there is a [simple way to read the sound level](#). Implementing the various sensors into a while loop on my CPX looks like this.

The screenshot shows the Mu 1.0.2 code editor interface. The top bar displays 'Activities mu Tue 19:27 CPU 10% Mem 4.5 GB Swap 174 MB en'. Below the bar is a toolbar with icons for Mode, New, Load, Save, Serial, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. The main workspace contains four tabs: 'record\_temperature\_thermistor.py', 'main.py' (which is the active tab), 'record\_sound\_simple.py', and 'low\_level\_accel.py'. The code in 'main.py' is as follows:

```

1 from adafruit_circuitplayground.express import cpx
2 import time
3
4 while True:
5     t = time.monotonic()
6     light = cpx.light
7     temp = cpx.temperature
8     x,y,z = cpx.acceleration
9     print(cpx.light,cpx.temperature,x,y,z)
10    time.sleep(0.1)

```

Below the code is the 'Adafruit CircuitPython REPL' window, which displays sensor data in real-time. The data is as follows:

```

4 28.2297 -4.36673 -0.57457 8.61855
3 28.1846 -4.40504 -0.612875 8.42703
4 28.2072 -4.32843 -0.612875 8.35042
4 28.2072 -4.44334 -0.612875 8.46534
4 28.2297 -4.48165 -0.57457 8.54194
4 28.2072 -4.36673 -0.65118 8.46534
4 28.1846 -4.36673 -0.727789 8.69516
4

```

I left out the sound sensor stuff just because it kind of messes with the simplicity of the code above. The `adafruit_circuitplayground.express` module outputs just as before except for the light sensor. In the low level control we simply computed the voltage across the photocell but the `adafruit_circuitplayground.express` module outputs data in [Lux](#).

## 10.8 Assignment

Using either **low or high level control** take at least 60 seconds of data for each of the sensors above. Make sure log time and the raw sensor value at 1Hz or faster. To make the project more challenging, try and log all sensor data all at once. Import the data onto your desktop and make 4 plots total with time on the x-axis and the sensor data on the y-axis.

Once you've completed the project above, upload a PDF with all of the photos and text below included. My recommendation is for you to create a Word document and insert all the photos and text into the document. Then export the Word document to a PDF. For videos I suggest uploading the videos to Google Drive, turn on link sharing and include a link in your PDF. Note that all code must be included in the appendix or you'll be penalized 10%.

1. Using the Plotter in Mu, take a video of you plotting light, sound, temperature and acceleration one at a time while varying light, sound, temperature and acceleration individually and watching the plot change in Mu (be sure to be in the video and introduce yourself) - 30%
2. Copy and paste your CPX code that you used to log data for each of the sensors - 20%
3. Copy and paste your Python desktop code that you used to plot data for each of the 4 sensors - 20%
4. Include 4 plots with time on the x-axis and sensor data on the y-axis (No screenshots) - 30%

# 11 Integrating Acceleration

## 11.1 Parts List

1. CPX/CPB
2. USB Cable
3. Laptop
4. Some sort of temporary adhesive
5. Automobile

## 11.2 Learning Objectives

1. Taking acceleration data
2. Numerical Integration
3. Data is not perfect


## 11.3 Getting Started

The code for this lab is to have the CPX log acceleration. So when you're done with this lab you will hopefully have a data file with 4 columns of data: time, acceleration x, acceleration y, acceleration z. The code I'm using is the same as the lab on accelerometers (See chapter [10.6.4](#)). I'm using method 1 for datalogging so I'm just having it print to Serial (See chapter [6](#)).

```
 1 import time
 2 import board
 3 import busio
 4 import digitalio
 5 import adafruit_lis3dh
 6
 7 ##Accelerometer is hooked up to SDA/SCL which is I2C
 8 i2c = busio.I2C(board.ACCELEROMETER_SCL, board.ACCELEROMETER_SDA)
 9 _int1 = digitalio.DigitalInOut(board.ACCELEROMETER_INTERRUPT)
10 lis3dh = adafruit_lis3dh.LIS3DH_I2C(i2c, address=0x19, int1=_int1)
11 lis3dh.range = adafruit_lis3dh.RANGE_8_G
12
13 while True:
14     x,y,z = lis3dh.acceleration
15     print((x,y,z))
16     time.sleep(0.1)
```

The code on Github has a sleep of 0.1 seconds but make sure to have the CPX take data as fast as possible. A sleep of 0.01 is probably good. You will probably get a lot of data points for this experiment. Once your code is working, place the CPX on your dashboard with one of the axes of the accelerometer pointing towards the nose of your car. Try and place the CPX on as flat a surface as possible. You can use 3M tape or duct tape or hot glue. Just make sure you don't damage your car and make sure the CPX is well anchored to the dashboard. This way when the car accelerates, the CPX will measure that acceleration. Note, if you'd like to do this with a bike or some other motor vehicle that is just fine. Just make sure to take pictures and videos when you do the experiment. I suggest you do this in a parking lot for safety reasons. I am not responsible for any damage done to your vehicle or anyone else because you are doing this project. Once you have the CPX anchored, accelerate your vehicle to 20 mph (or however fast you are comfortable driving) and then slam on the brakes. Once your data is logged, plot your acceleration in Python on your desktop computer. After doing the experiment myself, this is what my acceleration plot looks like. I had to clip the time series to only include the part from where I accelerated and decelerated quickly. I also subtracted the first data point from each accelerometer axis to zero it out and subtract


off the bias. Since I took some data for a bit before I started moving I could have averaged the first few data points to obtain the bias. [I've done this in a Youtube video if you're unsure what I mean](#). Instead just to get something working properly I went ahead and just used the first data point.

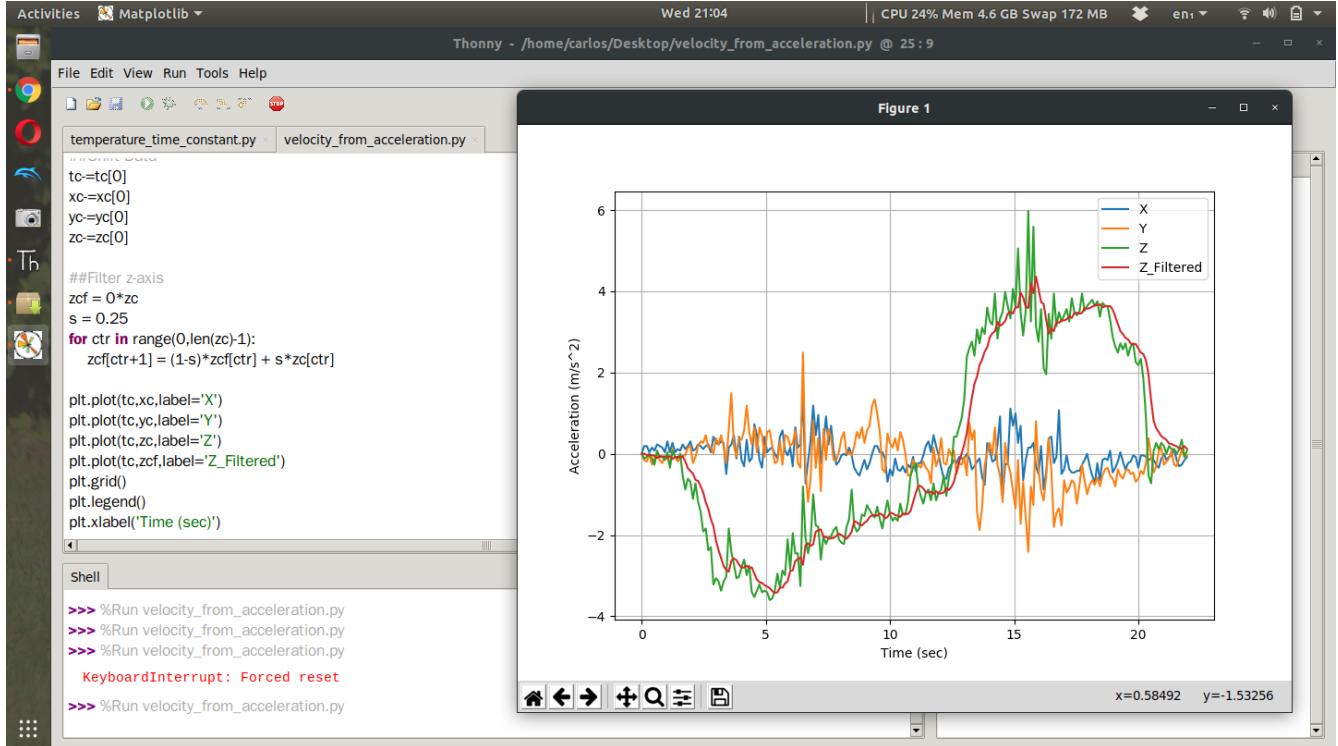

It's clear from the plots that the z axis was oriented towards the nose of the car. In this case I am going to have to flip the z-axis since the beginning is acceleration and the end is deceleration. I also through the acceleration in the z-axis through a complementary filter with a filter value of 0.25. I think it makes the acceleration profile a bit less jumpy. I then used a Riemann sum and integrated the acceleration data points to get velocity. The equation itself looks like this:

$$V_i = \sum_{n=0}^i (a_i - a_0)\Delta t \quad (6)$$

This of course assumes the initial velocity is zero. Notice that I take the individual acceleration points and subtract off the bias. Computing that summation by hand is pretty trivial but getting the code to work is another story. For a Riemann sum we're going to use a for loop where we loop through all the data points. The good news is that the time between data points is the same so we can just treat that as a constant. Once you have acceleration integrated you can plot velocity. This is what mine looks like after I did the experiment. According to my plot I accelerated to about 45 mph. I guess I can't lie in this instance. I said to accelerate to 20 mph but I really wanted to see a large change in acceleration so I punched it. Notice though that at the end of the time series the velocity is negative. This is because as time goes on you are integrating error and the error just gets worse.

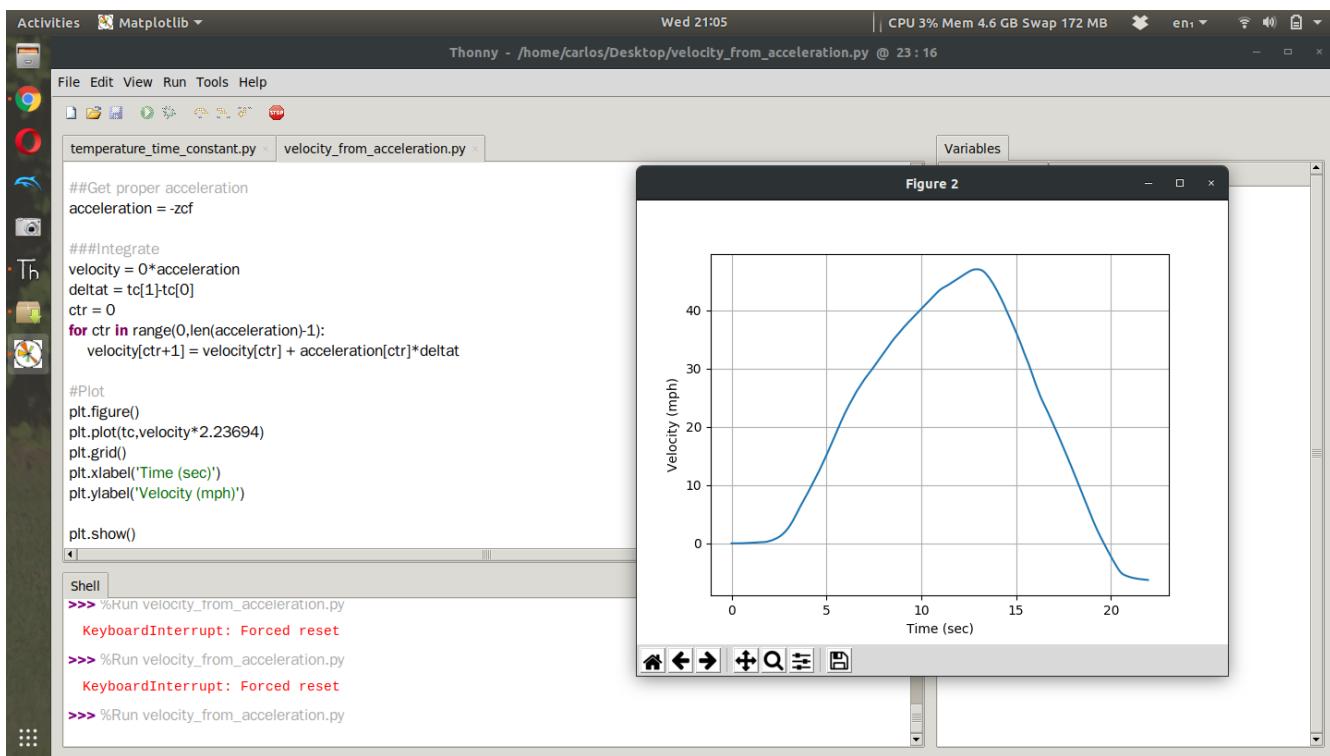

This is why speedometers are used. They are just much more accurate than integrating acceleration which is prone to bias and drift. [This folder on Github has some codes that will help with your project](#). Note, that some of those codes have a bias filter, truncation filter and complementary filter. That code may not work for you and you may need to tune the filters for your specific data set. Make sure to understand what each filter does and think about how it applies to your data set otherwise your code may throw an error due to the differences in your data set.

## 11.4 Assignment

Once you've completed the project above, upload a PDF with all of the photos and text below included. My recommendation is for you to create a Word document and insert all the photos and text into the document. Then export the Word document to a PDF. For videos I suggest uploading the videos to Google Drive, turn on link sharing and include a link in your PDF. Note that all code must be included in the appendix or you'll be penalized 10%.

1. Record yourself in your vehicle explaining how you mounted your CPX to your vehicle in some way. Explain how you plan on taking data and what speed you plan to accelerate to. - 25%
2. Plot your accelerometer data and apply whatever signal conditioners are necessary to make it look obvious as to when you accelerated and decelerated as I did. Include the plot in your submission. Include a small paragraph explaining what signal conditioners you applied. - 25%
3. Integrate acceleration and plot velocity as a function of time. Comment on whether or not the maximum velocity is the same as what you did in your actual car - 25%
4. Integrate the velocity and compute position. Plot your position as a function of time and include that in your report. Although you didn't measure how far you went, comment on the accuracy of the plot and whether or not you think you traveled that far. - 25%

## 12 Building a Pedometer using an Accelerometer

### 12.1 Parts List

1. Laptop
2. CPX/CPB
3. USB Cable
4. External Battery Pack

### 12.2 Learning Objectives

1. Understand how to run CPB/CPX while not tethered to a computer
2. Reinforce bluetooth tech for data transfer
3. Understand post-processing for debugging to be used for online calculations
4. Understand the fundamentals of how a pedometer works

### 12.3 Getting Started

A pedometer is a device that counts the number of steps. Typically these are worn as watches with popular brands like Garmin or Fitit owning the market share at the time of this writing. It turns out though that your phone and apps like Google Fit can also track steps just by being inside your pocket all day. The way they do this is by measuring the acceleration, angular velocity and potentially even the angles (using a magnetometer) to count steps. In this lab this we will just focus on attempting to get steps using accelerometer data.

### 12.4 Gathering Accelerometer Data


First we need to make sure we can gather accelerometer data. The low level accelerometer code is relatively simple and is explained in the Modules lab (Section 10). In order to gather the accelerometer data while running you'll need to be able to operate the CPB/CPX untethered from a computer. This means you have to use Method 3 or 4 (Section 6 and 7). Remember that Method 1 and 2 require a computer and running with a computer would be difficult. Method 3 requires a lot of setup to log data directly to the disk so for this lab we will just use the Bluetooth module to send data directly to your phone. Note that if you have a CPX you will have to use Method 3. The best way to do this experiment is with a partner. Have the CPB/CPX measure acceleration and place the entire device with a battery pack inside the runners pocket. Then have your partner connect to the CPB with the Adafruit Connect app and log data using the UART and Export to txt function. Remember not to run too far because the Bluetooth signal distance is only about 30 feet. See if you can combine the Bluetooth code and the acceleration code into one code to send time and the 3-axis accelerometer data. If you're still having trouble, code for this lab can be found on [Github](#). Note if you have a CPX you will need to combine the accelerometer code with the Method 3 version of data logging.

Running the CPX/CPB untethered does require a few extra steps besides writing the code. The first step is obviously to write the software that you want to run on the CPX/CPB. I recommend testing the code extensively while tethered to the computer so you can debug using the REPL. Once you're certain the code works you can disconnect the CPX/CPB and connect it to a battery pack. Once again I recommend testing the code with the battery back before you perform the experiment. In this experiment I used an external USB battery bank as shown in the photo below. My code also utilizes the neopixel library to turn on some LEDs.




## 12.5 Computing Number of Steps: Post-Processing

Using the hardware and software defined above I had my partner run down the hallway after I ensured there was a solid connection between the CPB and my smart phone. I then exported the data to a text file and plotted the raw data using Thonny.

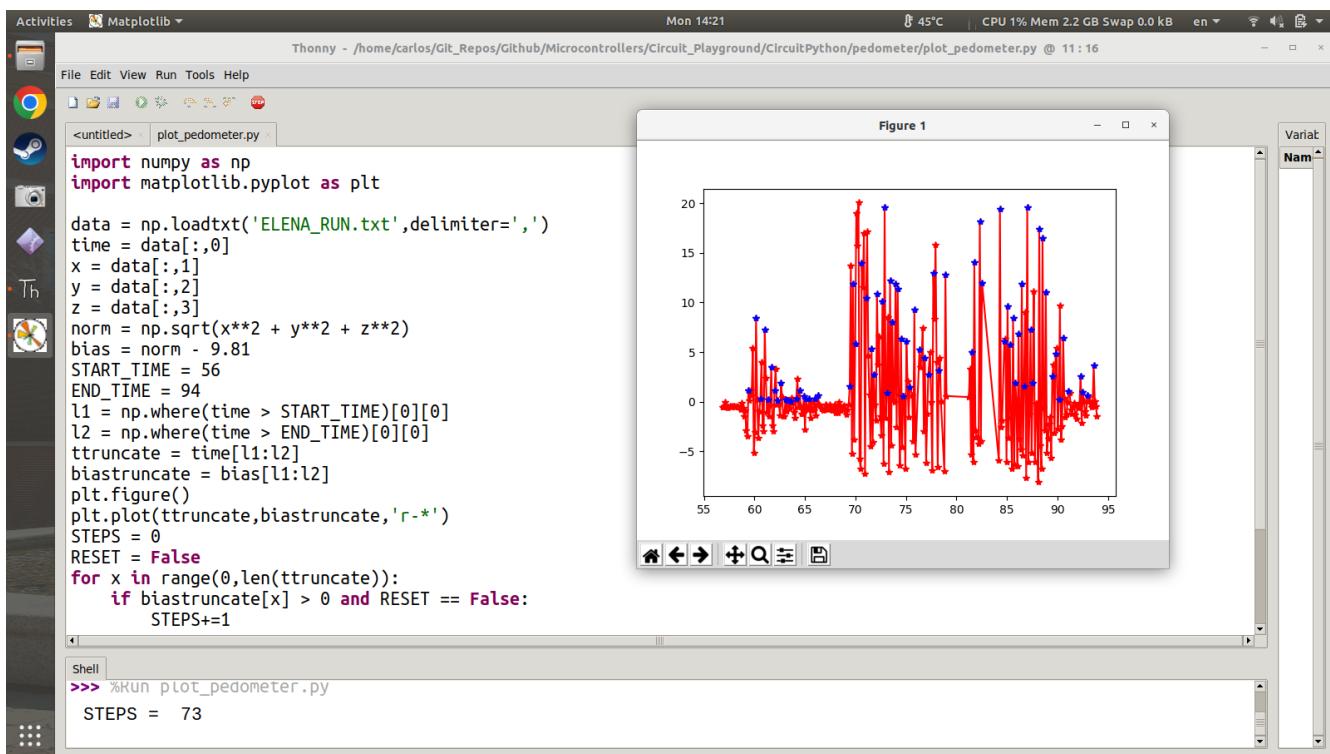


Upon inspecting the raw data it seems as though my partner began running around 68 seconds. At about 80 seconds my partner reached the end of the hallway and the CPB got a bit out of range. As such there is a gap in the data. The accelerometer streams return once my partner begins running back down the hallway. In order to simply look at the data of one run the data was truncated from 69 seconds to 79 seconds as shown in the Figure below.

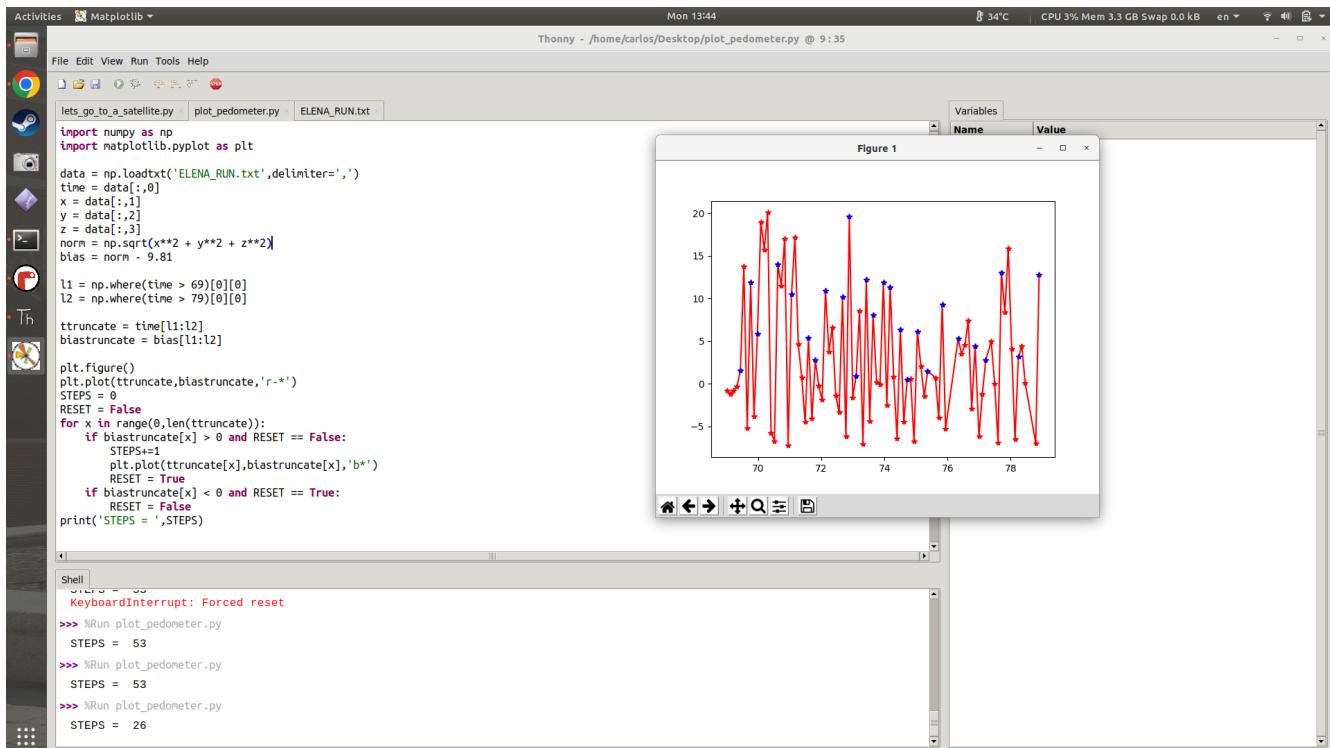

In order to count steps the algorithm is fairly simple and not very robust but it does at least give you a sense of how data can be analyzed to obtain steps. First, the norm of the accelerometer data is computed and then the norm is subtracted by  $9.81 \text{ m/s}^2$ . When glancing at the data the steps seem to be taken when the result of the norm-9.81 goes from positive to negative. It is possible that there is some aliasing in the data but for a simple experiment like this a rudimentary algorithm can be created. First the STEP counter is set to zero and then a for loop is created to loop through the data. When the data goes from positive to negative a STEP is created. This is done by using a RESET flag and checking whether or not the data becomes positive. This algorithm computes 26 steps which seems reasonable for the length of the hallway.

## 12.6 Computing Number of Steps: Online

The benefit of post-processing in Python is that the CPX/CPB run a almost identical derivative of Python called CircuitPython. This means that almost any line of code used in Python can be copied directly onto the CPX/CPB as shown in the Figure below.

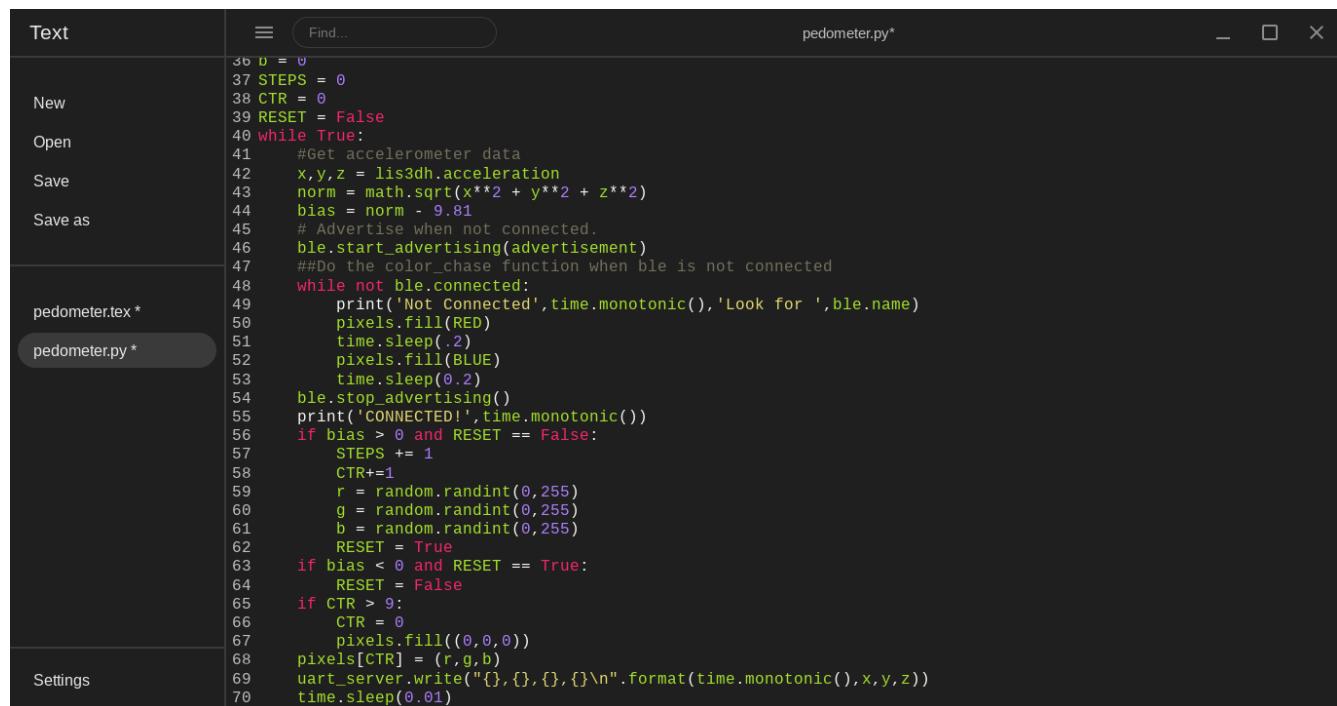

```

Text Find... pedometer.py*
New STEPS = 0
Open CTR = 0
Save RESET = False
Save as
40 while True:
41     #Get accelerometer data
42     x,y,z = lis3dh.acceleration
43     norm = math.sqrt(x**2 + y**2 + z**2)
44     bias = norm - 9.81
45     # Advertise when not connected.
46     ble.start_advertising(advertisement)
47     ##Do the color_chase function when ble is not connected
48     while not ble.connected:
49         print('Not Connected',time.monotonic(),'Look for ',ble.name)
50         pixels.fill(RED)
51         time.sleep(.2)
52         pixels.fill(BLUE)
53         time.sleep(.2)
54     ble.stop_advertising()
55     print('CONNECTED!',time.monotonic())
56     if bias > 0 and RESET == False:
57         STEPS += 1
58         CTR+=1
59         r = random.randint(0,255)
60         g = random.randint(0,255)
61         b = random.randint(0,255)
62         RESET = True
63     if bias < 0 and RESET == True:
64         RESET = False
65     if CTR > 9:
66         CTR = 0
67         pixels.fill((0,0,0))
68         pixels[CTR] = (r,g,b)
69         uart_server.write("{}\n".format(time.monotonic(),x,y,z))
70         time.sleep(0.01)

pedometer.tex*
pedometer.py*

```

You can see that the STEPS counter is set to zero before the infinite while loop and then after connection the RESET flag and bias value are checked for a switch from positive to negative. Some code is added to change the pixels on the CPB so that the user can see a step change. The raw data is still transmitted via bluetooth but it would be a neat exercise to have the CPB transmit the number of steps to a cell phone for instant feedback of the number of steps.

## 12.7 Assignment

Once you've completed the project above, upload a PDF with all of the photos and text below included. My recommendation is for you to create a Word document and insert all the photos and text into the document. Then export the Word document to a PDF. For videos I suggest uploading the videos to Google Drive, turn on link sharing and include a link in your PDF. Note that all code must be included in the appendix or you'll be penalized 10%.

1. Include a video of you gathering accelerometer data via bluetooth - 30%
2. Include a video of your partner running down the hallway. How many steps did they take? - 30%
3. Include a plot of accelerometer data and how many steps your partner took according to the accelerometer data - 30%

4. Compare the results from the accelerometer data and the actual number of steps in the video. Are they the same? Different? Why or why not? - 10%

## 13 Inertial Measurement Unit - Accelerometer, Rate Gyro, Magnetometer

### 13.1 Parts List

1. Laptop
2. CPX/CPB
3. USB Cable
4. **LSM6DS33+LIS3MDL** (Not included in kit. Note that other Inertial Measurement or "DOF" Sensors will work for this lab you will just have to change the code to accommodate the change in hardware)
5. Alligator Clips (x4)
6. Bread Board
7. Soldering iron

### 13.2 Learning Objectives


1. See and understand the concept of soldering
2. Understand the I2C protocol at a high level
3. Learn the components of an IMU (Accelerometer, Rate Gyro, Magnetometer)
4. Read IMU data and plot

### 13.3 Getting Started


In this lab we're going to use this an external sensor to measure angular velocity and the magnetic field of the surrounding environment.



The sensor above is the **LSM6DS33+LIS3MDL**. You basically have 2 separate microchips in one. The first (LSM6DS33) is a 3-axis accelerometer and 3-axis rate gyro. The first measures acceleration and the second measures angular velocity. The LIS3MDL is a 3-axis magnetometer which measures magnetic fields. The three of these sensors put together (accelerometer, rate gyro, magnetometer) is called an IMU (Inertial Measurement Unit). It's actually possible to measure roll and pitch of an airplane and heading using the magnetometer. Combining the angular velocity of the rate gyro can create a complete attitude estimation algorithm for spacecraft. This sensor does not come standard in the current iteration of the kit. You can purchase one on Adafruit for only \$10 at the time of this writing. The interesting thing about this device is that you can actually purchase the LSM6DS33 and LIS3MDL separately but this breakout board has both chips on board. The goal of this lab is not necessarily to use this specific sensor but to understand IMUs and I2C protocol. Most if not all breakout boards on the Adafruit website use I2C communication. You'll know if the breakout board uses I2C if you find SDA/SCL pins on the board. It will also say it in the quick description of the sensor.

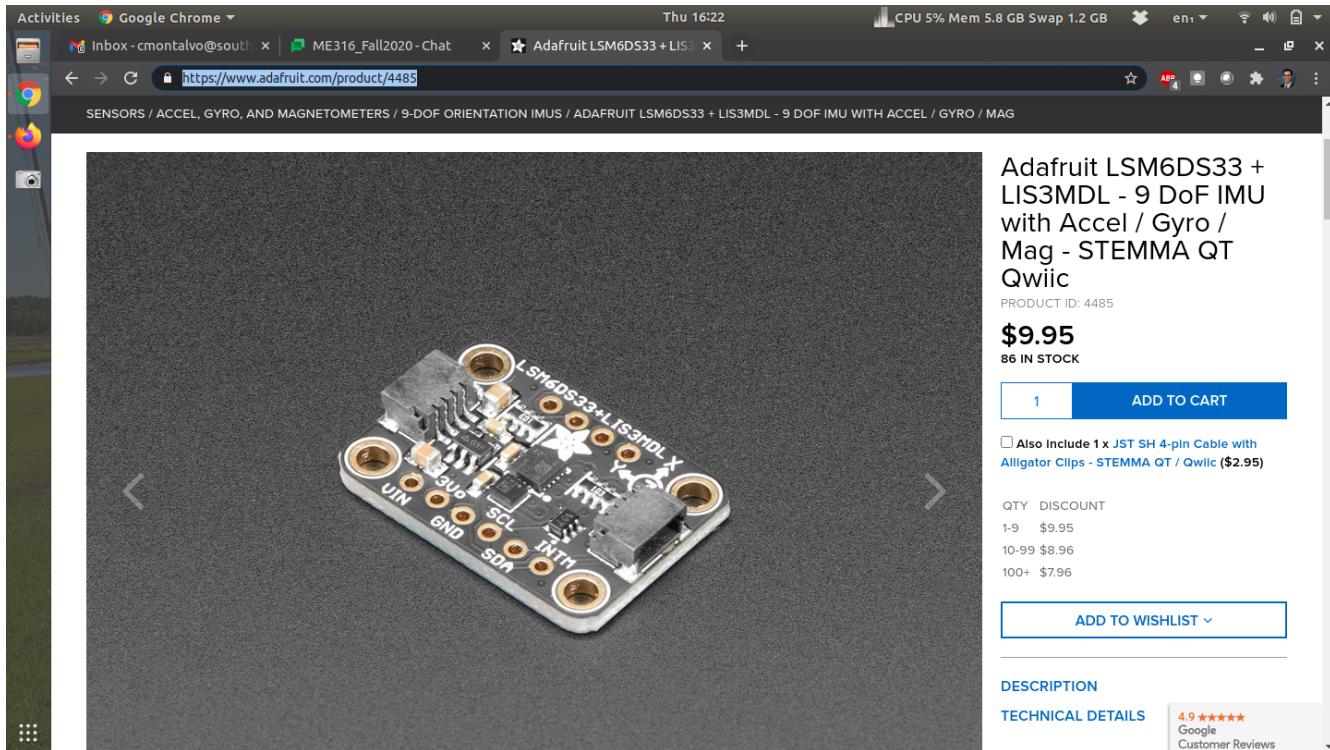

When you open the packaging of this breakout board you'll notice that the header pins are missing. First you'll need to cut a row of 4 and 6 for the top and bottom side of the board and solder the header pins to sensor. If you're taking my class you can stop by my lab one day and I'll solder this for you or teach everyone about soldering during a lecture session of class. If you are taking this class elsewhere you have two options: try and find someone who can solder this real quick (only takes about 5 minutes) or buy your own soldering iron and try to solder yourself. Once the device is soldered you can "plug" it into a breadboard. Then, using 4 alligator clips you need VOUT (5V) to run to (VIN), GND to GND and then SDA to SDA and SCL to SCL.

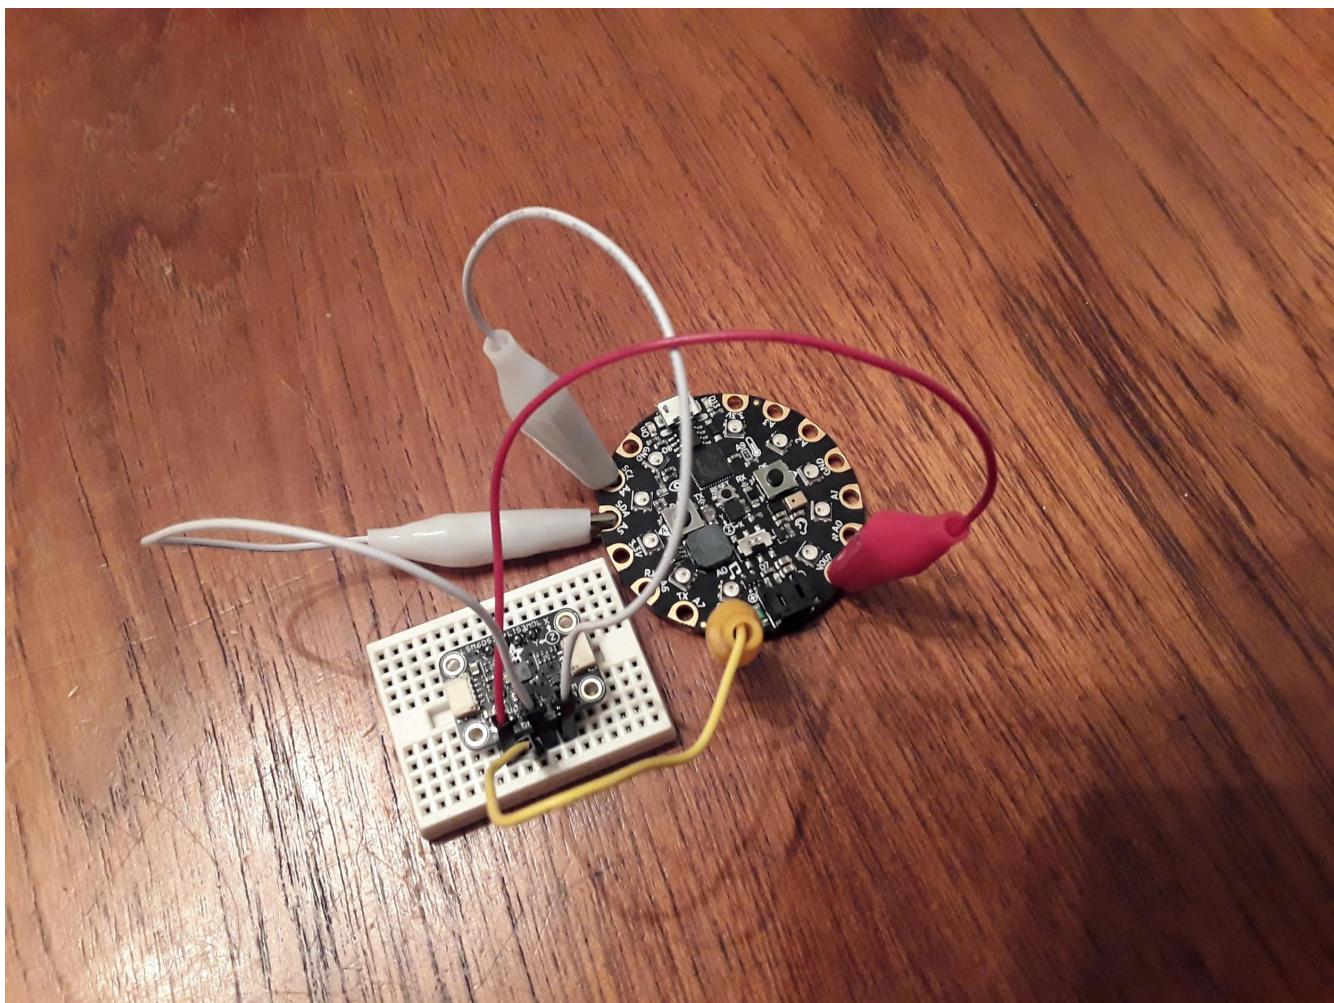

Believe it or not the photo above was actually wired wrong. I had SDA to SCL and SCL to SDA. You need to make sure you have the proper wires going to the correct pins or it won't work. SDA and SCL are 2 pins for something called I2C (pronounced I squared C) where I is I as in "I am a billy goat" or "I like to code". I2C is beyond the scope of this project but just know it's a type of serial communication that uses hexadecimal addresses.

Once you have the circuit wired and soldered it's time to work on software. First want to make sure you have your [Circuit Python UF2](#) up to date. In this example I'm using the 6.X version. Once I updated my UF2 I also updated my [Circuit Python Libraries](#). The Circuit Python Libraries download as a zip file. You need to unzip the folder and go into the lib folder and grab the following python modules.

1. adafruit\_bus\_device
2. adafruit\_register
3. lis3mdl
4. lsm6ds33

There will be folders for some and just floating .mpy files for others which are python modules that you can import just like time, board and busio as we've done in the past. Put those files into your lib folder on your CIRCUITPY drive. If the lib folder doesn't exist you just need to make one. Once you have the necessary modules you can run some example code. The Adafruit Learn page has a [tutorial for the LSM6DS33](#). The problem with the tutorial is that it seems like it was written for the Raspberry or some other microcontroller. As such I had to find some example code on [Adafruit's Github](#). After following both tutorials I was able to make my own script and upload it to my [Github](#).

---

```

1 import time
2 import board
3 import busio
4 import digitalio
5 import adafruit_lis3dh
6 from adafruit_lsm6ds.lsm6ds33 import LSM6DS33
7
8 i2c_ext = busio.I2C(board.SCL, board.SDA)
9
10 #print(dir(adafruit_lsm6ds))
11 sensor_ext = LSM6DS33(i2c_ext)
12
13 ##Accelerometer is hooked up to SDA/SCL which is I2C
14 i2c = busio.I2C(board.ACCELEROMETER_SCL, board.ACCELEROMETER_SDA)
15 _int1 = digitalio.DigitalInOut(board.ACCELEROMETER_INTERRUPT)
16 lis3dh = adafruit_lis3dh.LIS3DH_I2C(i2c, address=0x19, int1=_int1)
17 lis3dh.range = adafruit_lis3dh.RANGE_8_G
18
19 while True:
20     #x,y,z = lis3dh.acceleration
21     #xe,ye,ze = sensor_ext.acceleration
22     gx,gy,gz = sensor_ext.gyro
23     #print((x,xe,y,ye,z,ze))
24     print((gx,gy,gz))
25     time.sleep(0.1)

```

---

In the code above lines 1-6 import all the modules with line 5 importing the accelerometer on board the CPX and line 6 importing the external sensor wired up to SDA and SCL. Line 8 creates an I2C object using the SDA and SCL pins from the alligator clips and line 11 creates the sensor object. I also include lines 14-17 to include the onboard accelerometer. Notice I can access both sensors no problem. In the while loop line 20 checks the accelerometer on the CPX, line 21 checks the accelerometer on the breakout board and line 22 checks the angular velocity on the breakout board. Lines 23 and 24 print to serial and output to the plotter. Note that some lines are commented out because I wanted to try one thing at a time.

With both accelerometers printing to the Plotter I could move the CPX and the breakout board in unison and get the following output.

start\_stop\_w\_switch.py

```
8 i2c_ext = busio.I2C(board.SCL, board.SDA)
9
10 #print(dir(adafruit_lsm6ds))
11 sensor_ext = LSM6DS33(i2c_ext)
```

Adafruit CircuitPython REPL

```
(-3.33291, -4.61819, -3.83947, -1.86999, 1.71585, 8.25404)
(-5.7457, -5.66142, -4.32843, -1.99647, 6.18123, 7.4333)
(-6.43519, -5.66022, -4.21351, -2.55912, 5.36266, 6.14477)
(-7.23959, -8.01476, -4.13691, -2.85942, 3.98708, 4.47697)
(-8.61855, -8.91087, -3.63894, -2.71226, 3.98708, 3.82253)
(-8.81008, -8.78644, -4.0603, -3.71007, 2.75794, 3.68495)
(-7.94866, -7.8664, -4.71148, -3.58429, 2.52811, 3.53061)
(-7.04886, -6.96311, -5.13283, -3.69571, 4.55826, 4.34058)
(-5.17113, -5.3324, -5.09452, -4.28315, 6.62671, 6.48335)
(-3.56234, -5.54277, -3.33251, -4.02114, 6.89484, 7.11147)
(-1.68541, -2.55434, -2.06845, -1.22991, 8.1589, 8.8008)
(-1.45558, -3.16211, -1.99184, -1.54935, 10.8402, 10.3836)
(-0.0766094, -1.2335, -0.306437, -0.638883, 10.687, 11.3013)
(-0.727789, -1.88315, 0.0, 0.486939, 9.806, 10.6469)
(0.153219, -0.782453, 1.14914, -1.67258, 9.92091, 9.02453)
(-0.65118, 6.86261, 2.64302, -5.9665, 13.1002, -2.27318)
(-0.229828, -0.39003, 0.229828, 1.09352, 8.81088, 9.85723)
(0.57457, -0.0251246, -0.114914, 0.020339, 10.189, 9.85603)
(-0.191523, 0.0729811, -0.421352, 0.0562313, 9.57617, 9.85005)
(-0.0383047, 0.0646062, -0.57457, 0.0921237, 9.69109, 9.88475)
(-0.0383047, 0.0813559, -0.497961, 0.0717846, 9.69109, 9.87757)
(-0.0766094, 0.066999, -0.57457, 0.0969993, 9.38465, 9.88116)
(-0.0766094, 0.061017, -0.57457, 0.0957129, 9.76769, 9.87996)
(-0.114914, 0.0658026, -0.421352, 0.0729811, 9.69109, 9.88714)
(-0.0766094, 0.0646062, -0.766994, 0.0849452, 9.69109, 9.868)
(-0.0383047, 0.06634098, -0.497961, 0.0813559, 9.76769, 9.8668)
(-0.0766094, 0.0646062, -0.57457, 0.0753739, 9.72939, 9.88355)
```


Mu 1.0.2 - main.py

CPU 18% Mem 4.7 GB Swap 1.0 GB

Adafruit CircuitPython Plotter

Notice that there are 6 numbers printed and 6 lines on the plotter. Both the CPX and the breakout board have little XYZ cartesian coordinate systems. I had to line them up properly before I started moving them. My suggestion would be for you to get some hot glue or 3M tape and place both breakout board and CPX on some sort of hard material like plywood, masonite, or even a cutting board. Anything to keep everything together.

Once you've done this, try uncommenting the line of code that prints the angular velocity. When I do that and move the breakout board around I can measure the angular velocity of each axis. The units are in radians per second but it's pretty obvious just from the magnitude of the graph.

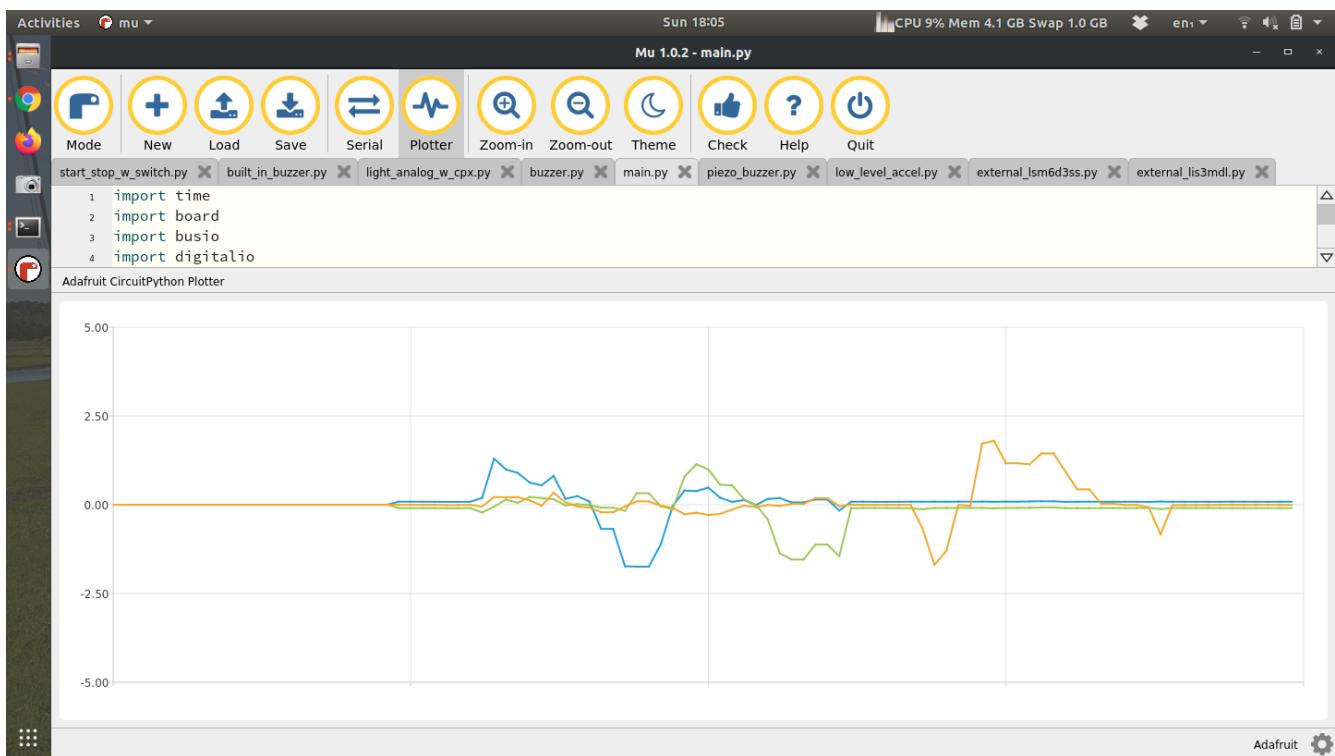

The final part is to get the LIS3MDL (magnetometer) to work. The starting point for me was the [Adafruit Learn page](#), along with the simple example from [Adafruit's Github](#). After that I was able to create [my own code](#). The only difference in your code is that the address will be 0x1c instead of 0x1e.

```

1 import time
2 import board
3 import busio
4 import digitalio
5 #import adafruit_lis3dh
6 #from adafruit_lsm6ds.lsm6ds33 import LSM6DS33
7 import adafruit_lis3mdl
8
9 i2c_ext = busio.I2C(board.SCL, board.SDA)
10
11 #print(dir(adafruit_lsm6ds))
12 #sensor_ext = LSM6DS33(i2c_ext,address=0x6a)
13 mag = adafruit_lis3mdl.LIS3MDL(i2c_ext,address=0x1e)
14
15 ##Accelerometer is hooked up to SDA/SCL which is I2C
16 #i2c = busio.I2C(board.ACCELEROMETER_SCL, board.ACCELEROMETER_SDA)
17 #_int1 = digitalio.DigitalInOut(board.ACCELEROMETER_INTERRUPT)
18 #lis3dh = adafruit_lis3dh.LIS3DH_I2C(i2c, address=0x19, int1=_int1)
19 #lis3dh.range = adafruit_lis3dh.RANGE_8_G
20
21 while True:
22     #x,y,z = lis3dh.acceleration
23     #xe,ye,ze = sensor_ext.acceleration
24     #gx,gy,gz = sensor_ext.gyro
25     bx,by,bz = mag.magnetic
26     #print((x,y,z))
27     #print((x,xe,y,ye,z,ze))
28     #print((xe,ye,ze))
29     #print((gx,gy,gz))
30     print((bx,by,bz))
31     time.sleep(1.0)

```

---

The code is almost identical to the code before except all the LIS3DH and LSM6DS33 code is commented out. Instead I have code to grab the magnetometer (LIS3MDL) at address 0x1E. Line 25 then calls the magnetometer and prints it.

### 13.4 Assignment

Once you've completed the project above, upload a PDF with all of the photos and text below included. My recommendation is for you to create a Word document and insert all the photos and text into the document. Then export the Word document to a PDF. For videos I suggest uploading the videos to Google Drive, turn on link sharing and include a link in your PDF. Note that all code must be included in the appendix or you'll be penalized 10%.

1. Include a video of you reading both accelerometers and generating a plot like I did. Plotter is fine for this portion - 10%
2. Include a video of you getting the magnetometer to work and plotting the data in the plotter as you move the magnetometer. - 10%

3. Create a pendulum for your “cutting board” circuit and swing the pendulum. Include a video describing your pendulum - 20%
4. While swinging the pendulum record the accelerometer on the CPX and the breakout board as well as the angular velocity. Plot the angle (theta) using both accelerometers. You will have 2 lines since there are two accelerometers. Also plot the angular velocity of the pendulum. Plot these in Python - 20%
5. Take the two theta values and use the finite difference method to take a derivative and get the angular velocity. Plot the derivative of theta alongside the angular velocity and comment on the similarities and differences. - 20%
6. Finally, take the angular velocity and integrate using a Riemann sum to get theta from integration and plot it alongside your two other values of theta from the accelerometers. Comment on the similarities and differences - 20%

# 14 Histograms and Normal Distribution of Photocell Readings

## 14.1 Parts List

1. Laptop
2. CPX/CPB
3. USB Cable
4. Photocell
5. Resistor (10 kOhm)
6. Alligator Clips (x3)
7. Breadboard


## 14.2 Learning Objectives

1. Understand how a photocell responds to light level by measuring the voltage across the photocell in different light conditions
2. Learn how to create histograms of a noisy data signal
3. Understand mean and standard deviation and how that applies to Normal distributions.

## 14.3 Getting Started

This lab is going to be similar to the potentiometer lab (See chapter 8). We are going to use a photocell though to vary the resistance instead of a potentiometer. Photocells are cool because they change their resistance solely based on the light intensity hitting the sensor rather than twisting a knob like the potentiometer.

Wiring a photocell is similar to a potentiometer except that you need to add a resistor in series with the photocell. There is a relevant [Adafruit Tutorial on Photocells](#) and the code required to measure the voltage if you'd like to read more about it. The lab this week requires you to do the same as the potentiometer lab. I'd like you to wire up the circuit, take data at the low and high value of the photocell by covering the sensor with your finger and then shining a light on it and plotting the entire data set in Python on your desktop computer. The wiring diagram is shown below. Have an alligator clip connected to 3.3V on the CPX and have it connected to either end of the photocell. Then place a resistor in series with the photocell and route the free end of the resistor to GND.

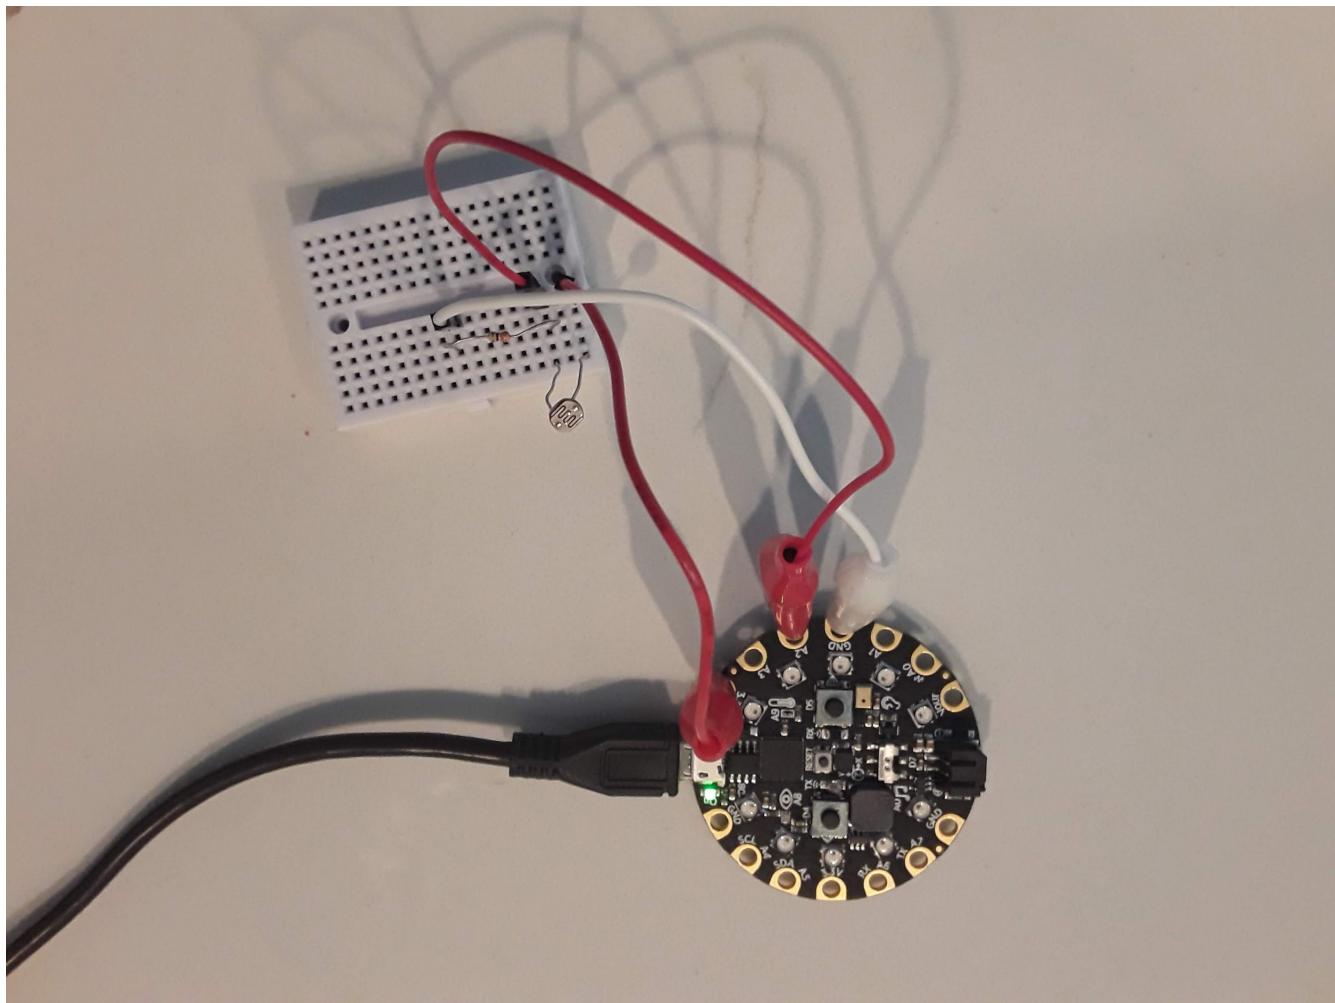

Then take another alligator clip from pin A2 and plug it into the same row on the breadboard as the resistor and photocell. Once you have the circuit wired properly you can use the [same code as the potentiometer lab](#). The example screenshot below shows the analog signal below showing a high spike where I placed a flashlight over the photocell and then a low spot where I covered the photocell with my finger. Remember that you can use any Analog pin on the CPX provided you change line 5 to the same pin.

```

import time
import board
import analogio

analog = analogio.AnalogIn(board.A2)

while True:
    print(analog.value)
    time.sleep(0.05)

```

Adafruit CircuitPython REPL

```
(8304,)  
(8336,)  
(8272,)  
(8288,)  
(8352,)  
(8336,)  
(8336,)  
(8336,)  
(8320,)
```

Adafruit CircuitPython Plotter

Once you've gotten some example data you can plot the result in Python as you did for the potentiometer lab. Here's what your plot may look like.

```

import numpy as np
import matplotlib.pyplot as plt

data = np.loadtxt('Example_Light_Data.txt')

time = data[:,0]
light_digital = data[:,1]
voltage = 3.3*light_digital/2.0**16

plt.plot(time,voltage)
plt.xlabel('Time (sec)')
plt.ylabel('Voltage (V)')
plt.grid()
plt.show()

```

Figure 1

Voltage (V)


Time (sec)

shell

```
>>> %Run plot_light.py
>>> %Run plot_light.py
>>> %Run plot_light.py
>>> %Run plot_light.py
KeyboardInterrupt: Forced reset
>>> %Run plot_light.py
```

If you noticed the data you obtained even when the light source was constant was quite noisy. What I'd like you to do for part 2 of this lab is take 100 data points with the photocell with as constant of a light source as possible. Do this for three different light ranges. Low Light, ambient light and then a flashlight. With the three

different data streams, create a histogram of the data with appropriate labels and compute the mean, median, and standard deviation of the data stream. [Creating a histogram in Python](#) is fairly simple and I have a [Youtube Video](#) to supplement this tutorial. I also have another video where I get [mean and median values for accelerometer data](#). Still, here is my example code showing code to get mean, median, and standard deviation as well as create the histogram. Notice in my code I imported the statistics module to compute the mode. Although it worked in my code, it's not typical to compute the mode of a continuous variable because often times you will not ever get the same value twice. Still, feel free to compute the mode if you so desire.

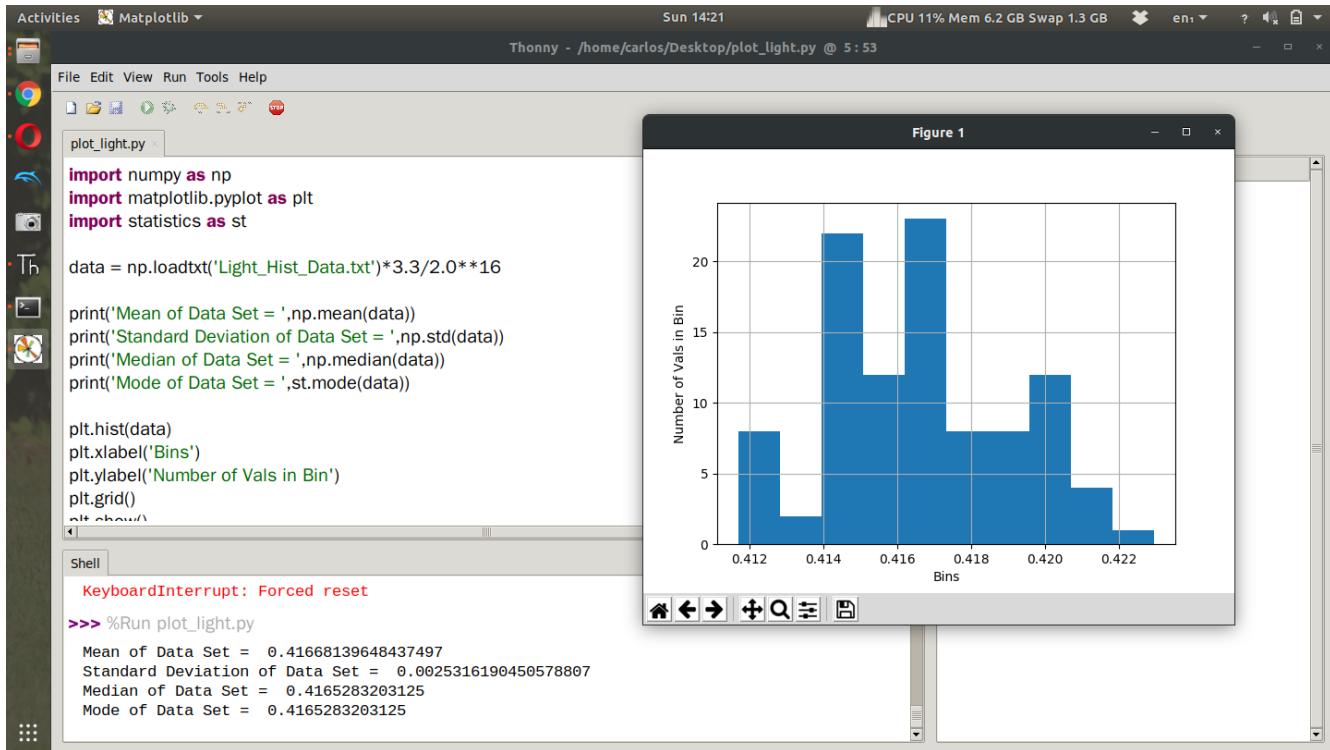

Again make sure to convert to voltage before you plot that way you can see what the noise level is in volts. Notice that I import the data and convert to voltage all in one line. However, note that my text file only has 1 column of data. It's possible your data has time in the first column and light value in the second column at which point you will need to extract the second column first and then convert to voltage. If you have two columns of data you'll need to add a few things. First, don't convert to voltage when you import the data.

```
data = np.loadtxt('Light_Hist_Data.txt')
```

Then extract the second column (assuming your photocell readings are in that column)

```
second_column = data[:,1]
```


Finally convert to voltage

```
voltage = second_column*3.3/2.0**16
```

Then replace data in the rest of your code with voltage. Remember to remove st.mode since it does not work all of the time for continuous data sets.

## 14.4 Throwing Out Outliers

When I ran this experiment for a second time my CPX started and stopped 3 separate times. You'll see in the time series plot below that the voltage dipped in the first set and the second data set had some weird bumps probably from me changing tabs on my chrome tab. The photocell was close to my computer so that effected it. Thankfully the 3rd data set looked pretty good.

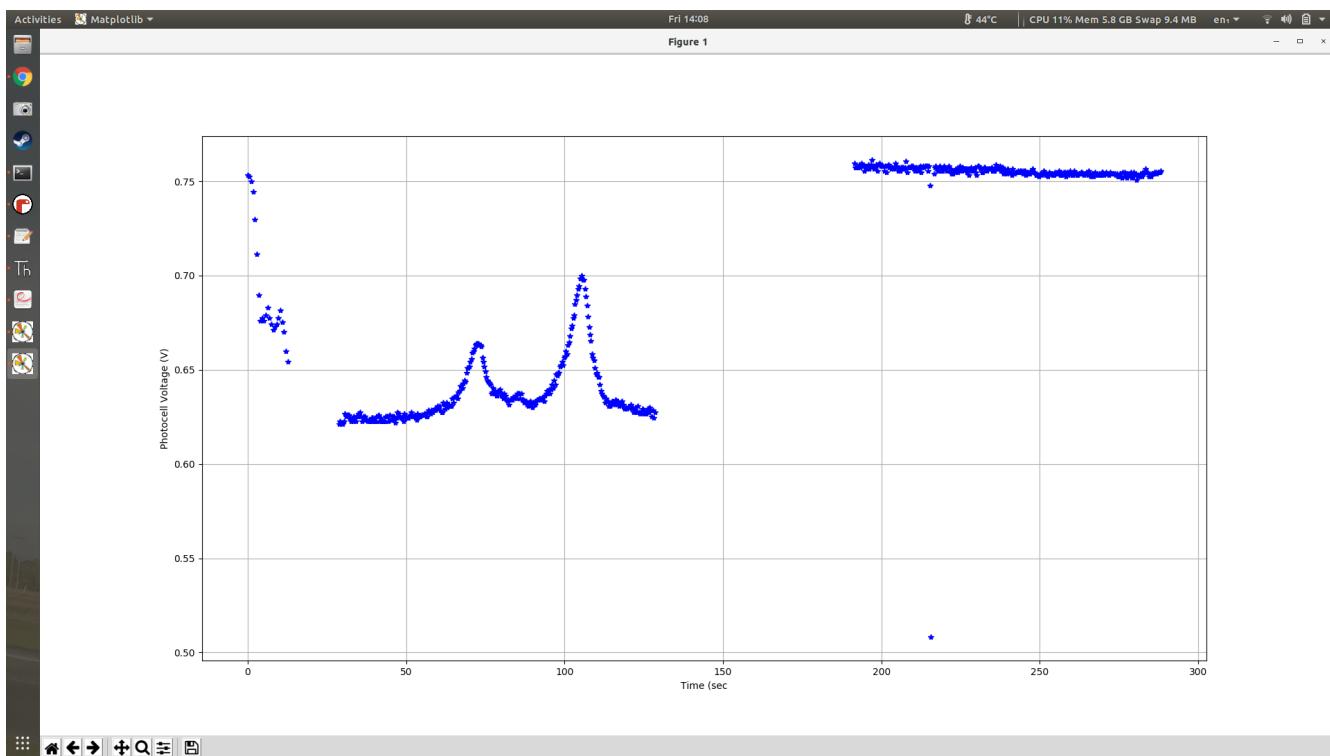

The only problem with the 3rd data set is that I put my hand over it for testing purposes. Because of that I had to remove those outliers. To do that I computed the current mean and standard deviation and then threw out all data points that were 3 standard deviations away from the mean. The code looks like this.

```
##COMPUTE CURRENT MEAN AND DEV

mean = np.mean(voltage)

dev = np.std(voltage)

print(mean,dev)

time = time[voltage > mean - 3*dev]

voltage = voltage[voltage > mean - 3*dev]

time = time[voltage < mean + 3*dev]


voltage = voltage[voltage < mean + 3*dev]

###COMPUTE NEW MEAN,STD

mean = np.mean(voltage)

dev = np.std(voltage) print(mean,dev)
```

Once I did all that clean up I was able to get a nice time series plot of my data.

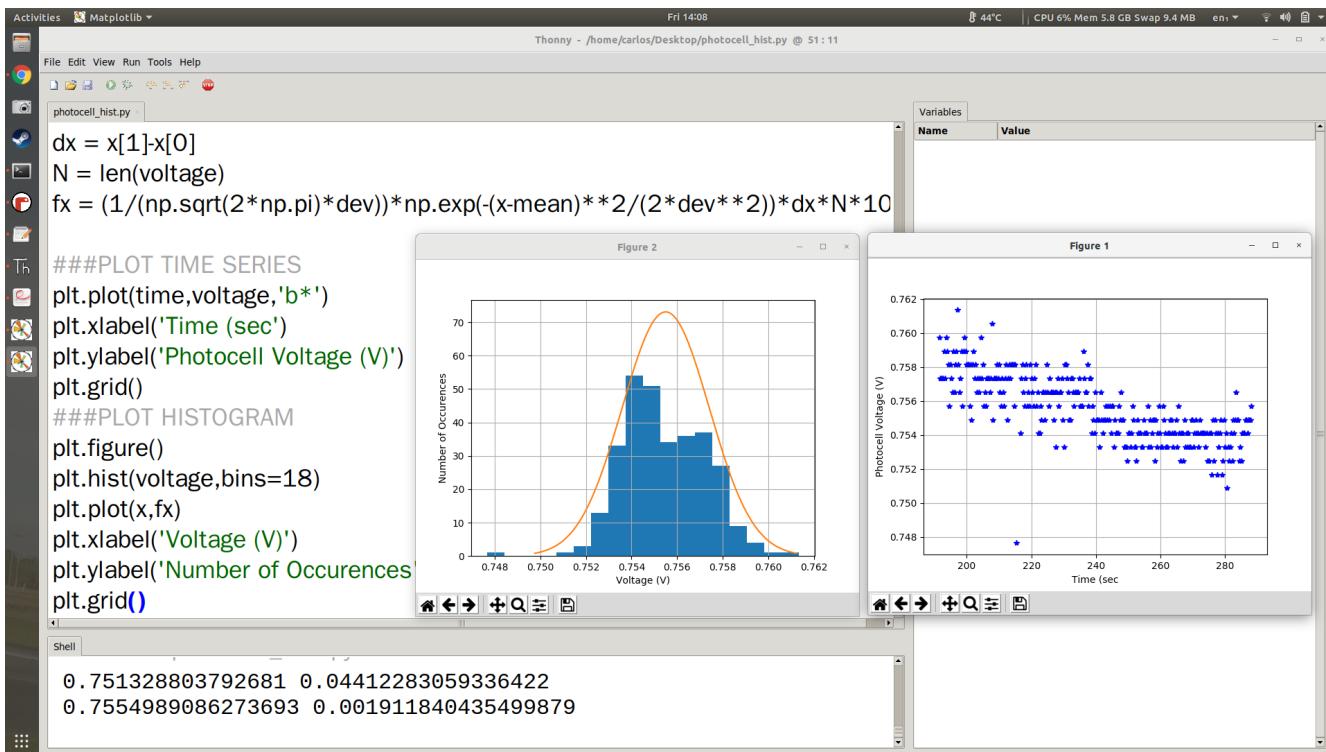

## 14.5 Normal Distribution

I also was able to plot the Normal Gaussian Distribution on top of the histogram. You can see that in the left plot in orange. The code to do that is shown below where the 72 in the plot is the "height" of the histogram. Note that your histogram will have a different height and you will need to get that specifically from your plot.

###COMPUTE THE NORMAL DISTRIBUTION

```

x = np.linspace(-3*s+mu,3*s+mu,100)

pdf = 1.0/(s*np.sqrt(2*np.pi))*np.exp((-x-mu)**2/(2.0*s**2)) * (s*np.sqrt(2*np.pi)) * 72

```

The equations above make a time series from  $\pm 3$  standard deviations from the mean and then plot the PDF of a normal Gaussian distribution. The only extra thing you have to do is multiply by  $(s*\sqrt{2*\pi}) * 72$  which first causes the height of the PDF to be 1 and then multiply by 72 which again is the height of the histogram which will be different for your system.

## 14.6 Assignment

Once you've completed the project above, upload a PDF with all of the photos and text below included. My recommendation is for you to create a Word document and insert all the photos and text into the document. Then export the Word document to a PDF. For videos I suggest uploading the videos to Google Drive, turn on link sharing and include a link in your PDF. Note that all code must be included in the appendix or you'll be penalized 10%.

### 14.6.1 Part 1

1. Include a video of you varying light conditions and watching the digital signal in the Plotter in Mu go up and down (make sure your face is in the video at some point and you state your name) - 50%
2. Plot voltage of the photocell vs time and include your code to plot it in the appendix. Make sure to plot the voltage and not the digital output - 50%

#### **14.6.2 Part 2**

1. Include a video of your circuit and explain how you captured the data to store on your computer (make sure your face is in the video at some point and you state your name) - 25%
2. Include the mean, median, and standard deviation of all light levels in volts - 25%
3. Include 3 histogram plots of low light, ambient light and high light levels. On top of the histogram I want you to plot the normal Gaussian distribution to see how close your histogram is to a Gaussian distribution - 50%

## 15 Pulse Width Modulation (PWM), Servo Calibration ( $\text{pulse} = f(\text{angle})$ ) and Feedback Control

### 15.1 Parts List


1. CPX/CPB
2. USB Cable
3. Laptop
4. protractor or piece of paper
5. servo
6. Alligator clips (x3)

### 15.2 Learning Objectives


1. Understand what a PWM signal is and how it affects a servo
2. Understand the inner workings of a servo and how to make it move
3. Practice first order regression and calibration techniques
4. Understand how to compute roll and pitch from an accelerometer
5. Learn the fundamental concepts of feedback control
6. Learn how to Combine two codes (servo code and accelerometer code into one)

### 15.3 Getting Started

For this lab we are going to learn how to drive a [servo](#). Servos accept what are called PWM signals which are basically square waves of varying frequency. The servo itself has a microprocessor on board that turns a DC motor based on the incoming PWM frequency which is typically called a duty cycle. The DC motor runs through some gear to rotate a shaft. Because of this rotation, you can make a number of things move! Servos are used for all sorts of things, opening doors, deflecting control surfaces on RC aircraft and many more! The neat thing about PWM signals is that they can not only move servos but they can also drive speed controllers to turn 3 phase motors and even change the light intensity of LEDs. Servos typically come in two different color schemes as shown below.

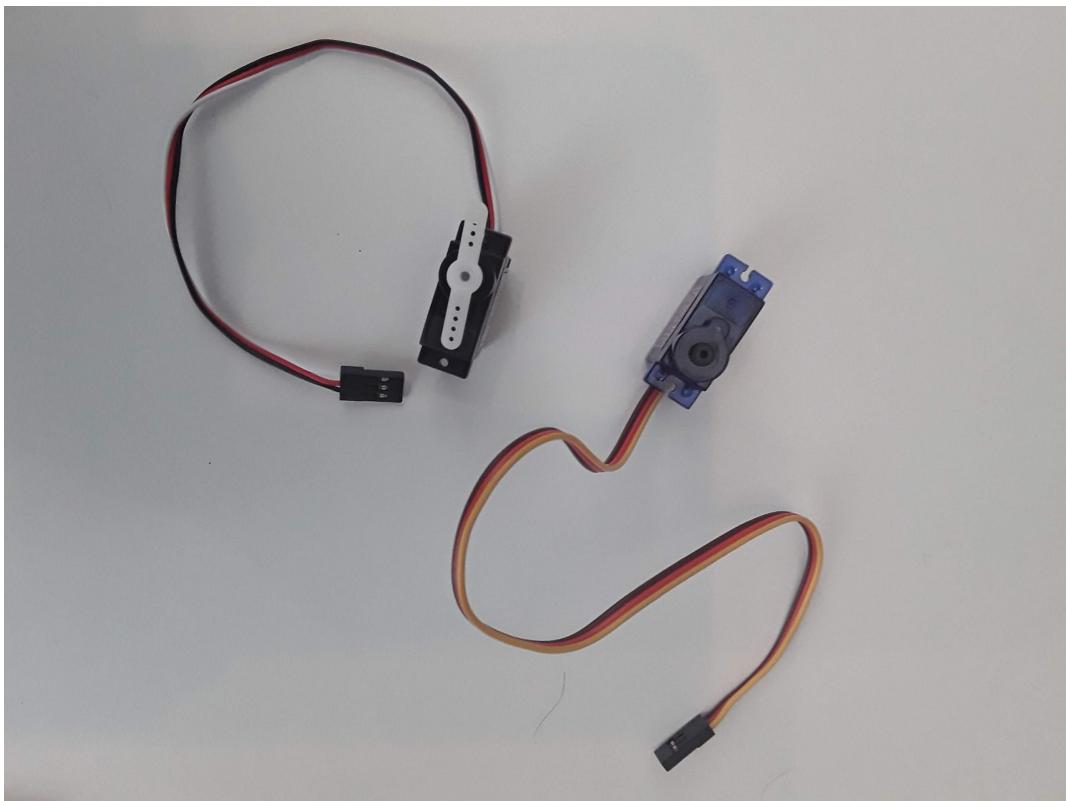

As you can see, servos have 3 pins - the brown or black wire is GND, the red wire needs to go to a 5V signal so for the CPX it needs to go to the VOUT pin and the yellow or white wire is the signal wire which need to go to an analog port on the CPX that supports PWM signals. Which ones support PWM signals? [Adafruit Learn](#) has a great description of which pins support PWM signals but as a quick check you can use the following analog pins: A1, A2, A3, A6 and A7. In my circuit I just picked pin A2 since I've been using it so much in the past.

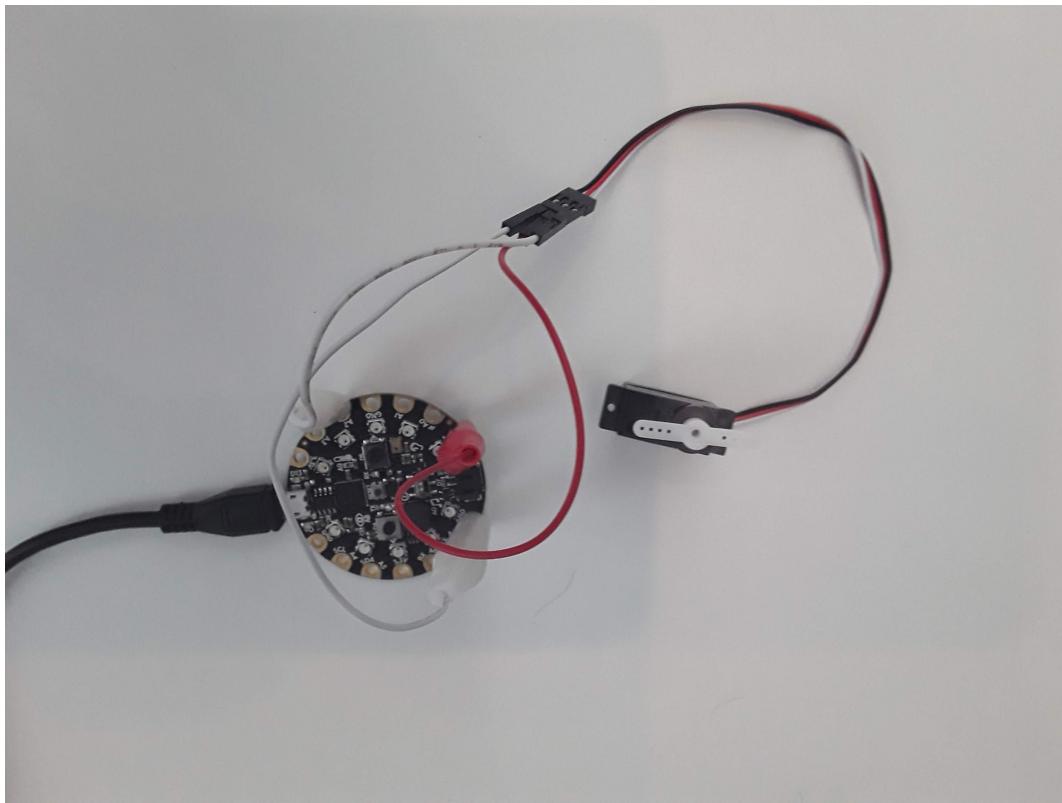

**Very important:** It is recommended to power a servo through an external power supply instead of the CPX. Servos can draw a lot of current and the CPX although it supports 5V can only provide so much power ( $P$ ). Remember that  $P = VI$  so if  $P$  is low it means current is low. If the servo pulls more current than the CPX can provide the CPX will “brown out” which means it will go into a safe-mode setting. If you have the AA power supply you may consider doing that. For small servos you hopefully won’t have any issues.

As I said before, a servo takes in a square wave. The square wave has a duty cycle in units of microseconds. If you send a roughly 500 us square wave to a servo it will rotate all the way to the left. If you send a roughly 2500 us signal to the servo, it will turn all the way to the right. The code to send PWM signals has been thoroughly explained in the [Adafruit Learn system](#). I also have a [simple servo.py script](#) on Github. In this code as usual the top 3 lines are used to import the necessary modules. The pulseio module is used here to create a servo object on line 6 by connecting to pin A2. Make sure to change the pin to whatever pin you have the signal wire hooked up to. Lines 9-12 create a function that pulse in milliseconds and compute the duty cycle of PWM signal. Lines 16-19 then kick off an infinite while loop where a 800 us signal is sent to the servo and then a 2000 us signal is sent using a for loop which starts on line 16. You’ll see servo command on line 18 which is responsible for sending the microsecond signal to the servo. The function servo.duty\_cycle converts the pulse in milliseconds to a duty cycle. The value is then passed to the attribute of the servo object servo.duty\_cycle. If you put this code on the CPX and run the code you will hopefully see your servo turning left and right in 1 second intervals. I did this project myself and [posted a YouTube video about it](#).

Besides making the servo move back and forth I’d like you to vary the pulses on line 16 **SLOWLY** until the servo can’t move any farther. This line of code is a for loop which loops through the array currently showing [0.8,2.0]. If you change that array to [0.9,1.2,1.5,1.8] the servo will move to a pulse in milliseconds of 0.9, 1.2, 1.5 and then 1.8. The for loop is a great way to loop through multiple commands. Using this array, determine the minimum pulse you can send to the servo and the maximum pulse you can send to the servo. If the servo makes a

funny noise it means you sent a signal outside the bounds so try a different signal. Hence the need for moving the pulse signal slowly. If you change the array to just 1 number [0.8] the servo will just move to 1 angle and stay there forever. **NOTE THAT IN CIRCUITPYTHON VERSION 7.0.0 YOU HAVE TO USE THE PWMIO LIBRARY INSTEAD OF THE PULSEIO LIBRARY.**

```

1 import time
2 import board
3 import pulseio
4
5 # Initialize PWM output for the servo (on pin A2):
6 servo = pulseio.PWMOut(board.A2, frequency=50)
7
8 # Create a function to simplify setting PWM duty cycle for the servo:
9 def servo_duty_cycle(pulse_ms, frequency=50):
10    period_ms = 1.0 / frequency * 1000.0
11    duty_cycle = int(pulse_ms / (period_ms / 65535.0))
12    return duty_cycle
13
14 # Main loop will run forever moving between 1.0 and 2.0 ms long pulses:
15 while True:
16     for pulse_ms in [0.8, 2.0]:
17         print('Milli Second Pulse = ', pulse_ms)
18         servo.duty_cycle = servo_duty_cycle(pulse_ms)
19         time.sleep(1.0)


```

---

If you notice, sending a pulse signal in microseconds moved the servo to a specific angle. Thing is I would like to be able to move the servo to a specific angle rather than having to just guess and check like we did in the last lab. So what we're going to do is start at the minimum pulse signal you computed in the last project and then change the servo pulse in equal increments until we reach the maximum servo pulse signal. When I did this lab I found that 0.6 ms was just about the smallest I could get the servo to move. We're going to call this 0 degrees. My maximum pulse signal ended up being about 2.4 ms. So I want you to test 10 different points between your specific maximum and minimum value which will hopefully be different for all of you. Everytime you test a pulse I want to measure the angle the servo makes with the minimum value being 0 degrees. Create a table of data with two columns. In the first column put pulse in milliseconds and in the second column put angle of servo in degrees. Use a protractor to measure the angle. [If you don't have a protractor make one](#) or you can download a picture and hold your servo up to the screen. I did this project with just 3 data points and here are my data points. Again you need to have around 10 data points

Pulse (ms)	Angle (Degrees)
0.6	0
1.5	90
2.4	180

Take your table of data and put it into a spreadsheet and save the data as a CSV or simply put your data into a text file. Since I only had 3 data points I just put them into a text file. Plot the data in Python on your desktop computer with servo angle on the x-axis and duty cycle on the y axis. Using the data, determine if the data set is linear, quadratic or cubic. Fit a trend line to the data and plot your trend line on top of the data. [If you need help with trend lines in Python you can watch this video I posted on Youtube](#). I also made a helpful [python script with some fictitious data on Github](#) that fits the data with linear and quadratic fits. Here is my data plotted alongside the trendline in Python. I sort of made up the data and made it perfect on purpose so my trendline is perfect. Yours will not be so perfect.

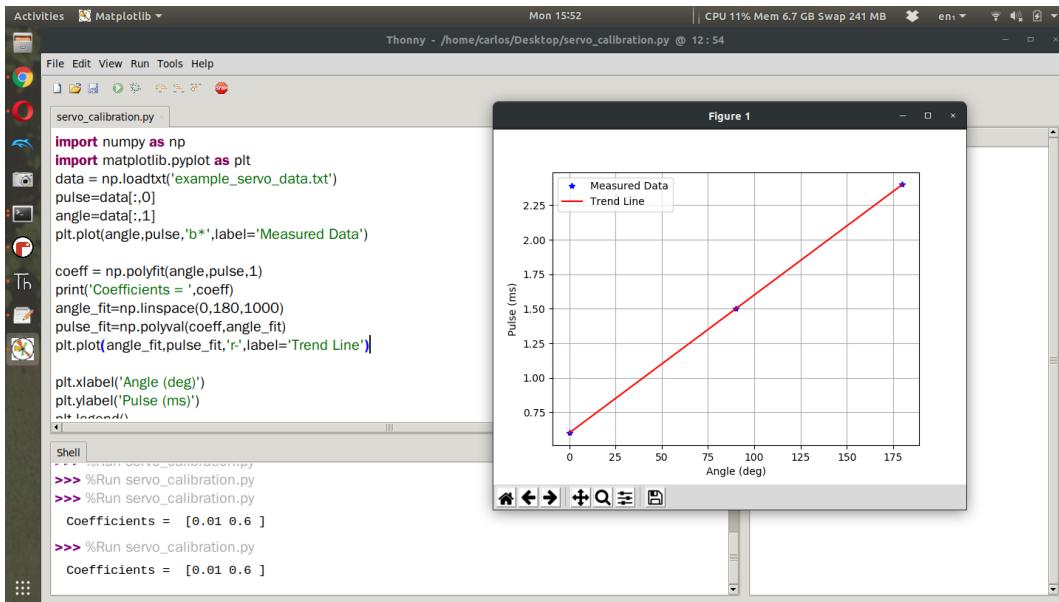

You'll notice that I first import the data from the text file using the `np.loadtxt` function and then I use the `polyfit` and `polyval` functions to create the trendline. The `polyfit` function requires you to give it the X and Y axes and the order of the trendline which since the trend line is linear I sent it a 1 but you could easily do 2 for quadratic or 3 for cubic. I then print the coefficients which are [0.01 0.6]. This means my trend line looks like this.

$$Pulse = 0.6 + 0.01 * Angle \quad (7)$$

Where Pulse is in ms and Angle is in degrees. Now you have an equation where you can use angle in degrees to compute the pulse in milliseconds. In the code I've posted I then use `np.linspace` to create 1000 data points from 0 to 180 degrees and then use the `polyval` function to compute the pulse for all 1000 angles I created using the `linspace` command. I finally plot the trend line in red and use the remaining part of the script to create labels and legends. Once you have this plot write down your coefficients and create an equation like I did above. Again your numbers won't be so neat. Once you have this equation, return to Mu and create a function using the `def` keyword that takes in an angle as an input and then returns a pulse signal in milli seconds. It will look sometime like this

```
def angle2pulse(angle):
    return 0.6 + 0.01*angle
```

**Note:** Functions in python must be after all your imports but before your while loop. If you put this function inside your while loop the code will not work. Using that equation, modify your `servo.py` script to have the servo move through the following angles, 0, 45, 90, 135 (your servo may not travel to 180 degrees). Verify that your equation is working correctly by placing your protractor below the servo. Much of the code required for this project is not included because it is left as an exercise for the student.

## 15.4 Feedback Control

Feedback control can be its own course or multiple courses but can be broken down into a few simple steps. The goal of feedback control is to drive the "state" of a "system" to a desired "command" by sending a "control" signal to the "system". I explain this in much more detail in a [controls overview Youtube video](#). For this lab we are going to make the bare bones circuitry required for pitch angle control of an airplane. The "system" then is the aircraft. The "state" is the "pitch" angle (measured by the CPX), the "command" is the desired pitch angle (programmed by you the pilot in command) and the "control" signal is the elevator command (actuated by a servo). I'm using the same circuit I created in parts 1 and 2.

The elevator on an airplane is a control surface responsible for pitching the aircraft up and down. For this example we are going to assume that the desired pitch angle is 0. This means our "error" signal is going to be 0 minus the pitch angle. Our "control" signal will be the angle of the elevator. As I said, we are going to use a servo to control the elevator so this just means we need a way to relate our "error" signal to servo pulse width. There are

a few steps here before we can move on. First, we need to relate our “error” signal to the “control” signal which will be the elevator pitch angle. I’ve made a table below to explain what I mean.

Pitch (deg)	Error (deg)	Elevator (deg)
-90	90	+90
0	0	-90
+90	-90	-90

This table basically says that if the aircraft is level with a pitch angle of zero I want the elevator to be zero as well. If the aircraft pitches down, I want the elevator to pitch up and counteract that rotation. Using these three data points I can create a simple equation to relate elevator angle to pitch angle.

$$\delta_e = -\theta \quad (8)$$

Now that we have the elevator pitch angle we need to relate this to the servo angle. Servo can only move from 0 to 180 degrees which means we can’t have the servo go negative. Thus we need to offset the elevator angle to the servo angle. Again we can make a table here.

Elevator (deg)	Servo (deg)
-90	0
0	90
+90	180

This also results in a simple equation to relate servo angle to elevator angle.

$$s = \delta_e + 90 \quad (9)$$

Finally, we can then use our calibration coefficients (See chapter 15) to relate servo angle to pulse width. When I calibrated my servo I obtained the following equation where P is the pulse and s is the servo angle.

$$Pulse = 0.6 + 0.01 * Angle \quad (10)$$

With these 3 equations I can now program my servo to respond to changes in the pitch angle of the CPX. I did forget one minor detail and that is measuring the pitch angle itself. This is similar to measuring the angle of a pendulum (See chapter 17). I’m going to rotate the CPX in the X/Z plane which can be done by rotating the USB cable where it plugs into the CPX. In this case we can ignore the Y axis data. If you print the raw accelerometer data, you’ll notice that when you place the CPX directly onto a flat surface, the x and y axes read a value around 0, while the z axis reads around gravity. If you then rotate the sensor clockwise 90 degrees, the x axis is reading about gravity while the z axis is now zero. This means we can form a triangle and get the angle using these two axes using the equation below which gives angle in degrees.

$$\theta = \tan^{-1}(x/y) \frac{180}{\pi} \quad (11)$$

On the CPX specifically we want to import the math module and use the atan2 function. With this equation I can finally put it all together. Pictured below is my code which again is also [online on Github](#). **Note that the version on Github is constantly edited and as such will be slightly different than the version below.**

```

1 import time
2 import board
3 import busio
4 import math
5 import digitalio
6 import adafruit_lis3dh
7 import pulseio
8
9 # Create a function to simplify setting PWM duty cycle for the servo:
10 def servo_duty_cycle(pulse_ms, frequency=50):
11     period_ms = 1.0 / frequency * 1000.0
12     duty_cycle = int(pulse_ms / (period_ms / 65535.0))
13     return duty_cycle
14
15 # Initialize PWM output for the servo (on pin A2):
16 servo = pulseio.PWMOut(board.A2, frequency=50)
17
18 ##Accelerometer is hooked up to SDA/SCL which is I2C
19 i2c = busio.I2C(board.ACCELEROMETER_SCL, board.ACCELEROMETER_SDA)
20 _int1 = digitalio.DigitalInOut(board.ACCELEROMETER_INTERRUPT)
21 lis3dh = adafruit_lis3dh.LIS3DH_I2C(i2c, address=0x19, int1=_int1)
22 lis3dh.range = adafruit_lis3dh.RANGE_8_G

```

The first 22 lines here will hopefully seem familiar. Line 1-7 are import commands of all the various modules needed. Lines 10-13 create the definition that converts pulse width to duty cycle. Line 16 creates the servo and lines 19-22 create the accelerometer. Hopefully this is a good example of combining different codes together to get a more complex piece of software. Lines 24-45 include a very long while loop. I will try and go through each line. Line 26 grabs the accelerometer data on the CPX. Line 28 uses the x and z axis accelerometer data and converts the values to pitch angle using the atan2 function in the math module which was imported on line 4. Line 30 computes the elevator pitch angle and line 32 computes the servo deflection angle. Line 34-37 is a type of signal conditioner called a saturation filter. Basically, I don't want the servo to break because I tried to make the servo rotate more than 180 degrees or less than 0 degrees. So I created two if statements that restrict the servo to be within these two values. If the servo angle is less than 0 as stated on line 34, the servo angle is set to 0 on line 35. If the servo angle is greater than 180 as stated in line 36 the servo angle is set to 180.

```

24  while True:
25      #Get Accelerometer
26      x,y,z = lis3dh.acceleration
27      #Get theta
28      theta = math.atan2(x,z)*180/3.141592654
29      #Get elevator angle
30      de = -theta
31      #Get servo angle
32      s = de + 90.0
33      #Saturation Filter
34      if s < 0:
35          s = 0.
36      if s > 180:
37          s = 180.
38      #Get pulse width
39      pulse_ms = 0.6 + 0.01*s
40      #Get duty cycle
41      duty_cycle = servo_duty_cycle(pulse_ms)
42      #Actuate Servo
43      servo.duty_cycle = duty_cycle
44      print(theta,de,s,pulse_ms)
45      time.sleep(0.1)

```

Line 39 uses the calibration equation from the previous experiment to convert servo angle to pulse width. You'll need to replace these numbers with your servo since all servos are different. Line 41 uses the definition created on lines 10-13 to convert pulse width to duty cycle. Line 43 makes the servo move. Line 44 prints everything to Serial for debugging purposes and line 45 pauses the script for 0.1 seconds which helps with some twitchiness in the servo. When I did this I didn't have to program a complementary filter so I guess the servo may have it's own low pass filter. Either way this circuit is ready to be placed on an aircraft. Whether or not it is effective is a completely different story. I'll leave that discussion to your controls professor. Note you can also include the angular rate sensor and use that as derivative gain as well.

## 15.5 Assignment

Once you've completed the project above, upload a PDF with all of the photos and text below included. My recommendation is for you to create a Word document and insert all the photos and text into the document. Then export the Word document to a PDF. For videos I suggest uploading the videos to Google Drive, turn on link sharing and include a link in your PDF. Note that all code must be included in the appendix or you'll be penalized 10%.

### 15.5.1 Part 1

1. Send a video of your servo moving back and forth (make sure your face is in the video and make sure you introduce yourself) - 50%
2. Experimentally determine the minimum and maximum values of the servo and report the 2 PWM signals in milliSeconds. Give at least 2 decimal points in your calculation - 50%

### **15.5.2 Part 2**

1. Submit a video of you explaining how you took calibration data (make sure you are in the video and you introduce yourself) - 25%
2. Include a Figure of your data plotted in Python with your trend line on top - 25%
3. Write your regression equation as  $\text{servo\_pulse} = m * \text{servo\_angle} + b$  - 25%
4. Submit a video of your servo moving through 0,45,90,135 using the output from your regression equation. The regression equation must be placed into your while True loop rather than computed ahead of time - 25%

### **15.5.3 Part 3**

1. Explain your circuit and what wires go where as well as all the parts of the feedback control system starting with the accelerometer. Only spend a minute or less explaining this - 10%
2. Explain your code at a high level. Only spend a minute or less on how it works - 20%
3. Show your servo moving as you rotate the CPX - 50%
4. Verify that your saturation filter works correctly by rotating your CPX past 90 degrees (You may need to increase the sensitivity of the servo depending on your feedback control law) - 20%

# 16 Time Constant of a Thermistor

## 16.1 Parts List

1. CPX/CPB
2. USB Cable
3. Laptop

## 16.2 Learning Objectives

1. Learn the basic form of a first order system
2. Learn the basic solution of a first order system
3. Understand settling time and how that effects engineering
4. Applied Estimation of a First Order system

## 16.3 Getting Started

The basic form of a first order system can be shown below.

$$\dot{T} = \sigma(T_f - T) \quad (12)$$

where  $T$  is our state variable and  $\dot{T}$  is the derivative of our state. For this example let's assume that  $T$  is temperature. In this case  $T_f$  is an external temperature that is either higher or lower than current temperature causing the derivative of temperature to be non-zero. You can see in this case that once the temperature of the system is equal to the external forcing temperature, the derivative of the temperature of the system goes to zero. This implies that the system has reached equilibrium. The variable  $\sigma$  has units of  $Hz$  or  $1/sec$ . The inverse of  $\sigma$  is  $\tau$  the time constant.

$$\tau = \frac{1}{\sigma} \quad (13)$$

The time constant of the system is related to how quickly the system responds to change or even how long it takes for the system to reach equilibrium. Reaching equilibrium quantitatively happens when the state has changed 98%. In other words the state of the system is within 2% of the equilibrium state. This is called the settling time  $T_s$ . The time constant is related to the settling time using the equation below.

$$\tau = \frac{T_s}{4} \quad (14)$$

The only question now of course is what is the solution  $T(t)$  or rather the temperature as a function of time. In this case, the solution to the above dynamics equation can be solved using **standard first order differential equation techniques** to obtain the solution below.

$$T(t) = (T_0 - T_f)e^{-\sigma t} + T_f \quad (15)$$

Looking at the equation now you can see some properties right away. When  $t = 0$ , the first term reduces to  $(T_0 - T_f)$  which means the initial temperature is  $T_0$  or the initial temperature. When  $t \rightarrow \infty$ , the first term drops to zero and thus the temperature is  $T_f$  or final temperature.

## 16.4 Temperature Change Ideas

In this lab we're going to get the time constant of the **thermistor** on board the CPX. If you take data on the CPX and walk outside or place the thermistor directly into a fridge, the temperature change will not be immediate. Remember that the thermistor is a resistor that changes with temperature. The ADC on the CPX converts the voltage across the thermistor to temperature. **The Adafruit Learn system** does a bit of work to explain the conversion from voltage to temperature. My version of the code is also on my **Github**.

```

1 import time
2 import board
3 import adafruit_thermistor
4
5 #Temperature Sensor is also analog but there is a better way to do it since voltage to temperature
6 #Is nonlinear and depends on series resistors and b_coefficient (some heat transfer values)
7 #thermistor = AnalogIn(board.A9) ##If you want analog
8 thermistor = adafruit_thermistor.Thermistor(board.A9, 10000, 10000, 25, 3950)
9
10 while True:
11     temp = thermistor.temperature
12     #temp = thermistor.value #if you want analog
13     print((temp,))
14     time.sleep(0.5)


```

For this lab in order to estimate the time constant of a thermistor you need to change the temperature somehow.

1. Start logging data and then place the CPX into the fridge
2. Put the CPX into the fridge and then pull the CPX out of the fridge and watch the temperature return to ambient
3. Walk outside on a hot (or cold) day and watch the CPX change temperature due to your A/C
4. Walk inside and watch the CPX get warmer (or colder) as your HVAC changes the CPX temperature.


## 16.5 Estimating Time Constant

I did the first two examples and plotted both data sets in the same script as shown below. I opted to use method 1 (see chapter 6) from the datalogging project and just have the data print to Serial and then unplug the CPX when I'm done taking data and copy and paste the data into a text file.

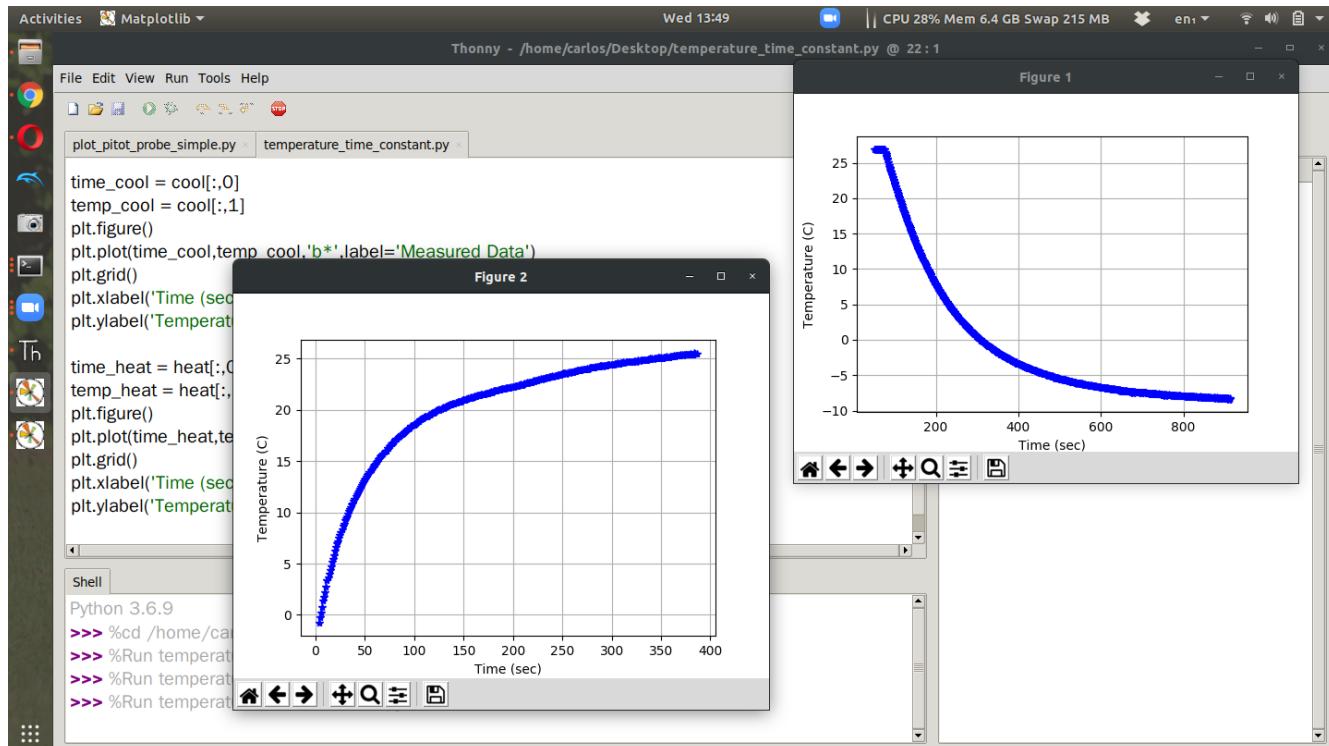

At this point it's possible to get the time constant by remember that the settling time (time it takes the temperature to settle out) is equal to 4 times the time constant ( $\tau$ ) and thus the time constant is the settling time

divided by 4. After computing the settling time for both data sets and overlaying the equations on the measured data I get these two plots.

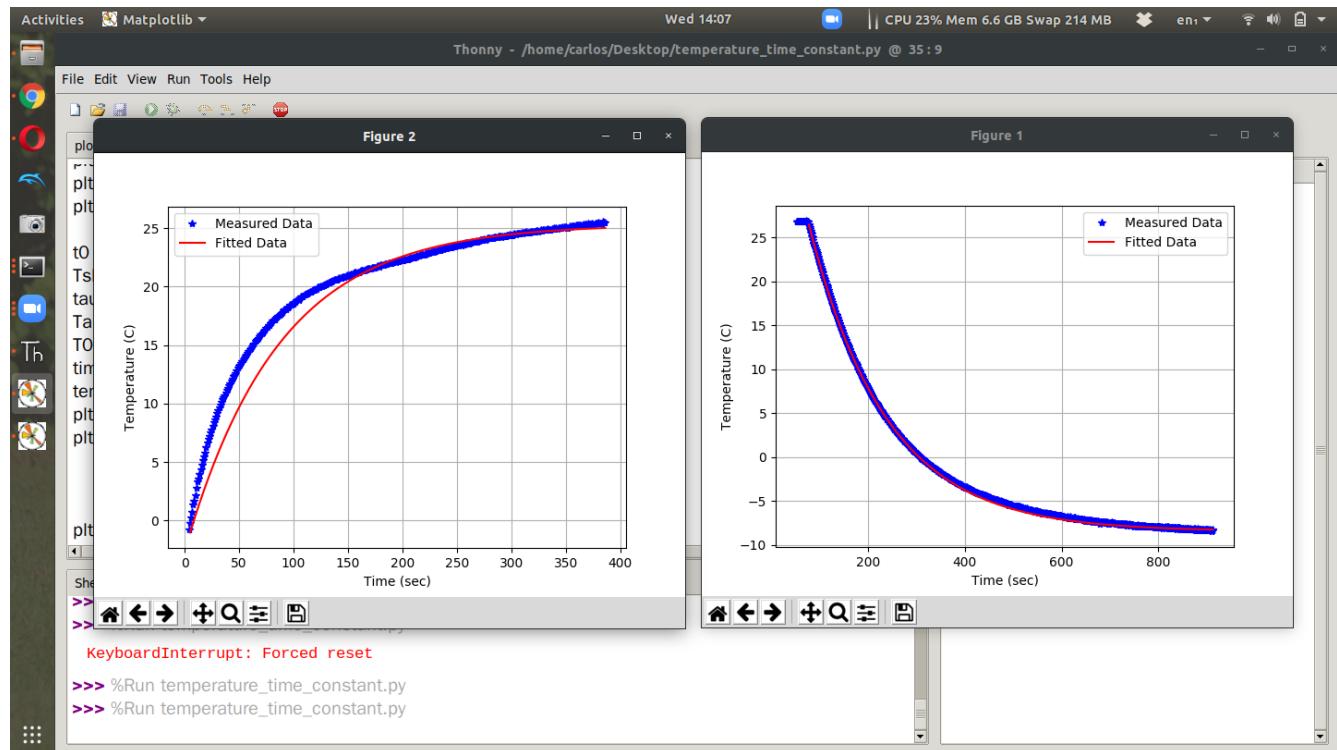

What was interesting was that the time constant for heating up was 62.5 seconds and for cooling down it was 155 seconds. The time to get cold was way slower than heating up. I'm not a heat transfer expert so I won't comment as to why this happened. One other import note I'd like to mention is the cool down phase was much more accurate than the heat up phase. This is most likely because when I pulled the thermistor out of the fridge I touched it with my hands and then moved it to a table. There was also a lot more airflow outside the fridge which would change the overall dynamics. Still, the fitted data matches up pretty well and I hope yours does too.

## 16.6 Assignment

Once you've completed the project above, upload a PDF with all of the photos and text below included. My recommendation is for you to create a Word document and insert all the photos and text into the document. Then export the Word document to a PDF. For videos I suggest uploading the videos to Google Drive, turn on link sharing and include a link in your PDF. Note that all code must be included in the appendix or you'll be penalized 10%.

1. Include a video of yourself talking about how you plan on changing the temperature of your CPX. Are you going outside? Putting the CPX in the fridge? Explain how you plan on taking data as well. Specifically mention which method (1-4) you plan on using to capture the data. For example, Method 1 is just copy and paste from the Serial monitor while Method 4 is using the bluetooth module. Again make sure your face is in the video at some point and that you are submitting high quality videos using OBS or similar software - 50%
2. Plot your raw temperature data with time on the x-axis and temperature on the y-axis - 20%
3. Overlay your fitted data on top of your measured data. Points will be given based on how well your fit is - 20%
4. Include the time constant of your thermistor. Did you get similar values as mine? - 10%

# 17 Natural Frequency and Damping of a Second Order System and Issues with Aliasing

## 17.1 Parts List

1. Laptop
2. CPX/CPB
3. USB Cable
4. Some sort of oscillating system like a swinging pendulum or vibrating ruler

## 17.2 Learning Objectives

1. Learn the basic form of a second order system
2. Understand the difference between underdamped, critically damped, and overdamped
3. Understand natural frequency and damping ratio
4. Applied Estimation of a Second Order system
5. Understand the pitfalls of aliasing

## 17.3 Getting Started

A second order system undergoing free motion will have dynamics that look like this

$$\ddot{\theta} + 2\zeta\omega_n\dot{\theta} + \omega_n^2 \quad (16)$$

In this case, the solution to the above equation can be solved using standard second order differential equation techniques to obtain the solution below.

$$\theta(t) = \theta_0 e^{-\sigma t} \cos(\omega_d t) \quad (17)$$

$$\omega_n = \sqrt{\sigma^2 + \omega_d^2} \quad (18)$$

$$\zeta = \frac{\sigma}{\omega_n} \quad (19)$$

Looking at the equations you can see that if you the time series of the oscillations are known, the damping constant and damped natural frequency can be obtained. These two values can be combined to obtain the natural frequency. The damping ratio can also be computed. So let's get some data.

## 17.4 Oscillatory Ideas

What I'd like you to do for this lab is to find some sort of parameter that varies in some sort of sinusoidal way. I've come up with a few ideas below. You may pick anyone you want although some are easier than others.

1. Drive over a speed bump - If you drive over a speed bump slowly and place your CPX on the dashboard your car will hopefully vibrate for a few seconds after you drive over it. Your acceleration will look somewhat like a sine wave.
2. Build a photo interrupter for a bike tire or a swinging pendulum - Photointerrupters only work if you sample quickly enough to see the object rotate. If you place a photo interrupter on your bike tire you can use the photocell on the CPX to measure angular velocity. If you don't sample the photocell quickly enough you won't be able to detect the spokes flying by. You can also do this with a swinging pendulum by swinging a pendulum in front of the CPX.
3. Vibrate a ruler - If you place a ruler on the edge of a desk and deflect it, it will vibrate. If you place the CPX on the ruler you'll be able to measure the vibration of the ruler.
4. Attach CPX to a spring or a weight to the end of rubber bands - Take the CPX and attach it to a weight of some kind and attach the weight to a spring or a set of rubber bands. This is a mass spring damper simple and will vibrate at the natural frequency of square root of stiffness divided by mass. I chose to do this example.
5. Build a Pendulum: If you decide to build a pendulum, you need to hang a weight on the CPX or attach the CPX to something heavy. This will make the ratio between cable to end mass much smaller and thus better for data and fitting. An example includes duct taping your CPX to a water bottle or something. It would also be better to use a string and mount the CPX to the string with an external battery pack and have the CPX log data internally. This way most of the mass would be concentrated at the tip of the pendulum. Another idea is to take a paper towel cardboard tube and tape the cpx inside it with the cable running through it. Then duct a large weight on the end of the paper towel tube and then hinge the top of the tube by skewering a screwdriver through it. This will allow the tube to swing like a pendulum rather than the string.

There are most likely many other options so try and get creative and find something oscillatory or dynamic in some way. Try to find something that changes relatively quickly. The temperature outside changes in a sinusoidal fashion but it's so slow it would take you days to do this experiment.

## 17.5 Pendulum Example

In this example I'm going to swing a pendulum in the X/Y plane of the accelerometer sensor so that I can ignore the Z axis data. I'm going to get the actual angle of the pendulum but if you're building something else you can ignore this part. You'll notice that when you point the CPX directly at you with the cable pointing up the x axis reads around 0 and the y axis reads around gravity. If you then rotate the sensor so that the cable is coming out of the left side of the CPX, the x axis is reading about gravity while the y axis is zero. This means we can form a triangle and get the angle using these two axes using the equation below which gives angle in degrees.

$$\theta = \tan^{-1}(x/y) \frac{180}{\pi} \quad (20)$$

On the CPX specifically we want to import the math module and use the atan2 function. When I swing the pendulum then this is the result I get from Plotter in Mu.

Activities mu Tue 20:57 CPU 6% Mem 4.9 GB Swap 173 MB en: Mu 1.0.2 - main.py

Mode New Load Save Serial Plotter Zoom-in Zoom-out Theme Check Help Quit

record\_temperature\_thermistor.py main.py record\_sound\_simple.py low\_level\_accel.py


```
1 from adafruit_circuitplayground.express import cpx
2 import math
3 import time
4
5 while True:
6     t = time.monotonic()
7     x,y,z = cpx.acceleration
8     theta = math.atan2(x,y)*180/3.14159
9     print((theta,))
10    time.sleep(0.01)
```

Adafruit CircuitPython REPL

(9.8061,)  
(10.3049,)  
(9.89668,)  
(9.30611,)  
(8.47115,)  
(8.16498,)  
(6.94718,)  
(7.09475,)

Adafruit CircuitPython Plotter

If I then bring this into Python I get the following plot below. In my data set I only logged the angle. Since the time step between each point was 0.01 seconds I was able to just create a time series. It's pretty clear that there is some nonlinearity in the data so I chose to start the data at 0.5 seconds. Another thing I noticed was that the angle settled out to around 8 degrees so I chose to subtract off that bias from the angle data.

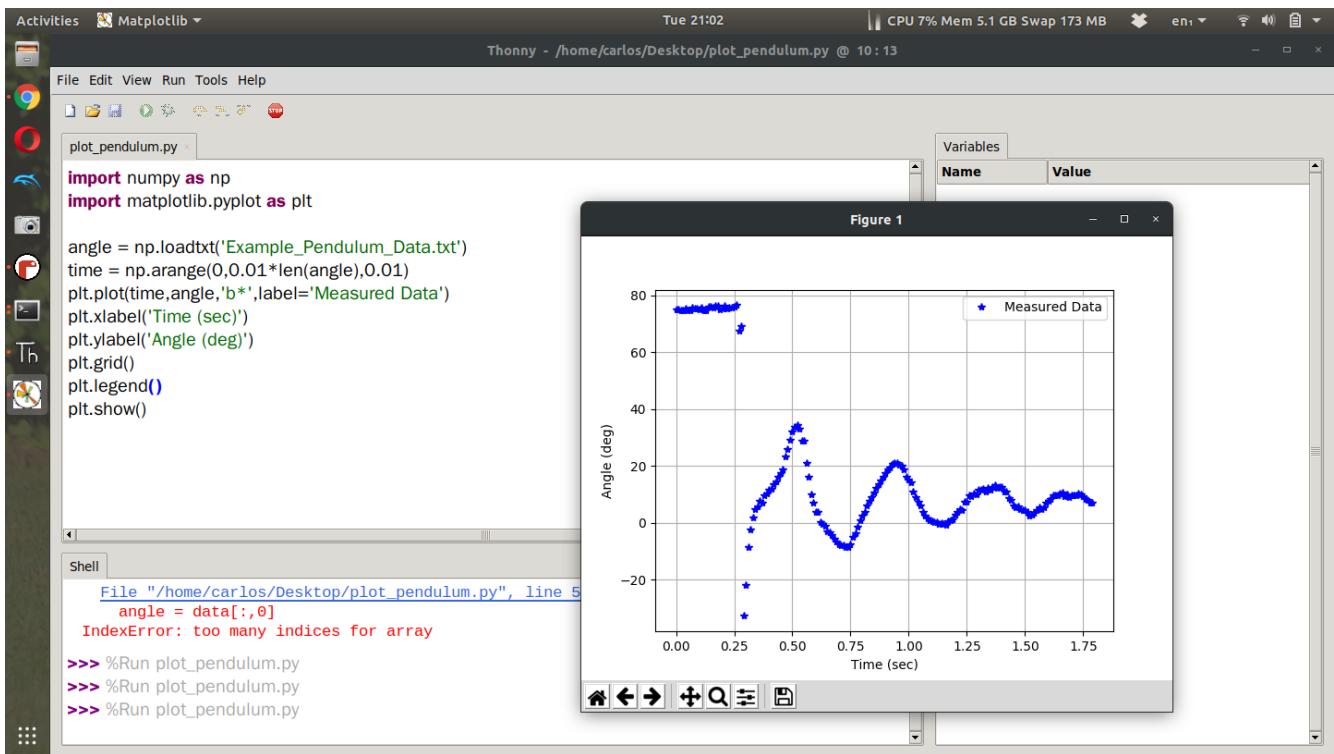


After trimming the data and removing some bias it was time to get my damping constant and damped natural frequency. There are a few equations that can help you obtain these parameters. First, the settling time is the length of time it takes for the oscillations to settle. The settling time can be used to find the damping constant. This is equal to:

$$\sigma = \frac{4}{T_s} \quad (21)$$

For my data set the settling time was about 1.25 seconds which gave a damping constant of 3.2. Once I had the damping constant I could obtain the damped natural frequency. This was done by measuring the distance between two peaks in the data set. There is a peak at around 0.5 seconds and another at around 0.95 seconds. I can use this to compute a period T. Period can be computed to angular frequency using the equation below.


$$\omega_d = \frac{2\pi}{T} \quad (22)$$

Using the period in my wave form I obtained a damped natural frequency of about 14.8 rad/s. Using these values I can plot the simulated data on top of the measured data noting that my initial angle was about 35 degrees minus the bias of 8 degrees. When I first plotted the data I noticed that my fit wasn't entirely perfect. My period was correct but my damping rate was too high. I realized it was because my settling time was too big. I increased the settling time to 1.8 seconds and got this plot here. You can see that my fitted data lined up almost perfectly with my measured data.

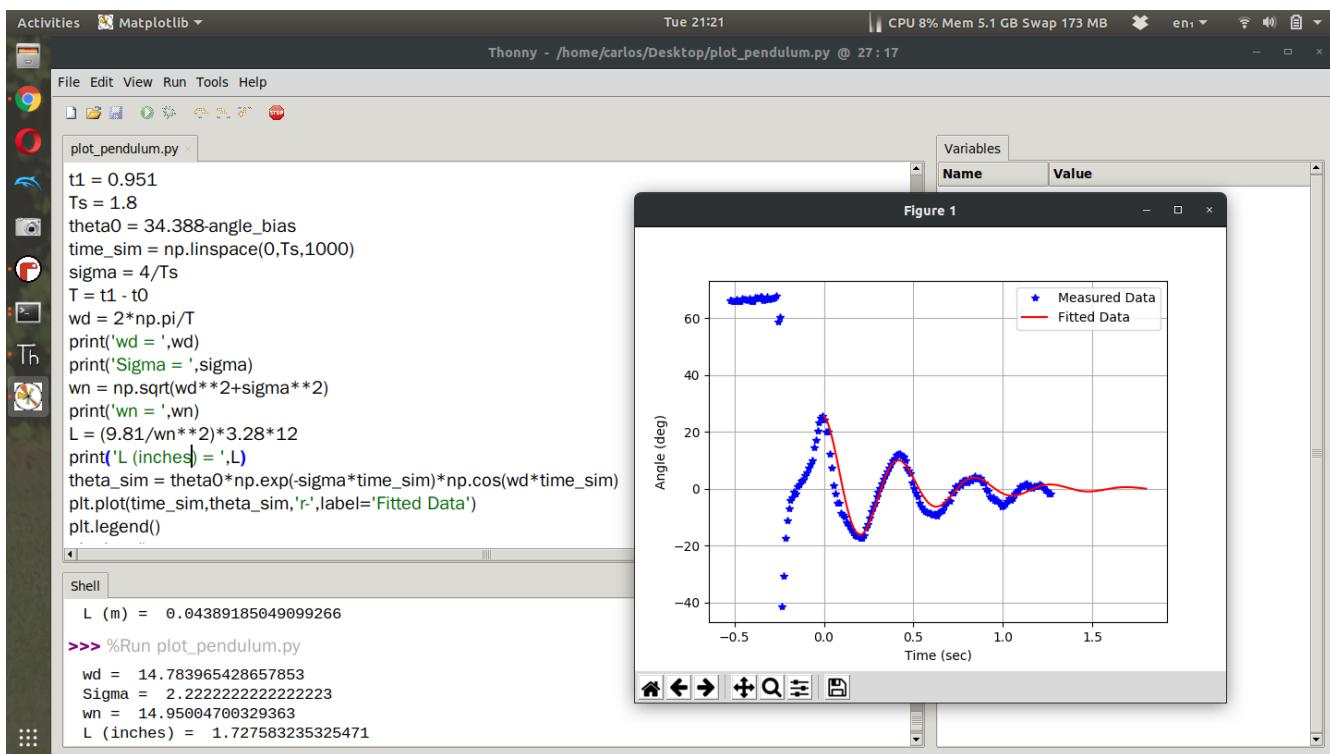


## 17.6 Aliasing

For the second part of this lab you need to vary the frequency somehow. In this case I changed the length of the pendulum which changed the natural frequency. I then proceeded to measure the angle as it oscillated at its natural frequency. I repeated this at sampling frequencies of 1, 10 and 100 Hz. The way I changed the sampling frequency was by changing the `time.sleep` value in the while True loop. The [accelerometer code](#) I used can be found on Github. After I finished the experiment I had 3 data files that I plotted on top of each other. This what I got with the longest string. It's easy to see in the photo that sampling at 1 Hz was way too slow to capture the natural oscillations of the water bottle. However, 100 Hz and even 10 Hz was plenty fast to sample the oscillations. According to the recorded data there was above 19 cycles in 9 seconds which is about 2 Hz. In this case, as long as we sample at 4 Hz the signal will be captured properly which is why 10 Hz and 100 Hz is able to capture the signal correctly.

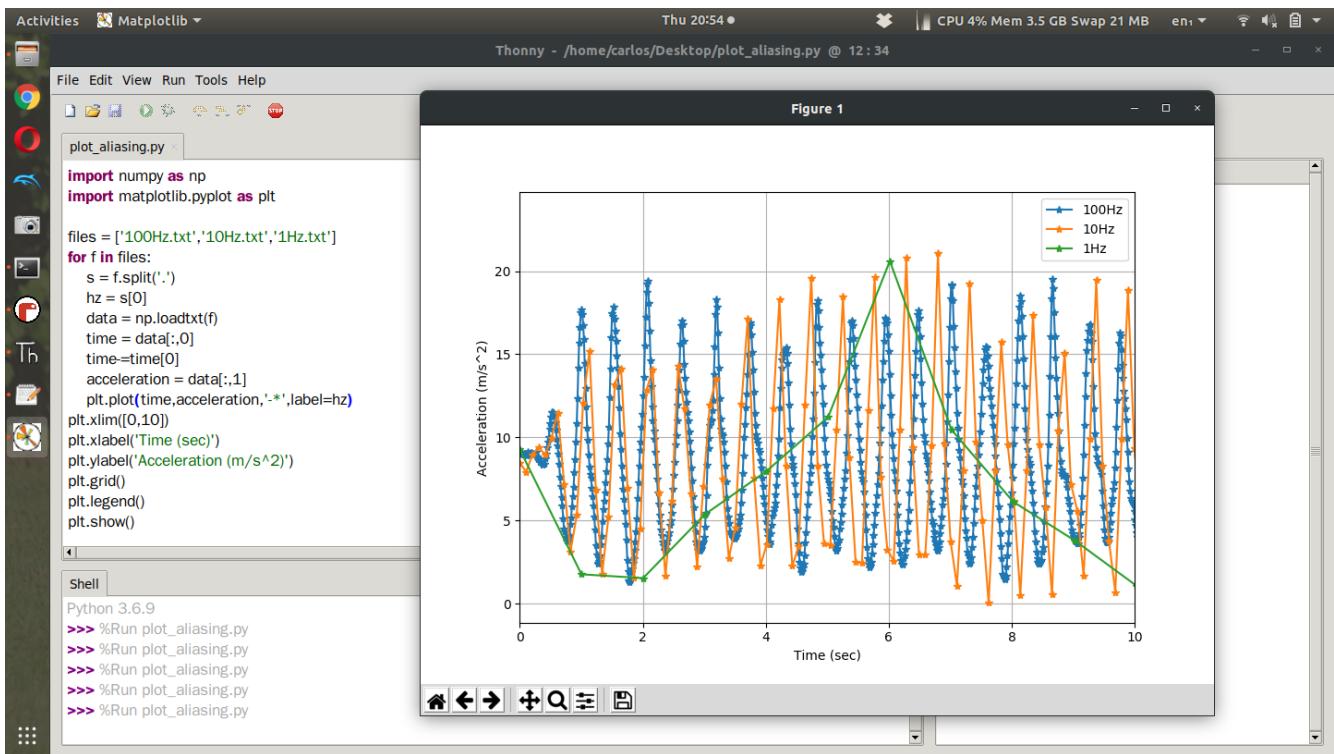

Once you sample your waveform at 3 different sampling rates I want you to change something about your setup. For example, you can drive slower or faster over the speedbump, you can change the length of your pendulum or the length of your ruler that you're vibrating. I elected to shrink the length of the pendulum. This raised the natural frequency of the system by enough to change the results as shown in the figure below.

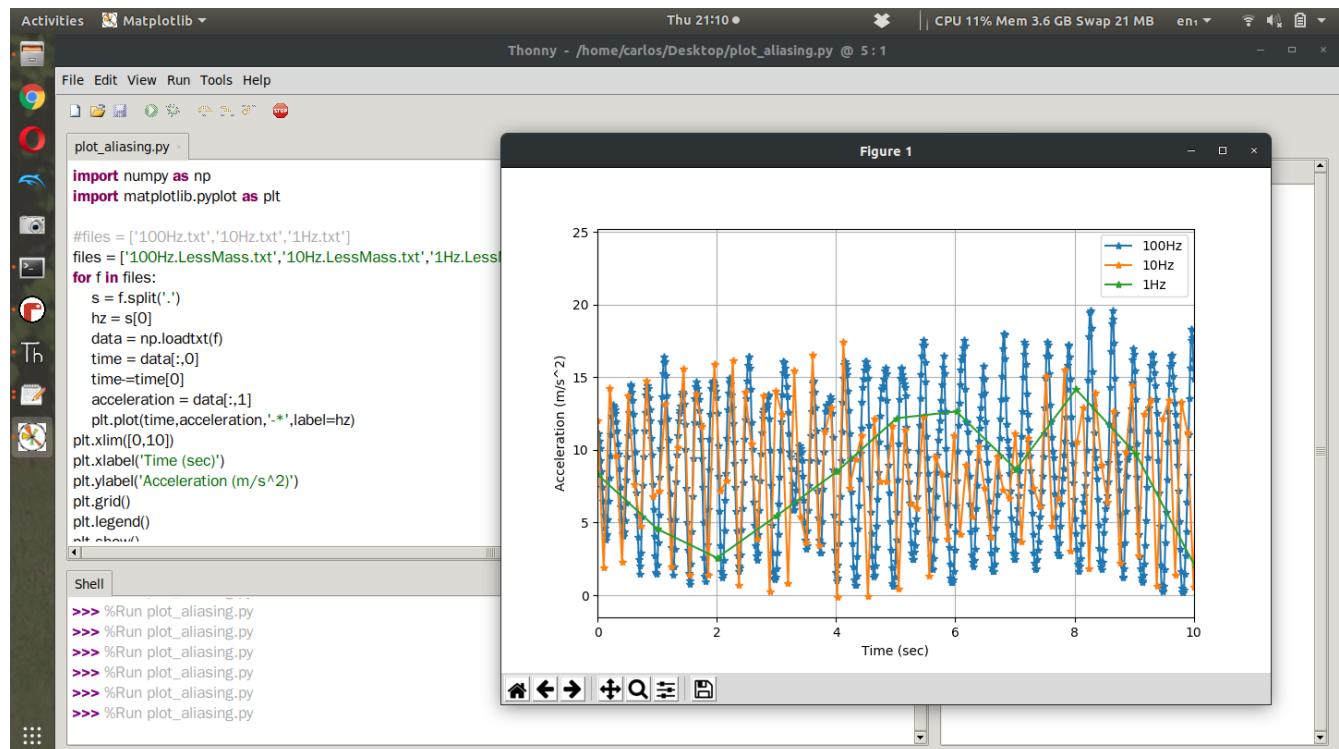

In this case you can see that there were 33 cycles in 10 seconds which is 3.3 Hz. The Nyquist criteria states that

I need to sample at 6.6 Hz. The Nyquist criteria is very specific though in that if you sample at twice the frequency, you will just obtain the correct frequency. This does not mean that you will capture every data point properly. Hence in the chart above, the blue line at 100 Hz is perfect, the green line at 1 Hz is too slow (less than 6.6 Hz) and the orange line at 10 Hz captures the frequency correctly but between 5 and 8 seconds does not adequately capture the waveform.

## 17.7 Assignment

Once you've completed the project above, upload a PDF with all of the photos and text below included. My recommendation is for you to create a Word document and insert all the photos and text into the document. Then export the Word document to a PDF. For videos I suggest uploading the videos to Google Drive, turn on link sharing and include a link in your PDF. Note that all code must be included in the appendix or you'll be penalized 10%.

1. Include a video of you explaining your experiment. What state are you measuring? What is varying? Show the system varying and explain the code you are using to capture the data. Use the Plotter in Mu to show the system varying. (Make sure you introduce yourself in the video and that you show your face at some point) Explain what you changed about the system to change the natural frequency. I changed the length of my pendulum which changed the natural frequency. What did you change? - 20%
2. Take data at 3 different frequencies and two different configurations (a total of 6 data sets). Include two plots as I did above with appropriate labels and legends - 20%
3. Explain the results of your experiment in 1 or 2 paragraphs. Did you encounter any aliasing? Did the amount of aliasing change when you changed the parameters of your system? Why or why not? - 20%
4. Plot your measured data in Python for your lowest frequency and highest sampling rate and attach a well formatted figure. Include a plot of your fitted data alongside your measured data. Do they match? Why or why not? Write a paragraph explaining your result - 20%
5. Estimate your damping constant, damped natural frequency, damping ratio, and natural frequency. State these values explicitly in the submission Given the frequency you computed, comment on the frequency you would need to completely avoid aliasing and if the CPX is capable of doing that. - 20%